

VisSimTM

User's Guide

Version 4.5



Visual Solutions
INCORPORATED

Visual Solutions, Inc.

VisSim User's Guide - Version 4.5

Copyright

© 2000 Visual Solutions, Inc.
All rights reserved.
vug-45-01

Visual Solutions, Inc.
487 Groton Road
Westford, MA 01886

Trademarks

VisSim and flexWires are trademarks of Visual Solutions. IBM, Personal System/2, and PC AT are registered trademarks of International Business Corp. MATLAB is a registered trademark of The MathWorks, Inc. Mathcad is a registered trademark of Mathsoft Corp. Microsoft, MS, MS/DOS, Excel, Windows, Windows 95, and Windows NT are registered trademarks of Microsoft Corp. NeuroWindow is a trademark of Ward Systems Group, Inc. Other products mentioned in this manual are trademarks or registered trademarks of their respective manufacturers.

Copy and use restrictions

The information in this manual is subject to change without notice and does not represent a commitment by Visual Solutions. Visual Solutions does not assume responsibility for errors that may appear in this document.

No part of this manual may be reprinted or reproduced or utilized in any form or by any electronic, mechanical, or other means without permission in writing from Visual Solutions. The Software may not be copied or reproduced in any form, except as stated in the terms of the Software license agreement.

Introduction	XV
Chapter 1 VisSim Basics	1
Starting VisSim	1
Exploring the VisSim window	2
Choosing commands	4
Using dialog boxes	6
Creating and setting up a new block diagram	7
Opening an existing block diagram	10
Undoing an editing action	10
Repainting the screen	10
Saving a block diagram	11
The Save As commands	11
E-mailing a block diagram	11
Previewing before printing	12
Printing	12
Setting up the VisSim environment	14
Exiting VisSim	14
Chapter 2 Inserting, Setting Up, and Wiring Blocks	15
Block basics	15
Types of blocks	16
Identifying block parts	16
Inserting blocks	17
Setting up block properties and initial conditions	17
Entering numeric data	18
Entering arithmetic expressions	18
Entering C expressions	18
Controlling the number of displayed significant decimal digits	18
Identifying blocks by user-defined labels	19
Wiring basics	20
Types of wires	20
Wiring rules	21
Wiring blocks together	21

Automatically completing connections.....	22
Positioning wires.....	22
Coloring wires.....	22
Hiding wires.....	22
Deleting wires.....	23
Connector tab basics.....	23
Adding and removing connector tabs.....	23
Unconnected input connector tabs.....	24
Setting connection classes.....	24
Displaying connector tabs in a different view.....	25

Chapter 3 Arranging Blocks.....27

Selecting blocks.....	27
Area Selecting.....	28
Toggle selecting.....	28
Unselecting blocks.....	28
Moving and copying blocks.....	28
Rules for moving and copying blocks.....	29
Drag-and-drop editing.....	29
Copying, cutting, and pasting blocks.....	30
Copying blocks into other applications.....	31
Flipping blocks.....	31
Aligning blocks vertically and horizontally.....	31
Finding and replacing blocks.....	32
Finding blocks.....	32
Replacing blocks.....	33
Deleting blocks.....	34

Chapter 4 Setting Simulation Properties.....35

Setting up the simulation range.....	35
Using the Range property sheet.....	36
Setting up an integration method.....	37
Using the Integration Method property sheet.....	38
Setting up simulation preferences.....	40
Using the Preferences property sheet.....	41
Setting simulation defaults.....	43

Chapter 5 Simulating Block Diagrams..... 45

Simulation basics 45

- Continuous system simulation 46
- Discrete time system simulation 54
- Hybrid system simulation 56

Controlling a simulation..... 56

- The Control Panel 56
- Starting a simulation 57
- Stopping a simulation 57
- Continuing a simulation..... 57
- Single-stepping a simulation..... 58
- Resetting a simulation..... 58

More on controlling a simulation 58

- Dynamically modifying signal values..... 58
- Probing signal values 59
- Trimming a system..... 59
- Resetting error conditions 59
- Snapping and resetting system states 59

Troubleshooting 60

Chapter 6 Viewing Simulations..... 63

Plots..... 63

- Basic time domain plots..... 63
- Sizing a plot block 64
- Zooming..... 64
- Printing a plot block..... 65
- Changing plot properties..... 65

Strip charts 73

- Basic time domain strip chart..... 73
- Sizing a stripChart block..... 73
- Printing a stripChart block..... 73
- Changing stripChart properties 74

Histograms 79

- Sizing a histogram block..... 79
- Changing histogram properties 79

Bar and needle graphs 81

- Sizing a meter block..... 81
- Changing meter properties 82

Creating animation 83

- Animation basics..... 83
- Using the animate block..... 84

Using the lineDraw block	87
Other ways to create animation.....	88
Chapter 7 Solving Implicit Equations	89
Setting up an implicit equation.....	89
Solving an implicit equation	90
Using the Implicit Solver property sheet	91
Implicit equation examples	92
Simple nonlinear implicit equation.....	92
Advanced nonlinear implicit equation	92
Chapter 8 Performing Global Optimization	95
Global optimization basics	95
Cost functions with many local minimum values	95
Cost functions with no minimum values.....	96
Performing global optimization	96
Using the Optimization Properties dialog box	97
Global optimization examples.....	97
Optimized paper bag problem.....	97
Two segment approximation of $\sin(\pi t)$	99
Five segment approximation of $\sin(\pi t)$	100
Troubleshooting	102
Chapter 9 Designing Digital Filters	103
Digital filter basics	103
Filter operations	104
Time domain filters with tapped delay.....	104
Time domain filters with transfer functions	105
Frequency domain filter implementation	105
Comparison of FIR and IIR filters	106
Interactive filter design with the transferFunction block	106
IIR filter design	106
Using the IIR Filter Properties dialog box	107
FIR filter design	110
Discrete and continuous FIR filter design.....	110
Using the FIR Filter Properties dialog box	111

Chapter 10 Working with Other Applications 115

- Importing basics 115
 - Setting up the input file 116
 - Importing data 116
 - Using the Import Properties dialog box 117
- Exporting basics 118
 - Exporting data 118
 - Using the Export Properties dialog box 119
- VisSim-MatLab interface basics 121
 - Evaluating MatLab expressions 121
 - Reading and writing MatLab variables 122
- Transmitting data using ActiveX 125
 - Using the ActiveX read block 125
 - Using the ActiveX write block 127
 - VisSim-specific ActiveX functions 129
 - ActiveX example 129
- DDE basics 130
 - Creating an app-to-VisSim link with DDEreceive 131
 - Creating a VisSim-to-app link with DDEsend 133
 - Creating a two-way link with DDE 135
 - Creating DDE links with applications that do not support Copy Link and Paste Link 138
- Creating look-up tables 138
 - Specifying the data source 139
 - Using the Look-up Table Wizard 141
 - Using the map block 143
 - Examples 145
- Exchanging information with Mathcad 2000 151
 - Use of the inx and outx keywords 151
 - Embedding Mathcad documents 151
 - Editing and updating Mathcad documents 152
 - Scaling and cropping embedded Mathcad documents 153
 - Examining the properties of an embedded Mathcad document 154
 - Changing the number of connector tabs on an embedded Mathcad document 155
 - Troubleshooting 155
 - Examples 156
- WMF basics 159
 - Saving a diagram as a WMF file 159
 - Inserting a WMF file in another application 159

Chapter 11 Working with Large Diagrams 161

Creating model hierarchy 161

- Creating a compound block 162
- Drilling into a compound block 163
- Automatically configuring a compound block 163
- Triggering the execution of compound blocks 169
- Specifying a local time step 170
- Keeping track of the number of blocks in a compound block 170
- Hiding compound blocks 170
- Configuring pictures on compound blocks 171
- Labeling connector tabs on compound blocks 171
- Dissolving a compound block 172
- Other things you can do with compound blocks 173

Embedding blocks 173

- Setting up a diagram to be embedded 173
- Embedding a block diagram 173
- Editing an embedded block diagram 174
- Reconnecting an embedded block diagram 174

Adding block diagrams 174

Using variables to pass signals 175

- Creating variables 175
- Scoping variables 176
- Built-in variables 178

Using path aliases to reference files 178

- Types of path aliases 179
- Displaying conflicts between local and global path aliases 179
- Creating path aliases 179
- Specifying path aliases in blocks 181
- Creating nested path aliases 181

Maintaining an edit history 182

Protecting your work 183

- Protecting block diagrams 183
- Protecting compound blocks 185
- Protecting embed blocks 186

Chapter 12 Block Reference 189

* (multiply) 190

-X (negate) 191

/ (divide) 193

< (less than) 195

<= (less than or equal to) 196

== (equal to)	197
!= (not equal to)	200
> (greater than)	201
>= (greater than or equal to)	203
1/X (inverse)	204
abs	205
acos	207
ActiveX read	207
ActiveX write	207
and	208
animate	209
asin	209
atan2	210
bessel	211
bezel	213
buffer	214
button	216
case	218
comment	220
const	221
constraint	222
convert	222
cos	223
cosh	224
cost	224
crossDetect	224
date	227
DDE	228
DDEreceive	228
DDEsend	228
deadband	228
derivative	229
dialogConstant	229
display	230
dotProduct	231
embed	231
error	231
exp	232
export	232
expression	232
fft	235
gain	237
gaussian	239
globalConstraint	239

Contents

histogram	239
ifft	240
import	241
index	241
int	243
integrator (1/S)	243
invert	249
label	249
light	250
limit	252
limitedIntegrator (1/S)	253
lineDraw	256
log10	256
ln	257
map	257
MatLab Expression	258
MatLab Read Variable	258
MatLab Write Variable	258
max	258
merge	260
meter	261
min	261
multiply	263
neuralNet	264
not	264
OLEobject	265
or	270
parabola	271
parameterUnknown	271
plot	272
pow	272
PRBS	273
psd	274
pulseTrain	275
quantize	275
ramp	277
realTime	278
relay	278
resetIntegrator (1/S)	279
rt-DataIn	282
rt-DataOut	283
sampleHold	283
scalarToVec	285
sign	286

sin	287
sinh	288
sinusoid	288
slider	289
sqrt	290
stateSpace	290
step	292
stop	293
stripChart	293
summingJunction	293
tan	295
tanh	296
timeDelay	297
transferFunction	300
transpose	304
uniform	304
unitConversion	305
unitDelay	305
unknown	308
userFunction	308
variable	309
vecToScalar	309
vsum	309
wirePositioner	310
xor	310

Appendix A Customizing VisSim..... 313

Customizing VisSim start-up	313
Customizing the VisSim window	314
Customizing the toolbar	314
Customizing other screen settings.....	316
Creating custom implicit solvers.....	317
Source files for building a custom implicit solver	318
Using vissimRequest() in a custom implicit solver.....	318
Building a custom implicit solver	320
Using the constraint block with a custom implicit solver	320
Creating custom global optimizers.....	320
Source files for building a custom global optimizer	321
Using vissimRequest() in a custom global optimizer.....	321
Building a custom global optimizer	323

Appendix B Extending the Block Set 325

Before you begin.....	325
The big picture	325
Criteria for writing DLLs.....	326
Building a DLL.....	327
How VisSim talks to a DLL.....	327
Calling conventions	328
Simulation level functions	328
Block level functions	329
Exported functions.....	334
Debugging hints	337
Using the DLL wizard.....	337
Editing the VSI.CPP file.....	342
Editing Connector Tab Labels	342
Accessing a custom block from VisSim.....	343
Adding a custom block to a VisSim menu.....	343
Binding a DLL to a userFunction block	344

Appendix C Toolbox and Components Libraries 345

Toolboxes.....	345
Controls toolbox library	345
Electro-mechanical toolbox library	346
Padé toolbox library	346
Signal generation toolbox library	347
Tools toolbox library	347
Components.....	348
DSP library	348
Dynamical system library	348
Electro-mechanical library	348
Electrical library	348
Hydraulic libraries	349
\ACTUATOR library	349
\INCLUDE library.....	349
\MECHLOAD library.....	349
\MINORLOS library	349
\MISC library	349
\ORIFICE library.....	349
\PIPE library.....	349
\POWRLOSS library.....	350
\PUMPS library	350
\SPLTMERG library	350

\VALVES library	350
Process control library	351
Thermal control library	351
Turbine library	351
Appendix D Sample Block Diagrams	353
Aerospace block diagrams	354
Animation block diagrams	354
Biophysical block diagrams	354
Business block diagrams	354
Chemical engineering block diagrams	355
Control design block diagrams	356
Dynamical systems block diagrams	356
Electro-mechanical block diagrams	357
Environmental block diagrams	357
Fixed-point DSP block diagrams	357
Man-machine interface block diagrams	357
Motion control block diagrams	357
Optimization block diagrams	358
Power block diagrams	358
Process control block diagrams	358
Signal processing block diagrams	359
Logic diagrams and state machines	359
Appendix E Working with Bitmaps	361
Appendix F VisSim Viewer	369
Distributing VisSim Viewer and your block diagrams to end users	369
VisSim Viewer documentation	369
Installing and starting VisSim Viewer	370
VisSim Viewer End User License Agreement	371
VisSim Viewer Distribution Agreement	372
Index	373

Introduction

Welcome to VisSim 4.5, Visual Solutions latest release of its modeling and simulation software. A thumbnail description of each feature can be found on page [xviii](#).

The *VisSim User's Guide* contains a comprehensive description about using VisSim on the Windows 95, Windows 98, and Windows NT platforms. If you've purchased VisSim Personal Edition, please read "For VisSim Personal Edition users," at the bottom of this page for a list of specifics about your version of the software.

Registering your software

Before you begin using VisSim, please fill out the enclosed registration card and mail it to us. As a registered user, you will receive a free subscription to The flexWire, along with discount promotions and VisSim workshop schedules.

For VisSim Personal Edition users

If you purchased VisSim Personal Edition, the following limitations apply to your software:

- 100 blocks per diagram
- userFunction and embed blocks are unavailable for use

For Plus Option users

If you're using VisSim Personal Edition and purchased the Plus Option, you can use up to 500 blocks per diagram. If you'd like to purchase the Plus Option, contact the [Visual Solutions sales dept.](#)

Conventions used in this book

The following typographical conventions are used in this manual:

Convention	Where it's used
Shortcut key combinations	Shortcut key combinations are joined with the plus sign (+). For example, the command CTRL+C means to hold down the CTRL key while you press the C key.
Hot keys	Hot keys are the underlined keys in VisSim's menus, commands, and dialog boxes. To use a hot key, press ALT and then the key for the underlined character. For instance, to execute the File menu's Save command, hold down the ALT key while you press the F key, then release both keys and press the S key.
SMALL CAPS	To indicate the names of the keys on the keyboard.
ALL CAPS	To indicate directory names, file names, and acronyms.
Initial Caps	To indicate menu names, commands names, and dialog box options.

In addition, unless specifically stated otherwise, when you read "click the mouse..." or "click on..." it means click the left mouse button.

Getting help

To help you get the most out of VisSim, the following online information is available:

- **Online help.** The online help contains step-by-step instructions for using VisSim features.
- **Online release notes.** A file named README.TXT is installed in your main VisSim directory. This file contains last minute information and changes that were discovered after this manual went to print. For your convenience, you should read this file immediately and print a copy of it to keep with this manual.

You may also find it helpful to browse through the sample block diagrams included with VisSim. These diagrams, which are listed in [Appendix D, 'Sample Block Diagrams,'](#) demonstrate how VisSim is used to solve a broad spectrum of engineering and scientific problems.

Online help

VisSim's Help program provides online instructions for using VisSim.

► To open Help

- Do one of the following:

To	Do this
Access the top level of help	Select Help from the menu bar or press ALT+H.
Access help on the selected block	Click on the Help command button in the dialog box for the block.

► To close Help

- In the Help window, choose **File > Exit**, or press ALT+F4.

Technical support

When you need assistance with a Visual Solutions product, first look in the manual, read the README.TXT file, and consult the online Help program. If you cannot find the answer, contact the Technical Support group via toll call between 9:00 am and 6:00 pm Eastern Standard Time, Monday through Friday, excluding holidays. The phone number is **978-392-0100**.

When you call in, please have the following information at hand:

- The version of VisSim and the version of the software operating environment that you're using
- All screen messages
- What you were doing when the problem happened
- How you tried to solve the problem

Visual Solutions also has the following fax and email addresses:

Address/Number	What it's for
978-692-3102	Fax number
bugs@vissol.com	Bug report
doc@vissol.com	Documentation errors and suggestions
sales@vissol.com	Sales, pricing, and general information
tech@vissol.com	Technical support

What's new in VisSim 4.5

Feature	Function
Mathcad OLE interface	Embed Mathcad data in VisSim using OLE.
Embedded objects	Embed numerous file types in a VisSim diagram using OLE.
Enhanced convert block	Allow scaled integer input.
Enhanced multi-rate simulation	Set local time step for compound blocks.
Addition of 32-bit float mode	Simulate filters and transfer functions at reduced precision.
Increase simulation speed	Eliminate constant expressions from execution graph.

References to other books

For information on	Refer to
Block diagram modeling and simulation	Karayanakis, Nicholas M., <i>Computer-Assisted Simulation of Dynamic Systems with Block Diagram Languages</i> . CRC Press, 1993.
Scientific computing	Abramowitz, M.; Stegun, I. A. <i>Handbook of Mathematical Functions</i> , Applied Mathematics Series, vol. 55, Washington: National Bureau of Standards; reprinted Dover Publications, New York, 1968. D'Azzo, John J.; Houpis, Constantine H. <i>Linear Control System Analysis & Design - Conventional and Modern</i> . McGraw-Hill Book Company, 1988. Fitzgerald, A. E.; Kingsley, Charles Jr.; Umans, Stephen D. <i>Electric Machinery</i> . McGraw-Hill Book Company, 1983. Flannery, B. P.; Press, W. H.; S. A.; Vetterling, W. T. <i>Numerical Recipes, The Art of Scientific Computing</i> . Cambridge University Press, 1989. Franklin, Gene F.; Powell, David J. <i>Digital Control of Dynamic Systems</i> . Addison-Wesley Publishing Company, 1980. Gear, C. W. <i>Numerical Initial Value Problems in Ordinary Differential Equations</i> . Prentice-Hall, 1971. Stoer, J.; Bulirsh, R. <i>Introduction to Numerical Analysis</i> . New York: Springer-Verlag, 1980.
Computer Programming	Darnell, Peter A.; Margolis, Philip E. <i>C: A Software Engineering Approach</i> . Springer-Verlag, 1990.

VisSim Basics

This chapter covers the following information:

- Starting VisSim
- Exploring the VisSim window
- Choosing commands and using dialog boxes
- Creating block diagrams
- Opening block diagrams
- Undoing an editing action
- Repainting the screen
- Saving block diagrams
- E-mailing block diagrams
- Previewing and printing block diagrams
- Setting up VisSim
- Quitting VisSim


Starting VisSim

The procedure describes the start-up methods for Professional VisSim and VisSim Personal Edition. You can customize the start-up procedure by editing the VisSim command line, as described on page [313](#).

1. Click on Start > Programs > Professional VisSim 4.5.
2. Double-click on the Professional VisSim 4.5 icon.

Exploring the VisSim window

When you start VisSim, a new, empty block diagram, like the one shown below, is automatically created for you.

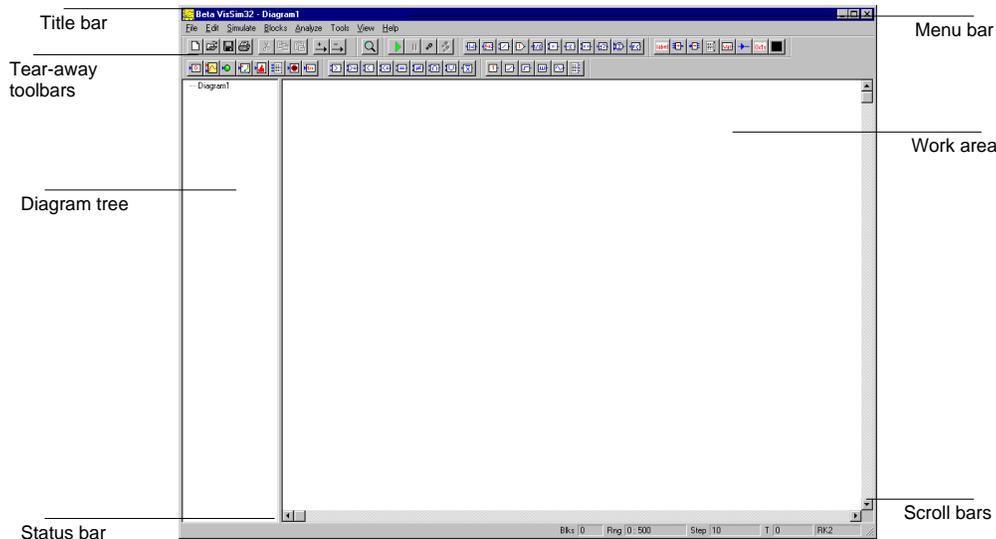

Title bar: Lists the application name and currently opened block diagram. Unnamed diagrams are titled *Diagram1*. The title bar also contains the Minimize, Maximize, and Close buttons. The Minimize button shrinks the VisSim window to an icon; the Maximize button enlarges the VisSim window to fill your entire screen; and the Close button closes the VisSim window.

Menu bar: Lists the seven basic menus available in VisSim: File, Edit, Simulate, Blocks, Tools, View, and Help. If you have installed a VisSim add-on, for example VisSim/Analyze, additional menus may appear on the menu bar. Clicking on a menu name displays a list of VisSim commands or blocks.


Tear-away toolbars: The buttons in the toolbars represent commonly used VisSim commands and blocks. To select a toolbar button, click on it.

Each cluster of buttons represents a tear-away toolbar. For example, the Main toolbar consists of the following buttons:



There are eight tear-away toolbars: Main, Sim Control, Annotation Blocks, Arithmetic Blocks, Boolean Blocks, Consumer Blocks, Producer Blocks, and User.

By default, the Main and Sim Control toolbars appear when you start up VisSim. These toolbar buttons are described below.

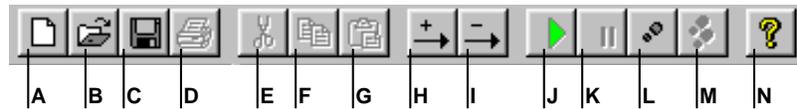

- | | |
|-------------------------------|--|
| A File > New command | H Edit > Add Connector command |
| B File > Open command | I Edit > Remove Connector command |
| C File > Save command | J Simulate > Go command |
| D File > Print command | K Simulate > Stop command |
| E Edit > Cut command | L Simulate > Single Step command |
| F Edit > Copy command | M Simulate > Continue command |
| G Edit > Paste command | N Help command |

As their names imply, the Annotation, Arithmetic, Boolean, Consumer, Producer Blocks, and User toolbars represent blocks in each of the corresponding categories. For descriptions of these blocks, see [Chapter 12, “Block Reference.”](#) The User toolbar allows you to create your own toolbar buttons. For more information, see [page 314](#).

If a toolbar restricts your view of your work, drag on its background to move it to a new location, or click on its background to display a menu from which to close it. You can also use the View > Toolbar command to close toolbars. For more information, see [page 314](#).

Dimmed toolbar buttons

Sometimes, when a toolbar button is dimmed, it is because the last cursor position was in the left windowpane. Click the mouse anywhere in the right windowpane to activate all available toolbar buttons.

Status bar: Provides simulation information about the current diagram, including the block count, simulation range, integration algorithm, step size, and implicit solver. When you run a simulation, the elapsed simulation time is also displayed.

Displaying menu command and toolbar descriptions in status bar

When you drag the mouse over a menu, menu command, or toolbar button, VisSim displays a brief description of the item in the status bar.

You can show or hide the status bar at any time using the View > Status Bar command.

Scroll bars: Pans the current viewing window. There are three ways to pan with the scroll bars. Click on the scroll arrows to scroll in small increments; click on the scroll bar to scroll in screen increments; or drag the scroll box to a location on the scroll bar that approximates a location in the block diagram.

You can show or hide the scroll bars at any time using the Edit > Preferences command, as described on page [314](#).

Auto-panning

Whenever you drag a block or draw a wire beyond the visible portion of the working area, VisSim will automatically scroll the work area.

Diagram tree: The VisSim window is divided into two panes. The left pane displays a *diagram tree*; that is, an outline of the diagram's compound blocks. At the top of the diagram tree is the Block Diagram icon, which represents the highest level of the currently opened block diagram. Its name appears next to the icon.

Beneath Block Diagram are the names of the compound blocks encapsulated in the block diagram. You can expand and collapse the diagram tree to display more or less detail by clicking on the plus or minus signs that appear next to the diagram and compound block names.


Whatever you select in the diagram tree is displayed in the right windowpane. For example, if you select Block Diagram, the top level of the block diagram is displayed in the right windowpane. You can jump to a specific compound block without wading through block diagram hierarchy by simply selecting the compound block name in the diagram tree.

If the diagram tree takes up too much space or if you cannot see all the hierarchical information in the tree, you can change its width by dragging its right edge.

Choosing commands

You can choose menu commands using the mouse or the keyboard. To choose a menu command with the mouse, click on the menu, and then click on the command. To choose a menu command with the keyboard, press ALT to activate the menu bar,

then press the key corresponding to the underlined letter in the menu, and finally press the key corresponding to the underlined letter in the command.

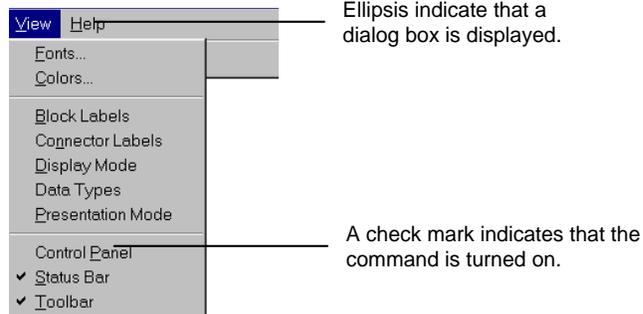

For commonly used menu commands, you can either:

- Press shortcut keys, which are listed on the menu to the right of the commands. For example, press CTRL+C to execute Edit > Copy.
- Press a corresponding toolbar button. For example, press  to execute Simulate > Go.


If a menu command is dimmed, it is unavailable for use.

Missing dialog boxes

If you choose a command with an ellipsis (for example, the File > Print command) and the dialog box for the command is not displayed, click the mouse anywhere in the right window pane and re-select the command.

Using dialog boxes

VisSim uses dialog boxes to gather and display information about a command or block.

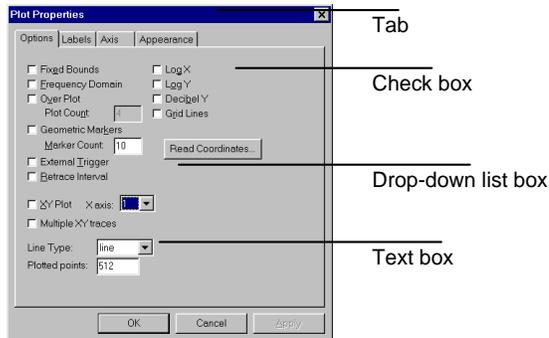


Tab: Allows similar options to be grouped together. When you click on a tab, a corresponding property sheet is brought to the front.

Check box: Sets or clears a particular option. When a ✓ appears in the box, the option is activated.

Drop-down list box: Provides a list of several options. Click on the DOWN ARROW to select from a list of options.


Text box: Allows you to enter text strings. Move the pointer over a text box until it changes into an I-beam; then type in the text.

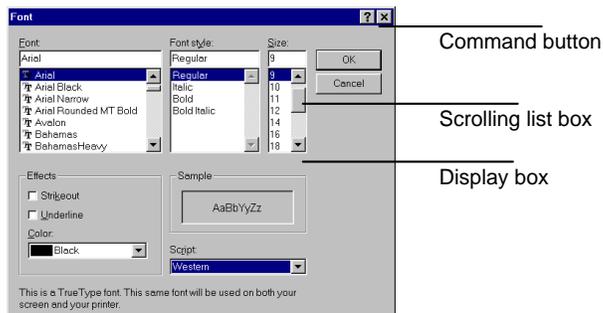

Command button: Causes an action to happen. Command buttons with ellipsis invoke another dialog box. Command buttons with a darkened rim are the default action. You can press the ENTER key to execute the default command button.

Scrolling list: Allows you to select from a list. Click on the scroll bar, scroll box, or scroll arrows to scroll through the list.

Display box: Provides a visual representation of your selection.

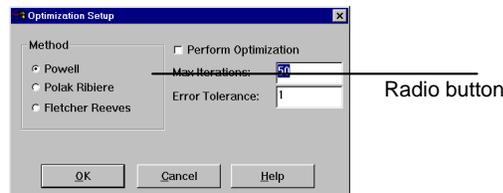


Radio button: Used to present two or more mutually exclusive options. You must pick one of the choices by clicking on it. When a black dot appears in the radio button, it is selected.

Creating and setting up a new block diagram

To open a new diagram, choose the File > New command, or click on  in the toolbar. If you're working on a different diagram and haven't yet saved your changes, VisSim prompts you to save them, then creates a new diagram. VisSim temporarily names the diagram *Diagram1*. The first time you attempt to save it, VisSim asks for a new name.

When you begin working on a new diagram, you usually start by setting up the page with the File > Page Setup command. As you choose options in the Page Setup dialog box, a sample of your selections is displayed in the top right-hand corner of the dialog box.

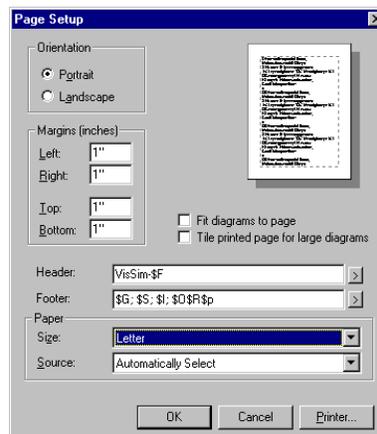

Orientation: You have the choice of Portrait or Landscape. Activate Portrait for a page that is taller than it is wide. If you want the opposite, activate Landscape.

Margins (Inches): The margins control the distance between diagram elements (blocks and wires) and the edge of the paper. VisSim does not display margins unless you are in print preview mode. In this mode, they appear as blue, nonprinting lines. Headers and footers, if specified, appear inside the margins.

Paper: Click on the DOWN ARROW in the Size box and select a standard paper size from the list; then click on the DOWN ARROW in the Source box to select the paper source (that is, the tray the printer uses to print the diagram).

Fit Diagram to Page: When Fit Diagram to Page is activated, VisSim prints each level of the block diagram on a separate page. When necessary, VisSim reduces diagram text so the level will fit on a single page within the specified margins. Because VisSim prints each level individually with the minimal reduction possible, the levels of a multi-level diagram may be sized differently.

VisSim may not be able to print extremely large block diagrams when Fit Diagram to Page is activated. In these cases, VisSim gives you the opportunity to abort the print operation. If you choose to continue printing, VisSim prints as much of the diagram as will fit on the page.

Tile Printed Page for Large Diagrams: Tile Printed Page for Large Diagrams causes VisSim to print each level using as many pages as necessary to print it without resizing. The margin settings are honored for each page.

Header and Footer: You can create headers and footers by entering text in the Header or Footer box. To view headers and footers, you must be in print preview mode. Headers and footers appear within the established page margins on each printed page of the diagram.

Using fields to enter header and footer information

By using fields, you can automatically insert information into a header or footer. For example, you can use fields to insert the file name of a diagram, the date the diagram was created, and so on.

To enter a field, click on the DOWN ARROW in the Header or Footer box and select one or more fields from the list. When you select a field, it appears as a field code in the Header or Footer box.

Field	Field code
File name	\$f
File path	\$F
Block path	\$H
Date	\$D
Integration method	\$I
Optimization	\$O
Page number	\$p
Range	\$G
Step size	\$S
Left justify	\$L
Center	\$C
Right justify	\$R

Using File > Print for page setup

You can use the File > Print command to reset the orientation, paper size, paper source, tiling, and fit-to-page options.

Opening an existing block diagram

You can easily open any of the last 12 block diagrams you worked on. When you click on the File menu, VisSim displays their names at the bottom of the menu.

To open any block diagram, choose the File > Open command. If another diagram is currently opened and contains unsaved changes, VisSim asks you if you want them saved before it closes the diagram and displays the File Open dialog box.

When you assign a title to a block diagram using the Diagram Information command, the title appears in the File Open dialog box when you select the block diagram.

► To open a block diagram

1. Do one of the following:
 - From the toolbar, choose .
 - Choose File > Open.
2. In the File Name box, type or select the name of the block diagram you want to open. If you do not see the block diagram you want, select a new drive or directory.
3. To open the block diagram for viewing only, activate the Read Only parameter. Although you can edit the block diagram, you must save the diagram under a new name to retain your edits.
4. Click on the OK button, or press ENTER.

Undoing an editing action

If you make a change to a block diagram then decide against the change, use the Edit > Undo command to erase it. If the Undo command is dimmed, the effect of the command cannot be undone.

Repainting the screen

Choosing Repaint Screen under the Edit menu redraws blocks and wires, and clears the screen of remnants left over from earlier VisSim manipulations.

Saving a block diagram

When you open a block diagram, VisSim reads the diagram into your computer's memory. As you work on the diagram, the changes you make are temporary. To make the changes permanent, you must save them to disk.

Retaining diagram appearance on different graphic resolutions

If you activate Snap To Grid under Preferences in the dialog box for the Edit > Preferences command, VisSim saves block positions in units of ½ the average character size of the currently selected font. This results in a more consistent appearance of the block diagram over different graphic resolutions.

► To save an existing block diagram

- Do one of the following:
 - From the toolbar, choose .
 - Choose File > Save.

The Save As commands

You can use File > Save As to save the block diagram under a new name or to a different directory or device. This command comes in handy when you want to alter the current diagram but keep its original version.


You can use the File > Save As Metafile command to save a block diagram in Windows Metafile Format (WMF). You use this command to insert a picture of your diagram in another application, such as a Word document. For more information, see page [159](#).

E-mailing a block diagram

You can route diagrams online by using any 32-bit e-mail program that is compatible with the Messaging Application Programming Interface (MAPI). If your e-mail program is compatible with MAPI, the Send command appears when you point to the File menu.

To send a diagram block

1. Open the diagram you want to send.
2. Choose the File > Send command.

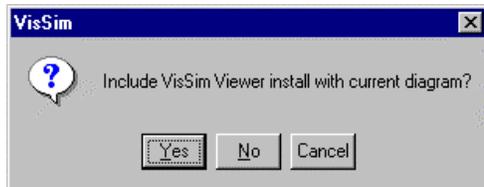

3. The following message appears:
To include the Viewer in your e-mail, click on Yes, or press the ENTER key.
4. Your default e-mail program starts up. The current e-mail message includes a copy of the opened block diagram.
5. Address the e-mail to the desired recipients and send.

Previewing before printing

Use the File > Print Preview command to display a block diagram as it will look when printed. Headers and footers, if specified, appear at the top and bottom of the pages according to the specifications established with the File > Page Setup command. Similarly, margins, if specified with File > Page Setup, are displayed in nonprinting, blue ink.

You can zoom in and out of the page using the Zoom buttons in the Print Preview toolbar.

Printing

The File > Print command lets you choose a printer and select printing options, such as the number of copies, the layers to be printed, and so on.

► To print a block diagram

- Do one of the following:
 - From the toolbar, choose .
 - Choose File > Print.

► To set printing options

1. Do one of the following:
 - From the toolbar, choose .
 - Choose File > Print.

2. Do one or more of the following:

To print	Do this
Multiple copies	In the Copies box, enter a number.
The current level of the diagram	Under Print Range, activate Current Level.
The current level and below	Under Print Range, activate Current Level and Below.
All levels of the diagram	Under Print Range, activate All.
Each level of the block diagram on a separate page, and when necessary, reduce diagram text so the level fits on a single page	<p>Activate Fit to Page. Because VisSim prints each level with the minimal reduction possible, the levels of a multi-level diagram may be sized differently.</p> <p>VisSim may not be able to print extremely large block diagrams when Fit to Page is activated. In these cases, VisSim gives you the opportunity to abort the print operation. If you choose to continue printing, VisSim prints as much of the diagram as will fit on the page.</p>
Each level using as many pages as necessary to print it without resizing	Activate Tile Pages. The margin settings are honored for each page.
A version of the block diagram to a file to be printed at a later date or to be used in another program	Activate Print to File and then click on the OK button, or press ENTER. In the ensuing dialog box, specify a name for the block diagram you want to print.

Selecting a printer: The currently selected printer appears in the Printer box when you choose the File > Print command. To select a different printer, choose the Setup command button. If the printer you want to use is not listed, you must install the printer driver software on your system via the system Control Panel. See the *Microsoft Windows User's Guide* for printer installation instructions.

Selecting additional printing options: You can also specify a paper size, orientation, and paper source for the printed diagram by clicking on the Setup command button. The selections you make here override selections you made previously with the File > Page Setup command.

Setting up the VisSim environment

You can customize VisSim to suit the way you work. You can, for example, use commands in the View menu to change the color of the work area, plotting area, and wires, specify diagram fonts, and switch between presentation modes. Other preferences are set with the Edit > Preferences command. These include coloring compound blocks, alternating between black and white, and color displays, and using training mode.

For more information on setting up the VisSim environment, see page [316](#).

Exiting VisSim

When you're finished working and decide to exit VisSim, use the File > Exit command, or press ALT+F4 to end your VisSim session. VisSim checks that all your work has been saved. If there are any unsaved changes, VisSim asks if you want them saved before exiting.

Inserting, Setting Up, and Wiring Blocks

This chapter covers the following information:

- Inserting blocks
- Setting up block properties and initial conditions
- Wiring blocks
- Positioning, hiding, deleting, and coloring wires
- Manipulating connector tabs

Block basics

In VisSim, you build system models in the form of block diagrams. Blocks are your basic design component. Each block represents a specific mathematical function. The function can be as simple as a sin function or as complex as a 15th order transfer function.

Types of blocks

VisSim offers over 90 blocks for linear, nonlinear, continuous, discrete-time, time varying, and hybrid system design. Blocks are categorized under the Blocks menu as follows:

- Animation
- Annotation
- Arithmetic
- Boolean
- DDE
- Integration
- Linear Systems
- MatLab Interface
- Matrix Operations
- Nonlinear
- Optimization
- Random Generator
- Signal Consumer
- Signal Producer
- Time Delay
- Transcendental


In addition, VisSim supplies four special-purpose blocks: `embed`, `expression`, `OLEitem`, and `userFunction`.

Custom blocks

If your design requirements extend beyond the blocks supplied by VisSim, you can create custom blocks in C, C++, Fortran, or Pascal, as described in [Appendix B, “Extending the Block Set.”](#)

Identifying block parts

When you insert a block into a diagram, various symbols and text appear on it.

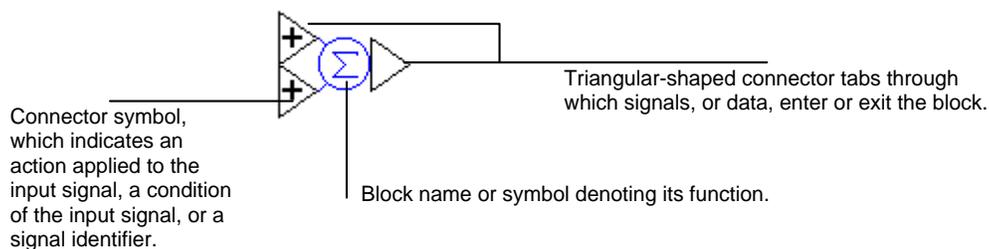

You can display additional information on the blocks in your diagram using the View > Block Labels command, as described on page 317.

Inserting blocks

You insert blocks into a diagram by selecting them from the Blocks menu and placing them in the work area. When you click on the Blocks menu, a list of blocks and block categories appears. Block categories are depicted by filled triangles (▶). When you click on a block category, a cascading menu appears listing the additional blocks.

▶ To insert a block from the Blocks menu

1. Choose Blocks from the menu bar.
2. Point to the block category and click the mouse. For example, point to Nonlinear and click the mouse to display the nonlinear blocks.
3. Point to a block and click the mouse. For example, point to `crossDetect` and click the mouse to choose the `crossDetect` block.

The Blocks menu closes and a rectangular box appears with the pointer anchored in the upper left-hand corner of the box.

4. Point to the location in the diagram where you want to insert the block and click the mouse.

Setting up block properties and initial conditions

Most blocks have user-settable properties associated with them that allow you to set simulation invariant parameters of the blocks' functions. You define and change property values for a block through its Properties dialog box. When you change a property while the simulation is running, VisSim immediately updates the simulation to reflect the change. Initial conditions, which are supplied to the system at the start of a simulation, are also set in the blocks via their Properties dialog boxes.

▶ To set up block properties

1. Choose Edit > Block Properties.
2. Point to the block whose parameters you want to define or change and click the mouse.
3. In the Properties dialog box, enter or select the new parameter values and options, and then choose the OK button, or press ENTER.

Shortcuts for accessing Properties dialog boxes

A shortcut for accessing Properties dialog boxes for most blocks is to click the right mouse button over the block. For `button`, `compound`, `DDE`, `DDEreceive`, `DDEsend`, `embed`, `label`, `userFunction`, and `variable` blocks, hold down the `CTRL` key while you click the right mouse button to access their Properties dialog boxes.

Entering numeric data

When entering numeric data, VisSim displays values greater than 10^6 or less than 10^{-6} in exponential notation. VisSim uses the letter “e” to indicate exponential notation; however, on input, it also recognizes the letter “E.” For example, you can enter 6,000,000 in the following ways: 6e6 or 6E6.

Entering arithmetic expressions

Most numeric block parameters can be expressed using the arithmetic operators “+,” “-,” “*,” “/” and the usual rules of precedence. For example:

$$2 * (5 + 4) = 18$$

$$2 * 5 + 4 = 14$$

Entering C expressions

VisSim also recognizes C expressions for numeric data. This means you can build elementary mathematical functions using `acos`, `asin`, `atan2`, `cos`, `cosh`, `exp`, `fabs`, `log`, `log10`, `pow`, `sin`, `sinh`, `sqrt`, `tan`, and `tanh`. For example, if you enter `pow(2,3)` to the Gain parameter on the `gain` block, VisSim calculates 8. VisSim also interprets the universal constant `pi` as π .


Learning C

If you are unfamiliar with the C language and want to learn how to enter mathematical functions in C format, see *C: A Software Engineering Approach*, (P. Darnell and P. Margolis, Springer-Verlag, 1990).

Controlling the number of displayed significant decimal digits

Numeric block properties are always calculated in up to 15 significant decimal digits; however, you have the choice of displaying them in up to 6 or 15 significant


decimal digits. The High Precision Display option under Preferences in the dialog box for the Edit > Preferences command controls the display.

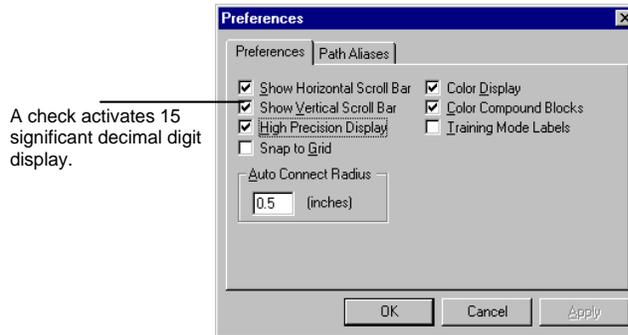

Identifying blocks by user-defined labels

For most blocks, a user-defined label can be attached to the block through its Properties dialog box. When View > Block Labels is activated, the labels you specified appear beneath the corresponding blocks. For example,

You create a label is created in the Properties dialog box for a block.

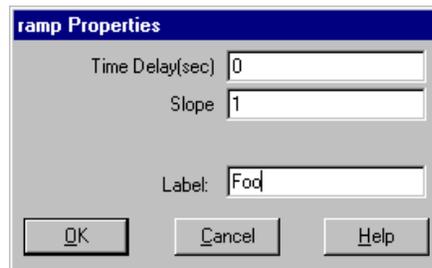

In the above dialog box, the label Foo is assigned to a ramp block. When you move the ramp block, the label automatically moves with the block.

When searching for a block with the Edit > Find command, you can use the block label as the search item.

► To label a block

1. Choose **E**dit > **B**lock Properties.
2. Click on the block to be labeled.

3. In the Label box, enter a label. A label cannot be longer than the length of the Label text box. If you need a longer label, use the `Label` block under the Annotation category of the Blocks menu.
4. Click on the OK button.
5. Activate the `View > Block Labels` command. A check mark in front of the command indicates that it is active.

Wiring basics

By wiring blocks together, VisSim is able to pass signals among blocks during a simulation. Signals are simply data. Input signals (x_n) represent data entering blocks; output signals (y_n) represent data exiting blocks.

Wireless transmission of signals

A `variable` block lets you name and transmit a signal throughout a block diagram without using wires. Typically, you use a `variable` block for system-wide variables or signals that would be laborious or visually messy to represent as wires. For more information, see page 175.

Types of wires

VisSim offers two types of wires:

- `flexWires`
- vector wires

A `flexWire` is a thin wire that allows a single signal to pass through it. A vector wire is a thick wire that contains multiple `flexWires`. Typically, you use vector wires when performing vector or matrix operations, or to reduce wiring clutter at top-level diagram design.

The table below lists the blocks that accept vector wires:

Block category	Block name
Annotation	<code>index</code> , <code>scalarToVec</code> , <code>variable</code> , <code>vecToScalar</code> , <code>wirePositioner</code>
Arithmetic	<code>1/X</code> , <code>-X</code> , <code>*</code> , <code>/</code> , <code>abs</code> , <code>convert</code> , <code>gain</code> , <code>power</code> , <code>sign</code> , <code>summingJunction</code> , <code>unitConversion</code>
MatLab Interface	<code>MatLab Expression</code> , <code>MatLab Read Variable</code> , <code>MatLab Write Variable</code>

Block category	Block name
Matrix Operations	buffer, dotProduct, fft, ifft, inverse, multiply, transpose, vsum
Nonlinear	case, merge
Signal Consumer	display

You can manually bundle and unbundle flexWires using the `scalarToVec` and `vecToScalar` blocks.

Wiring rules

You attach flexWires and vector wires to blocks through their connector tabs. Once you have attached a wire to a block, VisSim maintains the connection even as you move the block around the screen.

When you wire blocks, the following rules are in effect:

- Wires can only be drawn between an input and output connector tab pair. The triangular shape of the connector tab lets you easily distinguish inputs from outputs.
- Input connector tabs can only have one wire attached to them; output connector tabs can have any number of wires attached to them. To change the number of connector tabs on a block, follow the procedures on page 23.
- If you draw multiple wires between two blocks, VisSim automatically skews them.

Wiring blocks together

► To wire together blocks


1. Point to a connector tab on one of the blocks to be wired. The pointer becomes an .
2. Hold down the mouse button and drag the pointer over the connector tab on the destination block.

As you drag the pointer, VisSim generates a colored line, which represents the wire. Because VisSim draws lines vertically and horizontally, the path of the line may not mimic the path of the cursor.

3. Release the mouse button.

Automatically completing connections

You can control how close the pointer must be to a connector tab to automatically complete a connection with the Auto Connect Radius option under Preferences in the dialog box for the Edit > Preferences command.

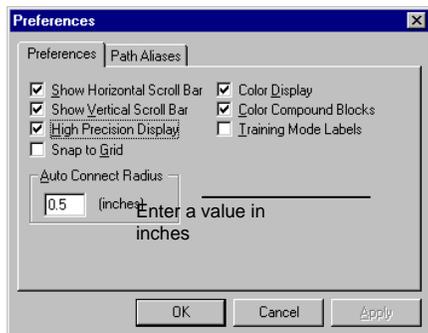

Positioning wires

Using `wirePositioner` blocks, you can perform a connect-the-dot method of wiring. That is, you insert `wirePositioner` blocks and then manually route the wire through them. Since you control the placement of the `wirePositioner` blocks, it's easy to draw a precise wiring path.

Additionally, because `wirePositioner` blocks do not take any additional computation time, you won't see a decrease in performance during a simulation.

Both `flexWires` and vector wires can be routed through `wirePositioner` blocks.

Coloring wires

By default, wires are drawn in black. You can, however, change the default color using the View > Colors command, as described on page 317.

You can also apply color to specific wires by assigning a connection class to the corresponding connector tabs. This wire coloring method is described on page 24.

Hiding wires

When you activate display mode with the View > Display Mode command, VisSim hides all wiring. Typically, you activate display mode when you want to display a control or instrumentation panel without the underlying connections, or when you want to view an animation.

Deleting wires

You delete a wire by detaching it from an input connector tab. Just point to the tab and hold down the mouse button as you drag the pointer away from the tab. When you release the mouse button, VisSim erases the wire.

Connector tab basics

All blocks that operate on signals have connector tabs. VisSim distinguishes between input and output connector tabs. Input connector tabs enable signals to enter a block; output connector tabs enable signals to exit a block. The triangular shape of the connector tab lets you easily see the direction in which the signals travel.

Some blocks have symbols on their connector tabs that indicate how the block acts on the data or the type of data the block is expecting. For example, the “-” on the `summingJunction` block means that the input is negated. See the descriptions of the individual blocks in [Chapter 12, “Block Reference,”](#) for connector tab symbol definitions.

Adding and removing connector tabs

You can add or delete connector tabs on most VisSim blocks. If you delete a connector tab with an attached wire, the wire is also deleted.

Connector tabs on compound blocks

Because additional connector tabs are unconnected in compound blocks, make sure you verify the input and output connections after you complete this procedure.

You can label connector tabs on compound blocks by using the View > Connector Labels command, as described on page [171](#).

► To change the number of connector tabs on a block

- Do one of the following:
 - From the toolbar, choose  or .
 - Choose Edit > Add Connector or Edit > Remove Connector.

2. Do one of the following:

To	Do this
Add a connector tab	Point to where you want the tab. The short black line indicates tab placement. Then click the mouse.
Delete a connector tab	Point to the tab to be deleted. The selected tab has a short black line over it. Then click the mouse.


3. Repeat step 2 for as many tabs that you want to add or delete.
4. Click the mouse on empty screen space to exit this command.

Unconnected input connector tabs

Except on * blocks, all unconnected inputs are fed zeros, by default. Unconnected inputs on * blocks are fed ones.

Setting connection classes

Connection classes provide an easy method of organizing your calculations by name and color. You assign connection classes through the Connector Properties dialog box. To access this dialog box, double-click the mouse over a connector tab.

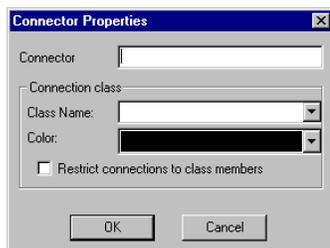

A class connection consists of a class name and corresponding color. The color is applied to the wire attached to the connector. For example, you can assign the class name PRESSURE to all connectors whose input and output signals relate to pressure calculations. All wires entering or exiting those connectors would then be displayed in the same color.

► To assign a class

1. Point to the connector tab to be classified. The pointer turns into an upward pointing arrow.
2. Double-click the mouse.

3. In the Class Name box, enter a name, or click on the DOWN ARROW to select an existing name.
4. In the Color box, click on the DOWN ARROW and select from the drop-down color list.
5. Click on the OK button, or press ENTER.

► **To change a class color**

Changing the color of all the connections in a particular class is simple to do in VisSim.

1. Point to a connector tab whose class color you want to change. The pointer turns into an upward pointing arrow.
2. Double-click the mouse.
3. In the Color box, click on the DOWN ARROW and select from the drop-down color list.
4. Click on the OK button, or press ENTER.

Restricting connections to class members

If you want to prevent wires from being drawn between connector tabs of different classes, activate the Restrict Connections to Class Members box in the Connector Properties dialog box.

Displaying connector tabs in a different view

The View menu's Presentation Mode, Display Mode, and Data Types commands have different affects on how connector tabs are presented. For information on these commands, see page [316](#).

Arranging Blocks

This chapter covers the following information:

- Selecting blocks
- Moving and copying blocks
- Flipping blocks
- Aligning blocks
- Finding and replacing blocks
- Deleting blocks

Selecting blocks

Once you have inserted a block into a block diagram, you will probably have to select the block in order to manipulate it. When you select a block, VisSim highlights it in black and outlines it in white.

When you select a compound block, all encapsulated blocks are implicitly selected.

► To select a block

1. Point to the block.
2. Hold down the `SHIFT` key and click the mouse.

Area Selecting

A quick way to select one or more blocks is to use area select, which lets you draw a bounding box around the blocks you want to select. If any part of a block is contained in the bounding box, it is automatically selected.

► To perform an area select

1. Point to one corner of the area you want to select.
2. To anchor the corner, hold down the mouse button.
3. Drag the pointer until the box encloses all the blocks you want selected.
4. Release the mouse button.

Toggle selecting

This action automatically selects all unselected blocks at the current level, and unselects all selected blocks at the current level.

► To toggle select blocks

1. Point to empty screen space.
2. Hold down the `SHIFT` key and click the mouse.

Unselecting blocks

You can easily cancel the selection of individual blocks.

► To unselect blocks

1. Point to the selected block.
2. Hold down the `SHIFT` key and click the mouse.

When blocks are unselected, they are returned to a normal video display.

Moving and copying blocks

Moving and copying blocks are common operations you'll perform in VisSim. Like many operations, there are several ways to move and copy blocks. For instance, you can move blocks by dragging and dropping them into place or you can cut them to the Windows Clipboard. From there, you can paste them back into your diagram or into another VisSim diagram. You can also paste them into other Windows-based applications.

Rules for moving and copying blocks

The following rules are in effect when you're moving and copying blocks:

- Moved and copied blocks retain the parameter values of the original blocks.
- Moved and copied blocks retain their internal wiring. This means that wires connecting blocks within the group of copied or cut blocks are retained.
- Moved and copied blocks lose their peripheral wiring. This means that wires connecting blocks in the group of blocks being copied or cut to other blocks are not retained.
- When moving or copying a compound block containing a global variable block with input, VisSim appends a number to the variable block name to keep it unique.

Drag-and-drop editing

An easy way to move or copy blocks within the current level of the diagram is with drag-and-drop editing. If you're moving or copying blocks to another level in the diagram, or to a different block diagram, you have to use the Edit menu's Cut, Copy, and Paste commands.

► To move a single block using drag-and-drop editing

1. Point to the block to be moved and hold down the mouse button.
2. Drag the block to the new location in the diagram.
3. Release the mouse button.

► To move a group of blocks using drag-and-drop editing

1. Select the blocks to be moved.
2. Point to one of the selected blocks and hold down the mouse button.
The selected blocks are replaced with an empty box.
3. Drag the box to the desired location in the diagram.
4. Release the mouse button.

► To copy a single block using drag-and-drop editing

1. Point to the block to be copied.
2. Press CTRL+SHIFT while you simultaneously click the mouse.

As you move the pointer away from the block, a box appears. The box shows where the copy will be placed.

3. Point to the location where you want the copy inserted and click the mouse.

If you want to copy a group of blocks, see the description below.

Copying, cutting, and pasting blocks

The Copy, Cut, and Paste commands use the Windows Clipboard to transfer blocks to another block diagram level or to a different block diagram. You can also use the Clipboard to paste blocks into other applications.

The Clipboard can only hold one selection of cut or copied blocks at a time. If you place a new selection in the Clipboard, it overwrites whatever was already there.

► To copy or move selected blocks within VisSim

1. Select the blocks.
2. To copy the blocks, do one of the following:
 - From the toolbar, choose .
 - Choose Edit > Copy.
 - Press CTRL+C.
3. To move the blocks, do one of the following:
 - From the toolbar, choose .
 - Choose Edit > Cut.
 - Press CTRL+X.

At this point, the blocks are in the Clipboard.

4. Move to where you want the Clipboard contents inserted. If the location is in a different block diagram, use the File > Open command to open the proper block diagram and do one of the following:
 - From the toolbar, choose .
 - Choose Edit > Paste.
 - Press CTRL+V.

A rectangular box appears.

5. Position the box where you want the Clipboard contents inserted.
6. Click the mouse.

If blocks and wires overlap as a result of this procedure, you can easily reposition them using drag-and-drop editing.

Copying blocks into other applications

You can use the Copy command to copy pictures of blocks into other Windows-based applications. Common Window elements (like title bars, control-menu boxes, scroll bars, and minimize and maximize boxes) are not copied when you use the Copy command.

Inserting copies of block diagrams in other application files

There are two other methods for inserting a copy of a block diagram in another application. You can use the File > Save As MetaFile command to save a block diagram file as a Windows metafile image. You can then insert the W.MF in an application file that recognizes this file format. For more information, see page 159.

You can alternatively press PRINT SCRN to copy a picture of the entire VisSim window into the Clipboard. From there, you can paste it into another Windows-based application using the application's paste command.

Flipping blocks

By allowing you to flip blocks 180°, VisSim can present a more logical representation of right-to-left signal flow. When you flip blocks, VisSim redraws all flexWires attached to the blocks.

► To flip a block

1. Select the blocks to be flipped.
2. Choose Edit > Flip Horizontal.
3. Click the mouse on empty screen space to unselect the blocks.

Aligning blocks vertically and horizontally

The Snap to Grid parameter under Preferences in the dialog box for the Edit > Preferences command forces blocks to stay on an invisible grid. When you create block diagrams where you want blocks to line up horizontally or vertically, or where you want them to be spaced equally, activate Snap to Grid. When you move a block with Snap to Grid active, the block is forced to the nearest grid point. Blocks that have been inserted into your block diagram before Snap to Grid is active are also affected by this parameter.


Finding and replacing blocks

Using the Edit menu's Find and Replace commands, you can search for certain types of blocks (for example, `ramp`, `stripChart`, and `const` blocks) or for certain occurrences of blocks with user-defined names, labels, and text strings.

Once you find the block you're looking for, you can make the appropriate changes to it. VisSim searches the entire block diagram for the search item, regardless of your current location in the diagram.

Finding blocks

When you choose the Find command, VisSim displays a dialog box you can use to specify the block, label, or text string you want to find. If you want to search for variables, you can also click on the DOWN ARROW next to the Find What box and select a variable name from the entries. All variable blocks in the diagram are listed in the drop-down list.

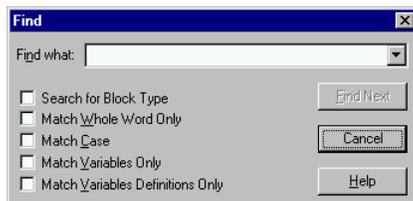

Once VisSim finds the search item, you can make a change in the diagram and then continue the search by choosing the Find Next button. The dialog box stays open so you can edit the diagram. To move the dialog box out of the way, drag on its title bar.

► To find a block

1. Choose **E**dit > **F**ind.
2. In the Find What box, enter the search item. If you're searching for a variable, you can also click on the DOWN ARROW next to the Find What box and select from the variables list.


3. Select any option you want to control the search.

To	Select
Find blocks of a specific type; for example, ramp blocks, animation blocks, or gain blocks.	Search for Block Type box and click on the DOWN ARROW to choose from the list of searchable blocks.
Find whole words and not parts of words.	Match Whole Word Only box.
Find item with same capitalization as the word in the Find What box.	Match Case box.
Find only variable block names.	Match Variables Only box.
Find only the defining instance of a variable; that is, the variable block with an input connection.	Match Variable Definitions Only box.

4. Choose the Find Next button. When VisSim finds a match, it highlights the block in black.
5. To cancel a search or close the dialog box, choose the Cancel button.

Replacing blocks

You use the Replace command to replace the names of the blocks you find. You specify entries in the Replace dialog box in the same way that you do in the Find dialog box.

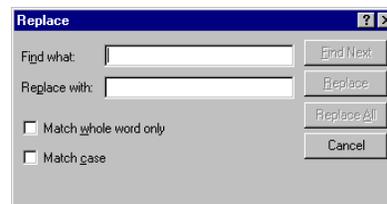

► To replace a block

1. Choose Edit > Replace.
2. In the Find What box, enter the search item.
3. In the Replace With box, enter the item to replace the search item.

4. Select any option you want to control the search.

To	Select
Find whole words and not parts of words.	Find Whole Word Only box.
Find item with same capitalization as the word in the Find What box.	Match Case box.

5. Choose the Find Next button. When VisSim finds a match, it highlights the block in black.
6. Do one of the following:

To	Select
Replace the block name and find the next occurrence.	The Replace button.
Change all occurrences without confirmation.	The Replace All button.
Leave the block name unchanged and find the next occurrence.	The Find Next button.

7. To cancel a search or close the dialog box, choose the Cancel button.

Deleting blocks

When your block diagram contains blocks you no longer need, you can delete them using the Edit > Clear command or the DEL key. When you delete blocks, all wires attached to the deleted blocks are also deleted.

► **To clear selected blocks**

1. Select the blocks to be cleared.
2. Choose Edit > Clear or press DEL.

Setting Simulation Properties

The following information is covered in this chapter:

- Simulation range
- Simulation step size
- Real-time simulations
- Automatic simulation restarts
- Integration algorithms
- Minimum step sizes, maximum truncation errors, and maximum iteration counts for adaptive integration algorithms
- Checkpointing
- Propagating integer types
- Selecting frequency units
- Generating random numbers
- Notification messages for end-of-simulation, incomplete wiring, nonintegral clock, nonintegral delay, and numeric overflow


Setting up the simulation range

Setting up the simulation range involves choosing the start and end of the simulation, specifying the step size of the integration algorithm, indicating whether VisSim runs in real-time mode, and indicating whether VisSim automatically restarts the simulation either with or without the last known system states.

► To access the Simulation Range options

1. Choose Simulate > Simulation Properties.
2. Click on the Range tab.

The Range sheet in the Simulation Properties dialog box appears.

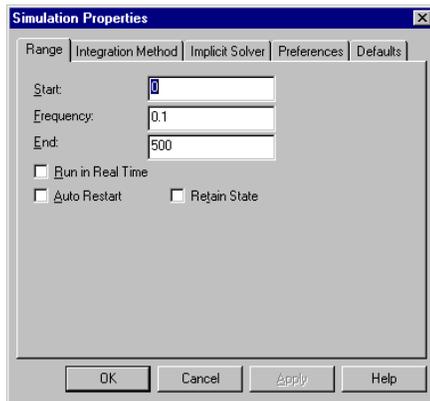

3. Choose the options you want, then click on the OK button, or press ENTER. (For more information on the options, see the descriptions below.)

Using the Range property sheet

The Range property sheet options are:

Auto Restart: For real-time control or training neural networks, where multiple data sets must be fed into VisSim repeatedly, you can activate Auto Restart. This parameter restarts and runs the simulation until one of the following conditions is met:

- The signal in the error or stop block goes to 1.
- You manually stop the simulation.

You can keep track of the number of the run by wiring a `$runCount` variable block into your diagram.

To retain the states of blocks each time VisSim automatically restarts a simulation, activate the Retain States parameter, as described below. Blocks that are time based (for example, Signal Producer blocks) are reset to their restart time. For a smooth transition between auto-restart simulation runs, you need to remove the Signal Producer blocks from your diagram. For instance, if your diagram contains a `sinusoid` block, replace it with an `integrator` block with its derivative set to the sinusoidal frequency and feed it to a `sin` block.

Retain States: For a smooth transition between simulation iterations, activate Retain State. When activated, VisSim retains the states of the `integrator`, `stateSpace`, `transferFunction`, and `unitDelay` blocks each time it restarts a simulation.

The Retain State parameter can only be activated when Auto Restart is already activated.

Run in Real Time: With Run in Real Time, VisSim simulates in real-time mode, which has the effect of retarding a simulation so that one simulation second equals one clocked second. This mode comes in handy when a system is exhibiting rapidly varying behavior. In real-time mode, the behavior can be slowed down and more easily analyzed.

Typically, you use real-time mode for hardware-in-the-loop control situations. For this, however, you also need the VisSim/Real-Time software and a PC D/A-A/D card. The VisSim/Real-Time driver lets you configure different analog and digital channels and insert them into a block diagram for reading and writing.

Start/End: Using Start and End, you can set independent variables that indicate when VisSim starts and stops a simulation, as well as when VisSim starts and stops logging data points in the Signal Consumer blocks wired into the block diagram.

You can also set defaults for the start and end, as described on page 43.

Step Size: The step size is the fundamental unit of integration. It indicates the interval at which the integration algorithm computes the integral of the input function and generates a data point in the Signal Consumer blocks wired into the block diagram. You specify the step size in the Step Size box. The default is 0.05.

For adaptive integration methods (adaptive Runge Kutta 5th order and adaptive Bulirsh-Stoer), you can also specify a minimum step size, as described on page 40.

You can also set:

- A default step size for the non-adaptive integration methods, as described on page 43.
- A local step size for specific subsystems, as described on page 170.


Setting up an integration method

Setting up the integration algorithm involves choosing the algorithm, and, if you choose an adaptive algorithm, specifying the minimum step size, error tolerance, and iteration count.

► To access the integration method options

1. Choose Simulate > Simulation Properties.
2. Click on the Integration Method tab.

The Integration Method sheet in the Simulation Properties dialog box appears.

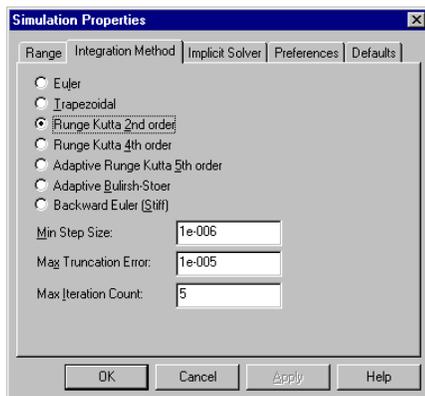


3. Choose the options you want, then click on the OK button, or press ENTER. (For more information on the options, see the descriptions below.)

Using the Integration Method property sheet

VisSim provides seven integration algorithms — Euler, trapezoidal, Runge Kutta 2nd order, Runge Kutta 4th order, adaptive Runge Kutta 5th order, adaptive Bulirsh-Stoer, and backward Euler (Stiff) — of varying numerical accuracy for the numerical integration of differential and difference equations.

Each algorithm provides a numerical approximation to continuous integration. The approximation is based on a trade-off between speed of execution and accuracy. Generally speaking, the more complex algorithms yield more stable and numerically correct results; however, they also take longer to run.

For example, the integration of the absolute value of a sinusoid signal with a frequency of 0.2 Hz is plotted below. The output of the `abs` block is a sequence of sinusoid positive half-cycles with a frequency of 0.4 Hz. Since the simulation range is from 0 to 5 seconds, the output of the `integrator` block is the estimate area under the curve of two positive half-cycles.

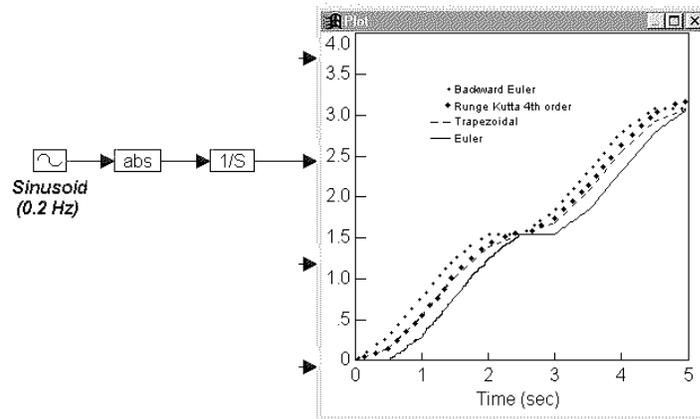

While the differences due to the integration algorithms are negligible for this example, more dramatic differences can be observed when comparing simulation methods in diagrams containing differential equations.

A good rule of thumb, then, is to use the least complicated algorithm that provides stable and correct results. To achieve this, start with the most complex integration algorithm and work backwards to simpler algorithms until you see a noticeable change in your results.

Setting a default integration algorithm

If you plan to use a particular integration algorithm a lot, you can set it as the default, as described on page 43.

The Integration Method property sheet options are:

Euler: Evaluates once per simulation time step. This method is least affected by singularities, and is fastest for moderate step sizes.

Trapezoidal: Evaluates twice per simulation time step.

Runge Kutta 2d order: Obtains second order accuracy. This method uses a midpoint step derivative to calculate the final integration value. Specify the length of the step in the Step Size box.

Runge Kutta 4th order: Obtains fourth order accuracy. This method evaluates the derivative four times at each time step: once at the initial point, twice at sample midpoints, and once at a sample endpoint. The final integration value is then derived based on these derivatives.

Adaptive Runge Kutta 5th order: Obtains fifth order accuracy. This algorithm automatically takes small step sizes through discontinuities in the input function and large strides through smooth functions.

Adaptive Bulirsh-Stoer: Uses rational polynomials to extrapolate a series of substeps to a final estimate. This algorithm is highly accurate for smooth functions.

Backward Euler (Stiff): Obtains efficiency for systems with high and low frequencies. The other algorithms would require small step sizes to maintain stability.

Min Step Size: The adaptive Runge Kutta 5th order and adaptive Bulirsh-Stoer integration algorithms exert more control over the accuracy of the solution by letting you specify a minimum step size. The step size is continually adjusted in order to meet the error tolerance and iteration count criteria; however, it is never reduced below the minimum step size. Thus, inaccurate results may be produced if the minimum step size is too large, the error tolerance is too large, or the iteration count is too small.

The default value for the minimum step size is 1e-006.

Max Truncation Error: When you choose an adaptive integration algorithm, you can specify the maximum error between the results of two successive adaptive iterations. VisSim uses the truncation error to determine the adaptive step size. The larger the error you're willing to tolerate, the larger the step size. The default value for the maximum truncation error is 1e-005.


Max Iteration Count: When you choose an adaptive integration algorithm, you can also specify the maximum number of times the integration algorithm will vary its time step attempting to meet the maximum truncation error criterion. The default value for the maximum iteration count is 5.

Setting up simulation preferences

► **To access the preferences options**

1. Choose Simulate > Simulation Properties.
2. Click on the Preferences tab.

The Preferences property sheet in the Simulation Properties dialog box appears.

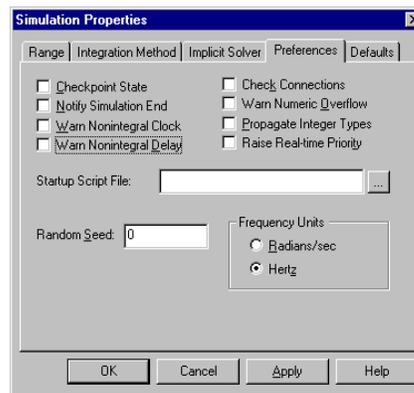

3. Choose the options you want, then click on the OK button, or press ENTER. (For more information on the options, see the descriptions below.)

Using the Preferences property sheet

The Preferences property sheet provides options for checking for unconnected blocks, checkpointing a simulation, selecting the frequency units, and more. The property sheet options are:

Check Connections: Warns you at the start of a simulation if the diagram contains unconnected blocks. Unconnected blocks are highlighted in red. A Warning dialog box identifies the unconnected input tab and provides two choices:

- **Abort or Retry** Finishes checking the diagram and then stops the simulation.
- **Ignore** Finishes checking the diagram and then completes the simulation.

Checkpoint State: Saves a temporary copy of your block diagram “as is” at the time you stopped the simulation. To do so, Checkpoint States must be activated before you begin the simulation.

If you activated Checkpoint States, VisSim saves the current values of all system parameters and block outputs, and elapsed simulation time when you stop the simulation. If you close the block diagram and then re-open it, you can continue the simulation from where you left off.

Checkpointing is useful for long simulations because it allows you to stop and save a simulation in the event that you must shut down your computer for a lengthy period of time.

Frequency Units: Sets the frequency units to either radians per second or hertz.

Notify Simulation End: Broadcasts an “End of Simulation” message to your computer when the simulation completes.

Propagate Integer Types: Uses C semantics to propagate integer data types. For example, if you add two integers, the result is an integer value.

Raise Real-Time Priority: Gives your process the higher priority to let you achieve reliable real-time sampling without interruptions from other processes running simultaneously. This option is for real-time control applications.

Random Seed: Generates numbers by a random process. The `gaussian` and `uniform` blocks are affected by this option. That is, the numbers exiting these blocks are derived from the value of Random Seed. You can use the `$randomSeed variable` to access the random seed.

Typically, you use Random Seed when input is required to be unpredictable. For example, when modeling the descent path of an airplane, it is impossible to predict the force or direction of the wind. Consequently, you represent it as a function of a random number.

The value of Random Seed ranges from 0 to 65,536. The default is 0.

Altering the sequence of generated random numbers

VisSim generates the sequence of random numbers for each simulation differently depending upon whether the Auto Restart parameter in the dialog box for the Simulate > Simulation Properties command is activated. When Auto Restart is on, VisSim generates a new sequence of random numbers for each simulation. Conversely, when it’s turned off, VisSim generates the same sequence of random numbers for each simulation. To change the sequence, you must explicitly enter a new Random Seed value at the start of the simulation.

Warn Nonintegral Clock: Warns you if a pulse is chosen that is not an integral multiple of the simulation step size. This option should always be activated; otherwise, a simulation that inaccurately represents the system you’re modeling may go undetected.

Warn Nonintegral Delay: Warns you if a delay is chosen that is not an integral multiple of the simulation step size. This option should always be activated; otherwise, a simulation that inaccurately represents the system you’re modeling may go undetected.

Warn Numeric Overflow: Warns you if a `convert` block causes data truncation resulting in the value losing precision.


Setting simulation defaults

For non-adaptive integration methods, you can specify the following default settings that are in effect whenever you create a new block diagram or start a new VisSim session: range, integration algorithm, fixed step size, and maximum number of plotted points.

► To set simulation defaults

1. Choose Simulate > Simulation Properties.
2. Click on the Defaults tab.

The Default property sheet in the Simulation Properties dialog box appears.

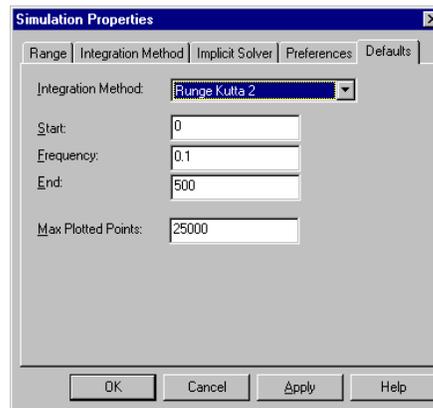

3. Make the selections you want to put into effect.
4. Click on the OK button, or press ENTER.

Simulating Block Diagrams

The following information is covered in this chapter:

- Types of system simulations
- Controlling a simulation with Simulate menu commands, toolbar buttons, and the Control Panel
- Dynamically modifying signal values
- Probing signal values
- Trimming a system
- Resetting error conditions
- Snapping system states
- Troubleshooting a simulation

Simulation basics

VisSim can simulate linear, nonlinear, continuous, and discrete systems. VisSim can also simulate systems containing both continuous and discrete transfer functions, as well as systems containing multi-rate sampling for discrete transfer functions.

When you initiate a simulation, VisSim first evaluates Signal Producer blocks, like `consts` and `ramps`, then sends the data to intermediate blocks that have both inputs and outputs, like `gains` and `summingJunctions`. Lastly, it sends data to Signal Consumer blocks that have only inputs, such as `plots` and `meters`.

VisSim simulates a system according to:

- Simulation parameters set in the dialog box for the Simulate > Simulation Properties command
- Initial conditions for the system set in the applicable blocks

If the status bar is turned on, VisSim displays current settings for the simulation range, step size, elapsed simulation time, integration algorithm, and implicit solver.

Continuous system simulation

Because integration is a more numerically stable operation than differentiation, you need to transform your ordinary differential equations into ones that use integration operators.

To enter an ordinary differential equation in VisSim, first algebraically solve the equation for the highest derivative. Then, in VisSim, insert the number of `integrator` blocks that equals the order of the highest derivative. Most continuous systems contain one or more differential equations. For example, if you're solving a third order differential equation, insert three `integrator` blocks and supply the equation for the highest order derivative as input to the first integrator block. The output of the first integrator is:

$$\frac{d^{n-1}x}{dt^{n-1}}$$


which is the next lower order derivative. The output of the second integrator block is:

$$\frac{d^{n-2}x}{dt^{n-2}}$$

and so on. The outputs of the lower order derivatives can be fed back into the calculation of the highest derivative.

Simulating a spring-damper arm

The following example steps you through the process of converting a second order differential equation into VisSim block diagram form. This example involves the ubiquitous damped harmonic oscillator, where a mass M is suspended from the ceiling by a spring-damper arm. The mass is attracted back toward the origin by an elastic restoring force proportional to its vertical displacement and is damped by an opposing force that acts in proportion to its velocity.

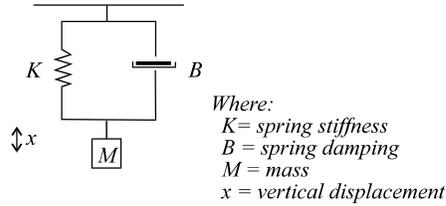

Based on Newton's Second Law, the definition of the equation of motion for the damped harmonic oscillator is:

$$M \frac{d^2 x}{dt^2} = -Kx - B \frac{dx}{dt}$$

where:

$$\frac{d^2 x}{dt^2} = \text{acceleration}$$

$$\frac{dx}{dt} = \text{velocity}$$

Because integration is inherently more numerically stable than differentiation, the equation must be expressed in terms of integrals. By definition of the derivative:

$$\frac{dx}{dt} = \int_0^t \frac{d^2 x}{dt^2} + v(0)$$

and

$$x = \int_0^t \frac{dx}{dt} + x(0)$$

where:


$v(0)$ = initial velocity of the mass

$x(0)$ = initial starting position of the mass

Employing $1/s$ as the operator for integration, and making the initial conditions implicit in $1/s$, yields the following relationship:

$$x = \frac{1}{s} \left(\frac{dx}{dt} \right) = \frac{1}{s^2} \left(\frac{d^2 x}{dt^2} \right)$$

The relationship can be expressed in VisSim block diagram form as:

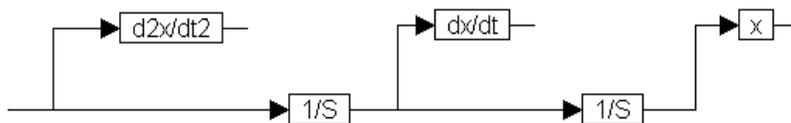

A more concise representation of this relationship is:




The three variable blocks hold the quantities d^2x/dt^2 , dx/dt , and x at each instant of time. The variable blocks are actually extraneous, because the wires alone can carry the data forward to the next block.

Returning to the original equation of motion and solving for the acceleration yields:


$$\frac{d^2x}{dt^2} = \frac{1}{M} \left(-Kx - B \frac{dx}{dt} \right)$$

To model this system in VisSim, wire the outputs of the x and dx/dt variable blocks through two gain blocks (which represent K and B) and into a summingJunction block with inputs negated. By dividing the output of the summingJunction block by M (which is represented by a constant block), you produce d^2x/dt^2 . Letting $K = 5$, $B = 1$, and $M = 10$, for example, results in the diagram shown on the next page.

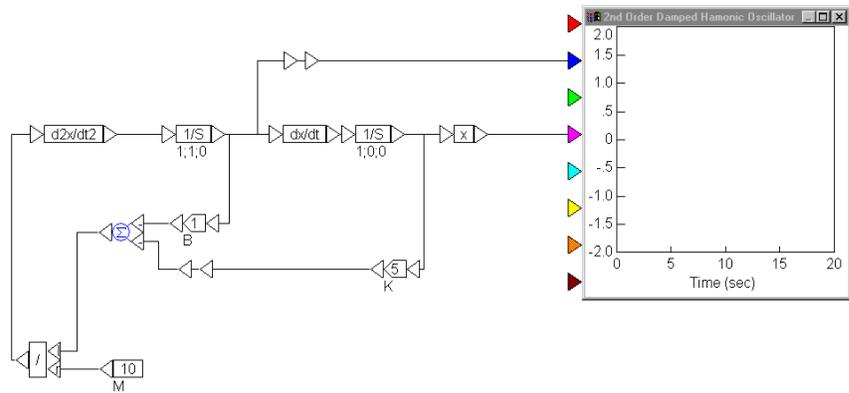


This diagram represents a closed-loop system from which the values for position, velocity, and/or acceleration can be displayed in a plot block, as was done here. The initial conditions of starting position $x(0)$ and velocity $v(0)$ of M are specified within the integrator blocks preceding the variable blocks.

Letting $x(0) = 0$ and $v(0) = 1$, and setting the simulation range from 0 to 20 and the step size to 0.05 yields the following results:

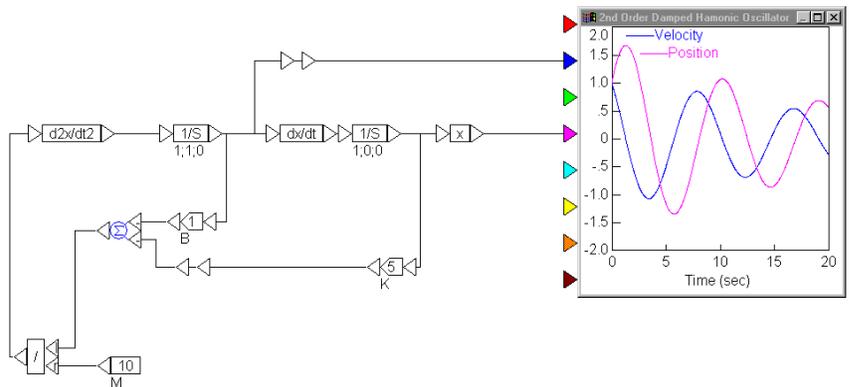

Note that the characteristic decay that is observed depends on the parameters M , K , and B . Different values for these quantities and initial conditions can be entered into the appropriate blocks to simulate any system.

You can simplify the diagram by replacing the variable blocks that denote x , dx/dt , and d^2x/dt^2 with optional label blocks.

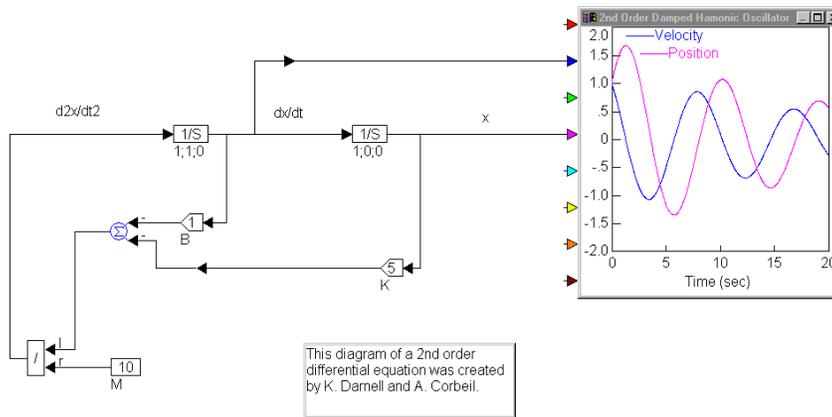

Other physical effects can now be added, such as static and sliding friction, or external driving forces.

A coupled system can also be modeled by interconnecting two separate block diagrams. This permits extremely complex systems to be modeled without the need for a closed mathematical solution.


Entering continuous time transfer functions

A transfer function is a ratio of polynomials in the Laplacian s operator that models the ratio of the output signals divided by the input signals. There are two ways to enter a transfer function in VisSim. The more common method is via the `transferFunction` block, which you use when entering coefficients as numeric constants.

When the coefficients are polynomial constants, begin by defining the transfer function in operator notation. The transfer function should be proper; that is, the highest degree of the denominator polynomial m must be greater or equal to that of the numerator n . The general transfer function representation is:

$$\frac{N(s)}{D(s)} = \frac{a_n s^n + a_{n-1} s^{n-1} \dots + a_1 s + a_0}{b_m s^m + b_{m-1} s^{m-1} \dots + b_1 s + b_0}$$

You represent this in VisSim as follows:

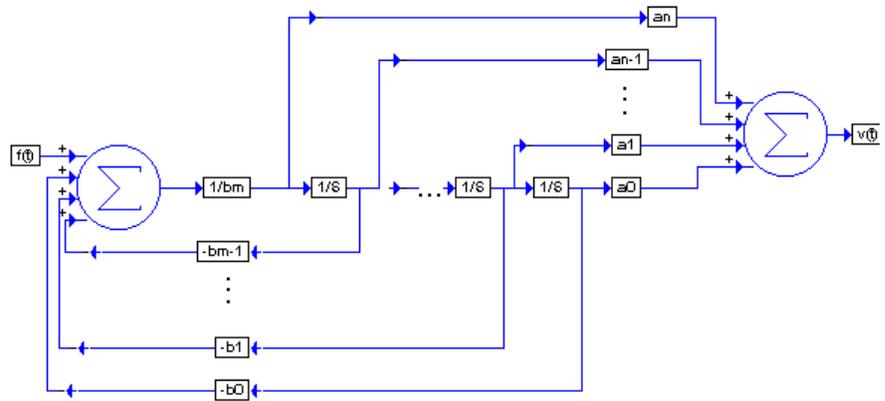


This diagram represents the condition in which the numerator and denominator degrees are equal ($m = n$). When the numerator is of a degree less than the denominator, the output paths are removed from the left. For example, if n is two less than m , the a_n and a_{n-1} output paths would be removed.

Note also that for each k^{th} polynomial term, you add an integrator and a corresponding a_i, b_i set of gains flow to the upper and lower summing junction blocks in the diagram.

The second degree transfer function is:


$$\frac{N(s)}{D(s)} = \frac{a s^2 + b s + c}{d s^2 + e s + f}$$

The diagram for this transfer function is:

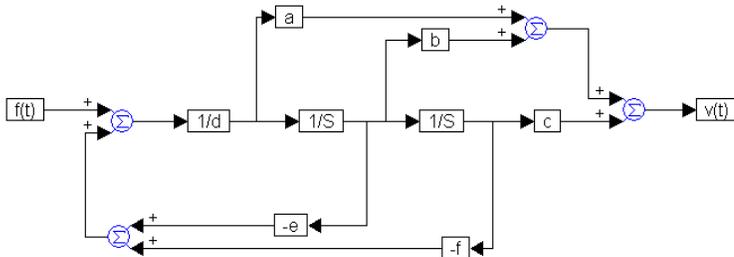

Applying an external driving force to a spring-damper arm

By modifying the damped harmonic oscillator, created earlier, to include an external driving force $f(t)$, you can create a system that contains a transfer function. An illustration of the modified system is shown below:

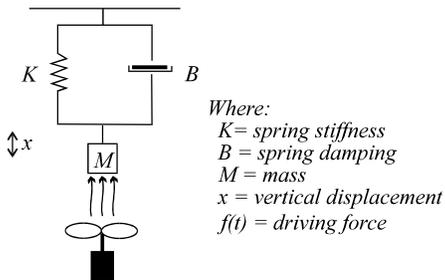

In this system, a vertical draft is produced by a strong fan positioned below the mass. This driving force sustains the motion of the damped oscillator and represents an input to the system. The output is the instantaneous velocity v of the mass. To derive the transfer function for this simple system, you will use the Laplace transform. The modified equation of motion for this system is:

$$M \frac{d^2 x}{dt^2} = -Kx - B \frac{dx}{dt} + f(t)$$

Accounting for non-zero initial conditions, the Laplace transform becomes:

$$Ms^2 x(s) - Msx(0) - M \frac{dx}{dt}(0) = -Kx(s) - Bsx(s) + Bx(0) + F(s)$$

Regrouping the equation yields:

$$x(s)(Ms^2 + Bs + K) - x(0)(Ms - B) - \frac{dx}{dt}(0)M = F(s)$$

Transfer function representation requires all initial conditions be equal to zero, specifically:

$$x(0) = \frac{dx}{dt}(0) = 0$$

The equation reduces to:

$$x(s)(Ms^2 + Bs + K) = F(s)$$

whose transfer function is:

$$\frac{x(s)}{F(s)} = \frac{1}{Ms^2 + Bs + K}$$


Since velocity rather than displacement is the desired output, the substitution:

$$V(s) = s x(s)$$

is made to produce the transfer function:

$$\frac{V(s)}{F(s)} = \frac{s}{Ms^2 + Bs + K}$$

The denominator remains unchanged; however, the numerator coefficients are different. The block diagram becomes:

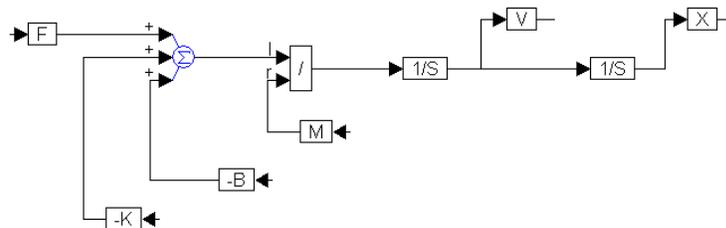

The non-zero initial conditions can be easily included by specifying their values on each of the two integrator blocks. For example, suppose that the spring was initially stretched one inch. An initial condition of one would be placed on the rightmost integrator. Assuming an initial velocity of zero, the initial condition on the leftmost integrator would still be zero.

Discrete time system simulation

You can simulate models of discrete time systems using `unitDelay`, `transferFunction`, and `stateSpace` blocks. These discrete blocks have built-in samplers on their inputs and zero-order holds on their outputs.

You set the sample time of `transferFunction` and `stateSpace` blocks in the `dT` parameters of their Properties dialog boxes. The `dT` parameter sets the sample time at which the blocks' states are updated. The `unitDelay` block has a Boolean clock at its input to set the sample time.

Simulating multi-rate systems: Discrete time systems in VisSim can be formulated as multi-rate systems. This means that a single model can contain blocks with different sampling rates. This capability is particularly useful in the simulation of discrete Multiple-Input-Multiple-Output (MIMO) systems. For a system with significant differences in its time constants in some natural modes or control loops, you can achieve improved performance by sampling different subsystems at different rates.

To specify multi-rate subsystems, use different sample times in the corresponding discrete `transferFunction` or discrete `stateSpace` blocks. The simulation time step must be set to a value equal to or less than the smallest value of all the sample times used in the discrete blocks.

Entering difference equations

A difference equation (DE) is similar to an ordinary differential equation, but instead of continuous functions, functions in a DE take on values only at discrete instances of time. Just as the operator in an ordinary differential equation is the integrator, the operator in the difference equation is the unit delay.

To understand how to represent a DE in block diagram form, consider the following example of the trapezoidal integration algorithm in difference equation form:

$$Y_k = Y_{k-1} + \frac{dt (R_k + R_{k-1})}{2}$$

where:

$R = \text{input}$

$Y = \text{output}$

Here, dt is the fixed discrete update time and the subscript k and $k-1$ denote time in integer multiples of dt . Thus:

$$R_k = R(k \ dt)$$

and

$$R_{k-1} = R((k-1)dt)$$

A DE is converted to a transfer function in terms of the Z operator by replacing occurrences of F_{k-n} with $F(z^{-n})$. Thus:

$$Y_k \rightarrow Y(z^0) \rightarrow Y$$

$$Y_{k-1} \rightarrow Y(z^{-1})$$

$$R_k \rightarrow R(z^0) \rightarrow R$$

$$R_{k-1} \rightarrow R(z^{-1})$$


Performing the replacement and solving for $\frac{Y}{R}$ yields:

$$\frac{Y}{R} = \frac{dt}{2} \frac{1+z^{-1}}{1-z^{-1}}$$

Since transfer functions are conventionally expressed in positive powers of z , you must multiply the right-hand side of the equation by z/z to produce:

$$\frac{Y}{R} = \frac{dt}{2} \frac{z+1}{z-1}$$

To create a VisSim block diagram, the procedure is similar to that used for continuous time transfer functions. However, the `unitDelay` block replaces the integrator block. The resulting block diagram becomes:

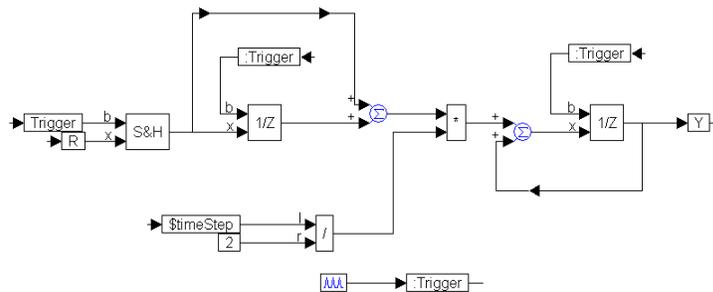

The continuous input signal, R , is made a discrete function by passing it through a `sampleHold` block to effectively sample and hold its value every time the trigger is activated. The trigger is activated every dt seconds using the `pulseTrain` block, and must be fed into every `unitDelay` block to synchronize the VisSim data flow.

Hybrid system simulation

In VisSim, discrete and continuous time blocks can be used together in a model. Such systems are called hybrid systems. In hybrid systems, the outputs of the discrete blocks are held constant between successive sample times, and updated at times that correspond to the specified discrete sample time. The outputs of continuous blocks are updated at every time step. Similarly, the inputs to the discrete blocks are updated at times that correspond to the discrete time interval while the inputs to continuous blocks are updated at every time step.

Hybrid systems can also be multi-rate. To specify multi-rate subsystems, use different sample times in the corresponding discrete `transferFunction` or discrete `stateSpace` blocks. For hybrid system simulation, the simulation time-step must be set to a value equal to or less than the smallest value of all the sample times used in the discrete blocks.

Controlling a simulation

There are two ways to control a simulation:

- Using the Simulate menu Go, Stop, Continue, and Reset commands or corresponding toolbar buttons
- Using the simulation Control Panel

Both ways provide the same level of interactive control over the simulation.

The Control Panel

The Control Panel provides fast and easy interactive control over a simulation.



Go, Stop, and Cont pushbuttons: These buttons allow you to start, stop, and continue a simulation. They are equivalent to the Go, Stop, and Continue commands in the Simulate menu, and the , , and  buttons in the toolbar.

Step pushbutton: This button allows you to single-step through a simulation. Each time you press the Step pushbutton, the simulation advances one time step. The Step pushbutton is equivalent to  button in the toolbar.

Reset pushbutton: When you're single-stepping or proceeding normally through a simulation, the Go pushbutton is replaced with the Reset pushbutton. If you click on Reset, VisSim resets the system to its initial conditions.

► **To activate the Control Panel**

- Choose View > Control Panel.

Starting a simulation

► **To start a simulation**

- Do one of the following:
 - From the toolbar, choose .
 - From the Control Panel, press the Go pushbutton.
 - Choose Simulate > Go command.

Stopping a simulation

► **To stop a simulation**

- Do one of the following:
 - From the toolbar, choose .
 - From the Control Panel, press the Stop pushbutton.
 - Choose Simulate > Stop.

Continuing a simulation

► **To continue a simulation**

- Do one of the following:
 - From the toolbar, choose .
 - From the Control Panel, press the Cont pushbutton.
 - Choose Simulate > Continue.

Single-stepping a simulation

► To single step

- Do one of the following:
 - From the toolbar, choose .
 - From the Control Panel, press the Step pushbutton.

Resetting a simulation

The Reset Sim command resets states of `unitDelay` blocks, `integrator` blocks, `resetIntegrator` blocks, `limitedIntegrator` blocks, `stateSpace` blocks, and `transferFunction` blocks to their initial conditions. In addition, simulation time is turned back to 0.

► To reset

- Do one of the following:
 - From the Control Panel, press the Reset pushbutton.
 - Choose Simulate > Reset Sim.

More on controlling a simulation

Dynamically modifying signal values

You can dynamically modify a signal value during a simulation using the slider block. This block lets you set upper and lower bounds in one and 10 percent increments.

► To modify a signal value

1. Insert and wire a `slider` block into your diagram.
2. Using the scroll bar, adjust the value to be applied to the signal.
3. As the simulation proceeds, re-adjust the value of the `slider` block as necessary.

Probing signal values

There are two ways to probe signal values at each time step of a simulation:

To	Do this
Monitor signals entering or exiting a specific block	Hold down the right mouse button over a connector tab on the block.
Monitor signal values emitted from multiple blocks simultaneously	Wire display blocks to the output connector tabs of the blocks.

Trimming a system

VisSim's unknown and constraint blocks can be used to trim a simulation to begin at a desired non-zero point. This technique is especially useful for slow-running simulations in which the interesting region lies later in the trajectory. By trimming the conditions at the interesting region, you save time.

The initial condition of the integrator can be set externally using a `summingJunction` block. (The actual initial condition on the integrator is set to 0.) The goal is to drive the derivative signal to zero on the first pass of the simulation by adjusting the value of the unknown blocks, which is the integrator initial condition.

Resetting error conditions

If a simulation fails as a result of a math fault — for example, a negative argument to a log function — VisSim displays a dialog box stating the nature of the error and highlights the offending block in red. To reset the error condition, point to the offending block and click the right mouse button. If the offending block is encapsulated within one or more compound blocks, each compound block is also highlighted in red. Note that you'll have to drill into highlighted compound blocks to find the offending block.

If multiple blocks contain errors, use the `Edit > Clear Errors` command to clear all the errors.

Snapping and resetting system states

You can snap and reset the states of `unitDelay` blocks, `integrator` blocks, `resetIntegrator`, `limitedIntegrator`, `stateSpace`, and `transferFunction` blocks.

Snapping system states: When you snap states, VisSim overwrites the initial conditions of the blocks with their current output states. Snapping states is useful when you want to run a simulation to a stable operating point and, from there, experiment with the system.

State values are saved in memory; to save them to disk, use the File > Save command.

Resetting system states: When you reset system states, VisSim sets the states of the blocks to zero.

► **To snap state values to memory**

1. Run the simulation to a specific point of interest.
2. Choose Simulate > Snap States.

► **To reset initial conditions**

- Choose Simulate > Reset States.

Troubleshooting

What should I do when the input function to an integrator block contains discontinuities?

If the input function to an integrator block contains discontinuities, use the adaptive Runge Kutta 5th order or adaptive Bulirsh-Stoer integration algorithm.

How do I stabilize rapidly oscillating behavior?

A simulation that exhibits an oscillating behavior that increases rapidly in amplitude points to unstable integration settings. When this occurs, decrease the integration step size or switch to an integration algorithm that yields more accurate results and produces less accumulated errors over the course of the simulation, such as the adaptive Runge Kutta 5th order or adaptive Bulirsh-Stoer integration algorithm.

For highly nonlinear systems or stiff systems, you should use backward Euler.

How can I speed up my simulations?

When speed is a factor, disconnect all Signal Consumer blocks at the currently displayed level.

Is there an easy way to check for complete wiring?

A faulty simulation can be the result of incomplete wiring. VisSim automatically assigns zeros to all unsatisfied connector tabs (except on `variable` and `*` blocks) before it begins a simulation. To ensure that all blocks are fully connected, activate Check Connections under the Preferences property sheet in the dialog box for the Simulate > Simulation Properties command. When this parameter is activated, VisSim warns you at the start of the simulation if the diagram contains unconnected blocks.

Why is my feedback loop causing errors?

If you create a feedback loop that does not contain integration or delay blocks, it is referred to as an *algebraic loop*. VisSim is not equipped to solve algebraic loops. Hence, during simulation, VisSim flags the loop-head block in red and issues a notification message. To fix the error, rework the loop to introduce a delay.

If you are trying to solve an implicit equation, see [Chapter 7 “Solving Implicit Equations,”](#) for information on using unknown and constraint blocks.

Viewing Simulations

The following information is covered in this chapter:


- Displaying simulation data in customizable plots
- Displaying simulation data in customizable strip charts
- Using histograms, bar graphs, and needle gauges
- Creating animation

Plots

The `plot` block displays data in a two-dimensional time domain plot. You can customize the plot and control how data is presented through the Plot Properties dialog box for the `plot` block.

Basic time domain plots

When you wire a `plot` block into your diagram and run a simulation, the simulation data is initially presented in time domain. All the signals are plotted on the y-axis; the x-axis represents time. As data points arrive to be plotted, VisSim dynamically rescales plot bounds and connects the data points with line segments.

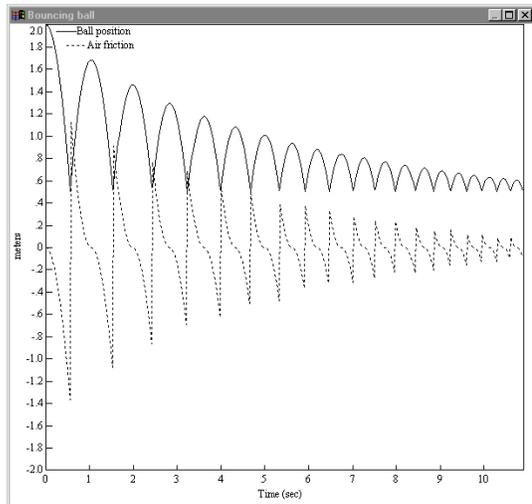

In the above plot, ball position and air friction are displayed as functions of time. The peak ball position follows an exponential decay, governed by air viscosity. The signals are distinguished by line patterns, a feature the `plot` block automatically performs when displaying or printing on monochrome devices. To make the plot more meaningful, signal labels and a title were also added.

Sizing a plot block

You might want to change the size or shape of a `plot` block for better viewing. You can expand it to full screen size with the Maximize button in the upper right-hand corner of the block, or you can drag the plot's borders or corners to adjust its size.

Zooming

You can zoom in on data points to view them at a magnified size and zoom back out to display them at their normal size. You can zoom in several times in a row for greater magnification.

If the area you're zooming in on does not contain at least one data point, the magnified area will be blank.

► To zoom in

1. Point to one corner of the area you want to select.
2. To anchor the corner, hold down the mouse button and CTRL key simultaneously.
3. Drag the pointer until the box encloses the area you want to magnify. A status box in the lower left-hand corner of the plot displays the pointer position.

4. Release the mouse button and CTRL key.

► **To zoom out**

- Hold down the CTRL key and click the right mouse button over the plot.

Printing a plot block

To print just a plot, click on the control-menu box in the upper left-hand corner of the plot and select the Print command.

Changing plot properties


The Plot Properties dialog box controls how simulation data is presented. You can control how the data is presented by selecting parameters from the five property sheets that make up the dialog box.

► **To access the dialog box**

1. Choose Edit > Block Properties.
2. Click the mouse over the plot block.
3. Click on the tab that corresponds to the property sheet containing the plotting parameters you want to change.
4. Select the plotting parameters. (See the descriptions below for information about each parameter.)
5. Click on the OK button, or press ENTER.

Options property sheet

The Option property sheet lets you choose between XY and frequency domain plots; select logarithmic scaling, fixed axis bounds, or a time axis scale; display signal traces as individual data points, line segments, or stepped line segments; and more.

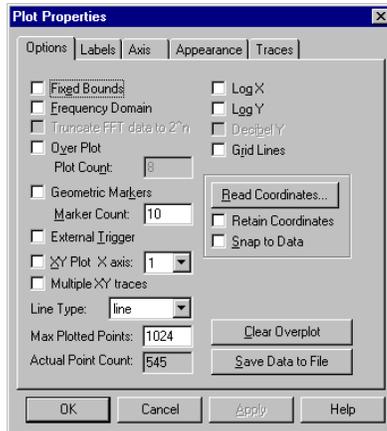

Fixed Bounds: Specifies the region of the plot you want to view by letting you select the plotting bounds. When Fixed Bounds is activated, VisSim uses the values for the X Upper Bound, X Lower Bound, Y Upper Bound, and Y Lower Bound parameters in the Axis property sheet.

Frequency Domain: Obtains the frequency power spectrum through the use of the Fast Fourier Transform (FFT) algorithm.

Do not obtain frequency power spectrum data until after you have run a simulation. If you halt the simulation prematurely, the fidelity of the FFT is diminished.

Unexpected peaks

If your frequency domain plot produces unexpected peaks, check the simulation step size to verify that your sampling rate is adequate for obtaining accurate results. Then, based on the simulation step size and range, check the Plotted Points parameter to verify that you are indeed plotting each time step.

Truncate FFT Data To 2ⁿ: When activated, this option truncates data down to the nearest power of 2. If you do not activate this option, the data buffer is padded with zeros to round up to the nearest power of 2.

This option can be turned on only when the Frequency Domain option is activated.

Over Plot, Plot Count, and Clear Overplot: When activated, Over Plot displays the results of multiple simulation runs in a single plot. This allows for better insight into how small changes can affect overall system performance.


You can select the number of overlapping plots by entering a number into the Plot Count box. To clear all signal traces from a plot, click on the Clear Overplot button.

Geometric Markers and Marker Count: When activated, Geometric Markers overlays signal traces with geometric markers. To change the shape of a marker, click on the Traces tab in the Plot Properties dialog box. For more information, see page 72.

By default, VisSim overlays each signal trace with 10 markers; however, if this is not satisfactory, you can enter a new number in the Marker Count box.

External Trigger: Determines whether VisSim displays simulation data in the plot based on the value of an external trigger. When activated, External Trigger causes VisSim to place a round input connector on the plot block. When signal values entering the external trigger are 1, simulation data is plotted; when signal values entering the external trigger are 0, simulation data is not plotted.

XY Plot and X Axis: Together, XY Plot and X Axis let you use one input signal to represent X coordinate generation. As time advances, the remaining input signals are plotted relative to the X-axis signal.

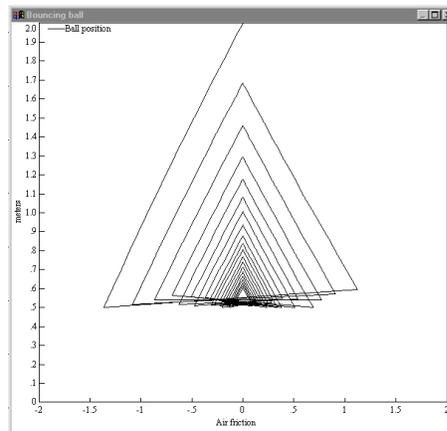

In the XY plot above, ball position is plotted against air friction. At time 0, the ball position is at 2 and air friction is at 0. Over the course of the simulation, the ball position moves counter-clockwise, following a three-sided decay cycle.

► **To specify an XY plot**

1. Activate the XY Plot parameter.
2. Under the X Axis parameter, choose the input signal to be used for X coordinate generation: 1 represents the input signal attached to the top input

connector tab on the plot block, 2 represents the input signal attached to the second to the top input connector tab on the plot block, and so on.

3. Click on the OK button, or press ENTER.

► **To label the x-axis on an XY plot**

In an XY plot, VisSim automatically labels the x-axis with the label for the input signal used for x-coordinate generation. For example, if you activate XY Plot and choose 2 under X Axis, VisSim uses the label assigned to input signal 2.

1. Click on the Labels tab.
2. Enter a label for the input signal you chose to be used for X coordinate generation. The Trace 1 box corresponds to 1 in the X Axis parameter, the Trace 2 box corresponds to 2 in the X Axis parameter, and so on.
3. Click on the OK button, or press ENTER.

Multiple XY Traces: Creates two independent XY plots, which allows two signals to be superimposed. The XY Plot option must be activated in order to use this option.

Line Type: Click on the DOWN ARROW and choose Point, Line, or Discrete.

- Point displays signal values as individual data points. The primary advantage of point plots is that you can see the separation of data as time advances.
- Line connects data points with solid line segments. On color displays, line segments are keyed to the color to their corresponding input connector tab. On monochrome displays and printers, VisSim automatically uses line patterns (solid, dot, dash, and dot-dash) to distinguish multiple signals. You may have to lower the point count in the Plotted Points parameter to allow enough room between data points for the pattern to be displayed. If this is not satisfactory, you can overlay signal traces with geometric markers.
- Discrete displays signal values as stepped line segments. In a discrete plot, VisSim holds the Y value constant from point to point. A discrete plot is helpful when data points are irregularly spaced and you don't know where the curve is accurate.

Max Plotted Points: Determines the smoothness and accuracy of a plot. The more data points you plot, the smoother and more accurate the plot. However, increasing the number of plotted data points also increases the time it takes to print and display the plot.

The maximum number of data points that can be plotted is 250 million.

Setting a maximum default number of plotted points

If you know the maximum number of data points you want plotted in all your plots, you can set it as the default, as described on page 43.

Actual Point Count: Displays the number of data points plotted.

Log X and Log Y: Allow data to be plotted in logarithmic and semi-logarithmic coordinate systems. When you specify a logarithmic or semi-logarithmic plot, you cannot plot negative values on the log axis. Any negative value will be clipped to the low end of the scale. When neither parameter is activated, the plot defaults to linear.

To	Do this
Create a semi-logarithmic plot where the x-axis is \log_{10} and the y-axis is linear	Activate the Log X parameter.
Create a semi-logarithmic plot where the y-axis is \log_{10} and the x-axis is linear	Activate the Log Y parameter.
Create a plot using \log_{10} - \log_{10} scales	Activate the Log X and Log Y parameters.

Decibel Y: Rescales the y-axis to display the values in decibels.

Grid Lines: Extends grid lines from the vertical and horizontal axis coordinates. Grid frequency — that is, the vertical and horizontal spacing of grid lines — is controlled by the spacing of the axis coordinates. VisSim automatically establishes reasonable axis coordinate spacing and hence controls the grid frequency.

Read Coordinates: Overlays the plot with a crosshair and displays its (x,y) coordinate position at the bottom of the plot.

When you click the left or right mouse button, VisSim freezes the crosshair. Click the left mouse button again to erase the crosshair.


You have two crosshair options:

- **Snap to Data:** Causes the data point closest to the pointer to have a magnetic-like pull on the crosshair. As you move the pointer, the crosshair continues to jump to the closest data point.
- **Retain Coordinates:** Displays two crosshairs. One crosshair is frozen at the last known (x,y) position. The other is controlled by the position of the pointer.

Save Data To File: Opens the Select File dialog box to specify a file to which the plot data is to be saved. Click on the DOWN ARROW in the Files of Type box to choose a file format.

Labels property sheet

The Labels property sheet lets you name your plots, label the x- and y-axes, and apply names to signal traces.

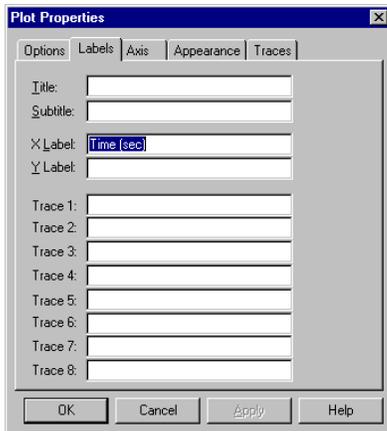

Title and Subtitle: The Title and Subtitle parameters let you provide names for your plots. Titles and subtitles can be up to 80 alphanumeric characters. The title appears in the plot title bar; the subtitle is displayed in the top area of the plot. By default, plots are titled *Plot* and have no subtitles.

X Label and Y Label: The X Label parameter specifies a label for the x-axis. To label the x-axis on an XY plot, see the description of the XY Plot parameter on page 67. The Y Label parameter specifies a label for the y-axis.


Axis labels can contain up to 80 alphanumeric characters.

Trace 1, Trace 2, Trace 3, Trace 4, Trace 5, Trace 6, Trace 7, and Trace 8: Let you specify labels for up to eight input signals. The Trace 1 box corresponds to the top input connector tab, the Trace 2 box corresponds to the next lower tab, and so on.

Signal labels can contain up to 80 alphanumeric characters.

Axis property sheet

The Axis property sheet lets set upper and lower bounds for the x- and y-axes, choose a time scale, specify axis divisions, and more.

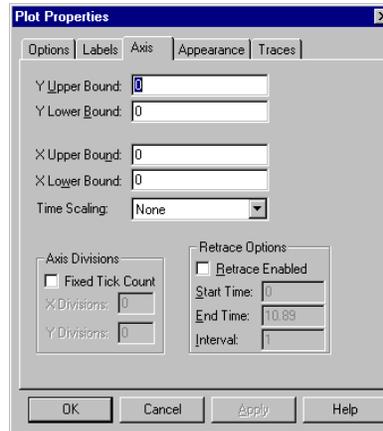

Y Upper Bound, Y Lower Bound, X Upper Bound, and X Lower Bound: Specify the upper and lower bounds for the x- and y-axes. These bounds are in effect when you activate the Fixed Bounds parameter in the Options property sheet.


Time Scaling: Specifies x-axis scaling in microseconds, milliseconds, seconds, minutes, hours, and days. When you select a different time axis scale, VisSim recalculates the values in the X Upper Bound and X Lower Bound boxes. When you close the dialog box, the x-axis is scaled to the time you chose.

Axis Divisions: You can override the plot's grid tick division by activating Fixed Tick Count and entering values into the X Divisions and Y Divisions boxes. The numbers you enter indicate the number of grid ticks on each axis.

Retrace Options: Configures a plot as an *eye* diagram. Activate Retrace Enabled and specify the desired interval in the Interval box. In the Start Time and End Time boxes, enter the start and end times for the eye diagram. Eye diagrams are particularly useful for analyzing digital data waveforms.

Appearance property sheet

With the Appearance property sheet, you can add color and background patterns to your plots.

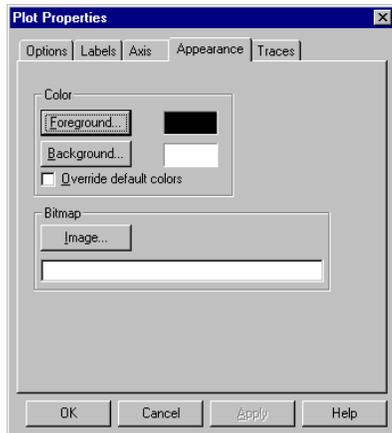


Color: Click on Foreground to color the axis labels and scaling text; click on Background to color the plotting area. Activate the Override Default Colors to override the color specified in the View > Colors command.

Bitmap: You can specify a bitmap image background for the plotting area. Type the file name directly into the Bitmap box or select one using Image command button. The specified bitmap image file overrides any background color selection.

Traces property sheet

Up to eight signal traces can be displayed on a single plot. You can select the color of the trace as well as the type of marker that appears on the trace.

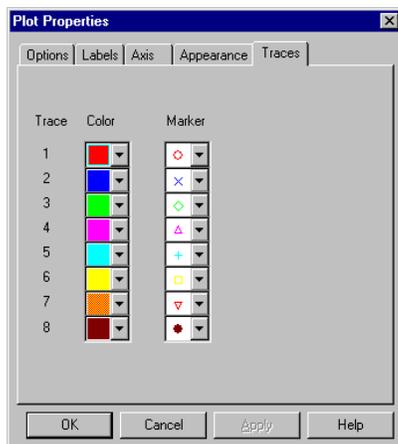

► **To choose a color and marker shape**

1. Invoke the Plot Properties dialog box.
2. Click on the Traces tab.
3. Select the color and marker shape from the drop-down list boxes that correspond with the signal trace.
4. Click on the OK button, or press ENTER.

Strip charts

The `stripChart` block displays up to four signals in a scrolling window. You define the display width and scrollable width of the window. To scroll back and forth through the window, use the horizontal scroll bar at the bottom of the `stripChart` block.

You can customize the strip chart and control how data is presented in the following ways:

- Choose frequency domain strip charts.
- Select y-axis scaling, fixed bounds, or a time axis scale.
- Display signal traces as individual data points, line segments, or stepped line segments.
- Overlay signal traces with geometric markers.

You can also save simulation data to file in .DAT, .M, .MAT, and .WAV formats.

Basic time domain strip chart

Like the `plot` block, a `stripChart` block initially displays data in the time domain. All signals are plotted on the y-axis; x-axis represents time. As data points arrive to be plotted, VisSim dynamically rescales the plot bounds and connects the data points with line segments.

Sizing a stripChart block

To change the size or shape of the `stripChart` block for better viewing, drag the `stripChart`'s borders or corners to adjust its size.

Printing a stripChart block

To print just a strip chart, click on the control-menu box in the upper left-hand corner of the `stripChart` and select the Print command. VisSim prints the strip chart in horizontal bands, with a maximum of four bands per page. VisSim uses as

many pages as necessary to print all the data. VisSim also honors the margin settings specified by the File > Page Setup command.

Changing stripChart properties


The Strip Chart Properties dialog box controls how simulation data is presented.

► To access the dialog box

1. Choose **E**dit > **B**lock Properties.
2. Click the mouse over the `stripChart` block.
3. Select the strip chart parameters. (See the descriptions below for information about each parameter.)
4. Click on the OK button, or press ENTER.

Options property sheet

The Option property sheet lets you select fixed axis bounds, logarithmic y scaling, or decibel y scaling; activate frequency domain plotting; enable an external trigger; display signal traces as individual data points, line segments, or stepped line segments; and more.

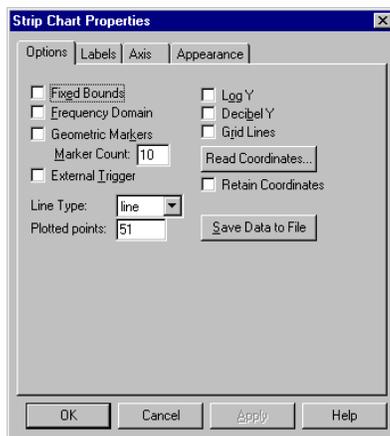

Fixed Bounds: Specifies the region of the strip chart you want to view by letting you select the plotting bounds. When Fixed Bounds is activated, VisSim uses the values for the X Upper Bound, X Lower Bound, Y Upper Bound, and Y Lower Bound parameters in the Axis property sheet. Out-of-range signal values are clipped to the existing strip chart bounds.

Frequency Domain: Obtains the frequency power spectrum through the use of the Fast Fourier Transform (FFT) algorithm.

Do not obtain frequency power spectrum data until after you have run a simulation. If you halt the simulation prematurely, the fidelity of the FFT is diminished.

Unexpected peaks

If your frequency domain plot produces unexpected peaks, check the simulation step size to verify that your sampling rate is adequate for obtaining accurate results. Then, based on the simulation step size and range, check the Plotted Points parameter to verify that you are indeed plotting each time step.

Geometric Markers and Marker Count: The Geometric Markers parameter overlays signal traces with geometric markers (squares, diamonds, circles, and triangles). These markers are particularly useful for monochrome displays and printers.

By default, VisSim overlays each signal trace with 10 markers; however, if this is not satisfactory, you can change the number of markers with the Marker Count parameter.

External Trigger: Determines whether VisSim displays simulation data in the strip chart based on the value of an external trigger. When activated, External Trigger causes VisSim to place a round input connector on the `stripchart` block. When signal values entering the external trigger are 1, simulation data is displayed in the strip chart; when signal values entering the external trigger are 0, simulation data is not displayed.

Line Type: Click on the DOWN ARROW and choose Point, Line, or Discrete.

- Point displays signal values as individual data points. The primary advantage of point plots is that you can see the separation of data as time advances.
- Line connects data points with solid line segments. On color displays, line segments are keyed to the color to their corresponding input connector tab. On monochrome displays and printers, VisSim automatically uses line patterns (solid, dot, dash, and dot-dash) to distinguish multiple signals. You may have to lower the point count in the Plotted Points parameter to allow enough room between data points for the pattern to be displayed. If this is not satisfactory, you can overlay signal traces with geometric markers.
- Discrete displays signal values as stepped line segments. In a discrete plot, VisSim holds the Y value constant from point to point. A discrete plot is helpful when data points are irregularly spaced and you don't know where the curve is accurate.

Plotted Points: Determines the smoothness and accuracy of a plot. The more data points you plot, the smoother and more accurate the plot. However, increasing the number of plotted data points also increases the time it takes to print and display the plot.

The maximum number of data points that can be plotted is 250 million.

Log Y: Enables a logarithmic y-axis. Note that you cannot plot negative values on a log axis. Any negative value is clipped to the low end of the scale.

Decibel Y: Rescales the y-axis to display the values in decibels.

Grid Lines: Extends grid lines from the vertical and horizontal axis coordinates. Grid frequency — that is, the vertical and horizontal spacing of grid lines — is controlled by the spacing of the axis coordinates. VisSim automatically establishes reasonable axis coordinate spacing and hence controls the grid frequency.

Read Coordinates and Retain Coordinates: The Read Coordinates command button overlays the strip chart with crosshair and displays its (x,y) coordinate position at the bottom of the chart.


When you click the left or right mouse button, VisSim freezes the crosshair. Click the left mouse button again to erase the crosshair.

You can optionally activate the Retain Coordinates parameter. When you do so, the strip chart appears with two crosshairs. One crosshair is frozen at the last known (x,y) position. The other is controlled by the position of the pointer.

Save Data To File: Opens the Select File dialog box to specify a file to which the strip chart data is to be saved. Click on the DOWN ARROW in the Files of Type box to choose a file format.

Labels property sheet

The Labels property sheet lets you name your strip charts, label the x- and y-axes, and apply names to signal traces.

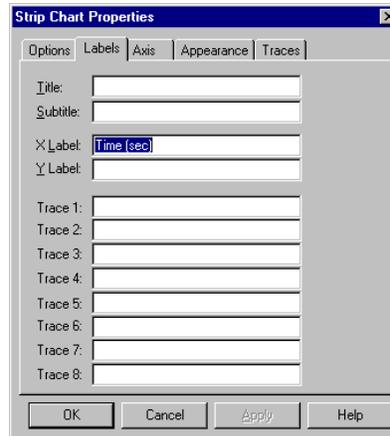


Title and Subtitle: The Title and Subtitle parameters let you provide names for your strip charts. Titles and subtitles can be up to 80 alphanumeric characters. The title appears in the plot title bar; the subtitle is displayed in the top area of the plot. By default, plots are titled *Strip Chart* and have no subtitles.

X Label and Y Label: The X Label and Y Label parameters specify labels for the x- and y-axes. Axis labels can contain up to 80 alphanumeric characters.

Trace 1, Trace 2, Trace 3, Trace 4, Trace 5, Trace 6, Trace 7, Trace 8: Let you specify labels for up to eight input signals. The Trace 1 box corresponds to the top input connector tab, the Trace 2 box corresponds to the next lower tab, and so on. Signal labels can contain up to 80 alphanumeric characters.

Axis property sheet

The Axis property sheet lets you define the display width and scrollable width of the window; set upper and lower bounds for the y-axis; choose a time scale; and specify axis divisions.

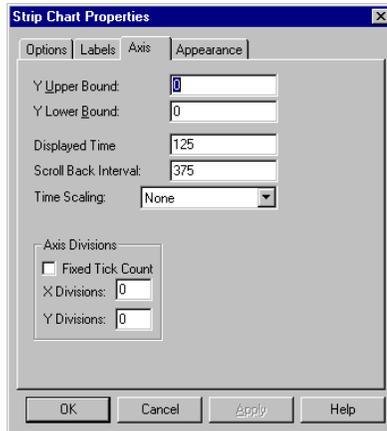

Y Upper Bound and Y Lower Bound: Specify the upper and lower bounds for the y-axis. These bounds are in effect when you activate the Fixed Bounds parameter in the Options property sheet.

Time Scaling: Specifies x-axis scaling in microseconds, milliseconds, seconds, minutes, hours, and days. When you select a different time axis scale, VisSim recalculates the values in the X Upper Bound and X Lower Bound boxes. When you close the dialog box, the x-axis is scaled to the time you chose.


Axis Divisions: You can override the strip chart's grid tick division by activating Fixed Tick Count and entering values into the X Divisions and Y Divisions boxes. The numbers you enter indicate the number of grid ticks on each axis.

Displayed Time: Indicates the amount of units to be displayed in the strip chart window at any given time. The default value is $\frac{1}{4}$ of the total simulation time.

Scroll Back Interval: Indicates how much data (in x units) is saved for scrolling through. To conserve memory, keep this value low. To retain more data points, but use more memory, raise this value. The default value is the total simulation time.

Appearance property sheet

With the Appearance property sheet, you can add color and background patterns to your strip charts.

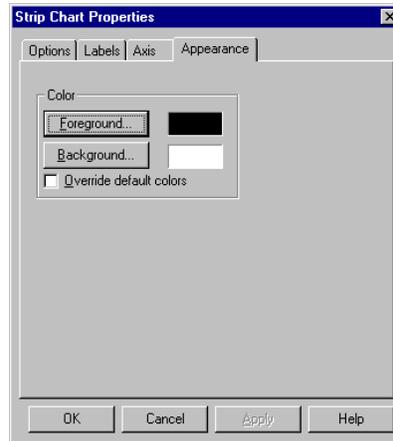

Color: Click on Foreground to color the axis labels and scaling text; click on Background to color the plotting area. Activate the Override Default Colors to override the color specified in the View > Colors command.

Bitmap: You can specify a bitmap image background for the plotting area. Type the file name directly into the Bitmap box or select one using Image command button. The specified bitmap image file overrides any background color selection.

Histograms

The histogram block shows how data are distributed over the course of a simulation. At each time step, a data point is placed in a bin that corresponds to a specific range. You can select the number of bins and the maximum and minimum bin value for the histogram. You can also select the maximum displayed bin height or have the histogram block dynamically rescale the bins as the data points arrive. The bins are spaced equally between the minimum and maximum bin values.

Sizing a histogram block

You might want to change the size or shape of the histogram block for better viewing. You can expand it to full screen size with the maximize button in the upper right-hand corner of the histogram or you can drag the histogram's borders or corners to adjust its size.


Changing histogram properties

The Histogram Properties dialog box controls how simulation data is presented.

► To access the dialog box

1. Choose Edit > Block Properties.

2. Click the mouse over the histogram block.
3. Select the plotting parameters. (See the descriptions below for information about each parameter.)
4. Click on the OK button, or press ENTER.

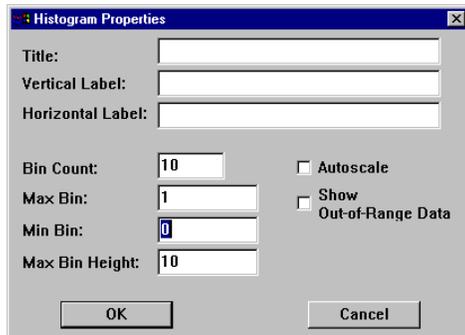

Title: Specifies a title for the histogram. The default title is Histogram.

Vertical Label: Specifies a vertical axis label.

Horizontal Label: Specifies a horizontal axis label.

Bin Count: Indicates the number of bins. If you change the bin count, the bin values are reset. The default is 10.

Max Bin: Indicates the maximum value of the data. The default is 1.

Min Bin: Indicates the minimum value of the data. The default is 0.


Max Bin Height: Indicates the maximum height of the bin. The default is 10.

Autoscale: Rescales plot when the maximum bin height is exceeded.


Show Out-Of-Range Data: Displays bins before and beyond the minimum and maximum bins to hold out-of-range data points.

Bar and needle graphs

The meter block displays signals in either a gauge- or a bar-style display. Initially, the meter block appears as a gauge-style display with one input connector tab.

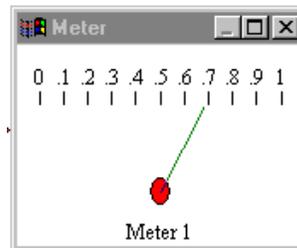


Gauge display

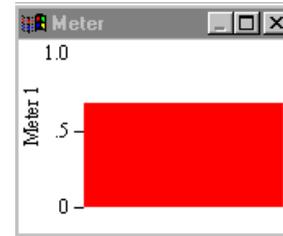

Bar display

You can display Meter to eight signals in a meter block.

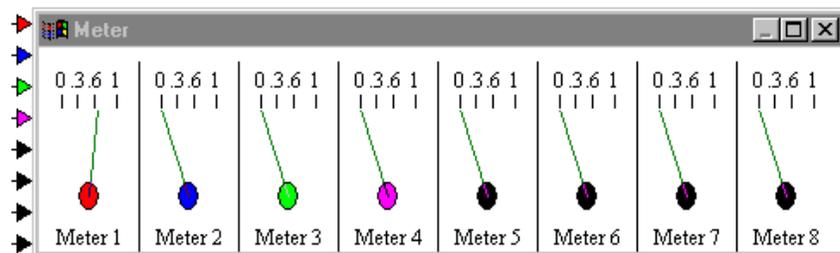

VisSim displays each signal in a separate meter window. The color of the input connector tab corresponds to the bar (in a bar display) or bulb (in a gauge display) of the same color. You have the option of changing these colors.

The default number of input connector tabs is one. To change the number of input connector tabs, use the and toolbar buttons, or the corresponding Edit > Add Connector and Edit > Remove Connector commands.

Sizing a meter block


You might want to change the size or shape of the meter block for better viewing. You can expand it to full screen size with the Maximize button in the upper right-hand corner of the meter or you can drag the meter's borders or corners to adjust its size.

Changing meter properties

The Meter Properties dialog box controls how simulation data is presented.

► **To access the dialog box**

1. Choose **E**dit > **B**lock Properties.
2. Click the mouse over the meter block.
3. Select the plotting parameters. (See the descriptions below for information about each parameter.)
4. Click on the OK button, or press ENTER.

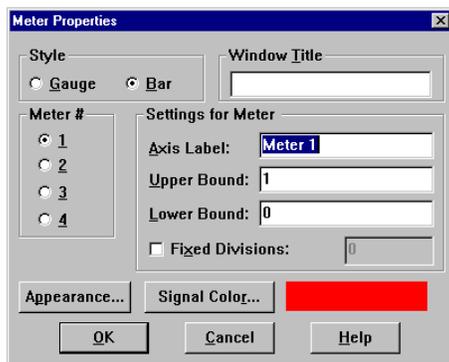

Style: Switches between a bar and gauge display.

Meter #: 1, 2, 3, and 4 indicate the signal whose settings are to be examined or changed. The text in the Axis Label, Upper Bound, and Lower Bound boxes correspond to the selected signal.

Window Title: Indicates a title for the meter block. The title appears in the title bar that runs across the top of the meter block. The default title is *Meter*.

Axis Label: Indicates a name for the axis on which the signal is displayed. In a gauge display, the axis label is displayed horizontally across the top of the display; in a bar display, the axis label is displayed vertically along the left-hand side of the display.

Upper Bound and Lower Bound: Control the upper and lower bound of the meter display. The defaults are 1 and 0, respectively.

Fixed Division: Indicates the number of grid ticks.

Appearance: Opens the Appearance dialog box. Click on Foreground to color the axis label and scale text; click on Background to color the plotting area. The color you specify overrides the color specified in the View > Colors command.

You can alternatively specify a bitmap image background for the plotting area. Type the file name directly into the Bitmap box or select one using the Select Bitmap command button. The specified bitmap image file overrides any background color selection.

Signal Color: Opens the Color dialog box in which to specify a color for the input connector tab, the bulb and needle (in a gauge-style display), and the bar (in a bar-style display).

Creating animation


Animation is a series of images that, during a simulation, creates the illusion of movement. VisSim provides two blocks to create animations: the `animate` block, for animating an image, and the `lineDraw` block, for animating a line.

Animation basics


Animation occurs only when you initiate a simulation with display mode active. In this mode, all wires are hidden, all blocks are frozen in place, and with the exception of the interactive elements on `button` and `slider` blocks, block parameter values cannot be changed.

Animation occurs only when display mode is active. You activate display mode with the `View > Display Mode` command. A check mark in front of the command indicates that it is active.

Animation works by feeding signals into an animation block. The signals drive the coordinates of the animation block, which result in motion. For example, consider the bouncing ball animation, shown below:

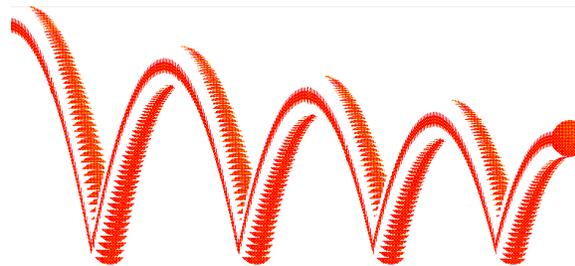

The ball is represented as a single `animate` block. Movement is introduced by changing the ball's x,y screen position coordinates. As the simulation progresses, the signals entering the `animate` block continually update its position. The diagram below drives the simulation of the bouncing ball.

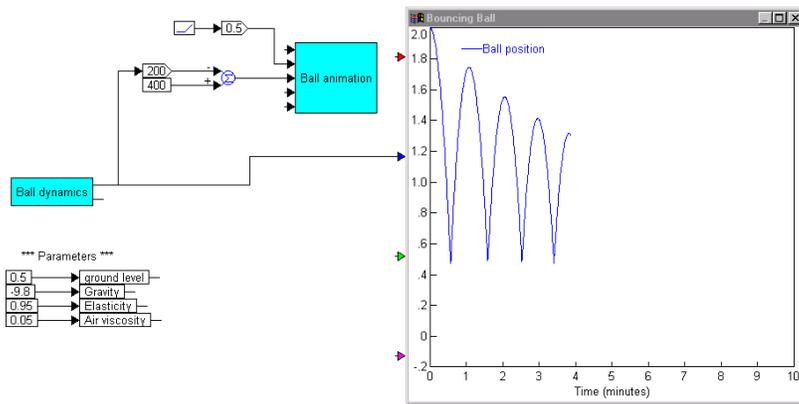

To create the illusion of depth, you can vary the ball's w,h size coordinates.


Using the animate block

The `animate` block lets you animate an image during simulation. Animation occurs through movement and changes in the size or appearance of the image.

The Animate Properties dialog box controls how animation data is presented.

► To access the dialog box

1. Choose **E**dit > **B**lock Properties.
2. Click the mouse over the `animate` block.
3. Select the animation parameters. (See the descriptions below for information about each parameter.)
4. Click on the OK button, or press ENTER.

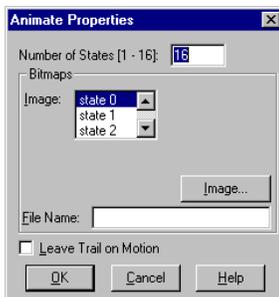

Applying pictures


The pictures you apply to an `animate` block must be in bitmap file format (.BMP). VisSim supports Windows-formatted bitmaps with up to 256 colors.

► To apply pictures to an `animate` block

1. In the Number of Images box, enter then number of pictures to be applied to the block. You can have up to 16 different pictures
2. In the States box, select state 0.
3. Do one of the following:
 - Click on the Associate Bitmap command button. VisSim displays the File Open dialog box in which you can select a .BMP file to be associated with state 0. The .BMP file name appears in the File Name box.
 - In the File Name box, enter the complete pathname of the .BMP file to be associated with state 0.
4. To apply a second bitmap image to the `animate` block, select state 1 from the States box and repeat step 3. Continue to repeat steps 3 and 4, incrementing the state number, for each bitmap image you want to apply to the `animate` block.
5. Click on the OK button, or press ENTER.

Creating animation

Signals fed into the `animate` block drive the animation during simulation. The `animate` block accepts five input signals.

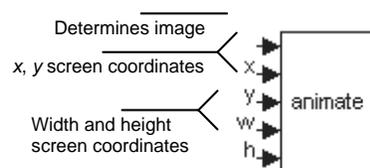

Signals fed into the top input: The top input connector tab determines which image is applied to the `animate` block. An input signal value of 0 causes the bitmap image file corresponding to state 0 to be displayed; an input signal value of 1 causes the bitmap image file corresponding to state 1 to be displayed; and so on. Signal values entering the top input adhere to these rules:


- When a signal value is a non-integer, the `animate` block truncates it to integer form.

- When a signal value is greater than the number of set states, the `animate` block uses the highest set state.
- When the signal value is negative, the `animate` block uses state 0.


Signals fed into the x, y, w, and h inputs: The “x” and “y” connectors provide the x,y screen position coordinates for the image. The input connector tabs labeled “w” and “h” provide the width and height of the image. By varying these values, you can create movement and depth.

The values fed into the x, y, w, and h inputs represent display pixels. The x, y position (0,0) is the upper left corner of the VisSim window. Positive values extend to the right and down. For your image to appear on most video screens, keep its position within the bounds of a VGA screen (640x480).

You must perform all coordinate conversion manually. For example, the equations that determine the position of a bouncing ball are shown below:

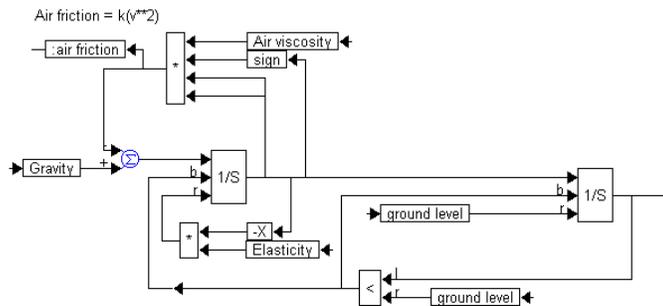

However, before the output of the `resetIntegrator` block can be fed into the `animate` block, the position of the ball must be mapped to screen coordinates, as shown below:

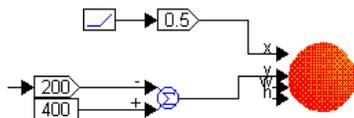

The objective is to animate the bouncing of the ball as a function of time. This means that time is the independent variable, or the x-axis. A `ramp` block is used to generate time, which ranges between 0 and 1000. A gain of 0.5 is used to scale time

so that the amount of space used on the screen in the horizontal direction is limited in the range 0 to 500 pixels.

The ball position, y , varies from 0.5 to 2 in the simulation. This is scaled 0 to 300 pixels by using the scaling shown. Note that the pixel location (0,0) corresponds to the top left corner of your screen, and the largest pixel location is the bottom right corner of your screen.

Creating a trail: To leave a trail of the picture as the simulation progresses, activate the Leave Trail on Motion parameter.


Using the lineDraw block

The `lineDraw` block lets you animate a line during simulation. You define the line by specifying two sets of x,y screen coordinate endpoints. You can also set the color, thickness, and style of the line.

The LineDraw Properties dialog box controls how a line is animated.

► To access the dialog box

1. Choose **E**dit > **B**lock Properties.
2. Click the mouse over the `lineDraw` block. The lineDraw Properties dialog box appears.

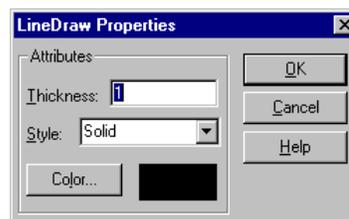

3. Do the following:

To specify	Do this
Color	Click on the Color command button and choose a color from the color palette.
Line style	Click on the DOWN ARROW for the Style box and select a style from the drop down list.
Line thickness	In the Thickness box, enter a value. Values are specified in points.

4. Click on the OK button, or press ENTER.

Creating line motion

Like the `animate` block, the `LineDraw` block uses the signal fed into its inputs to create motion. The top two inputs provide one set of x,y screen coordinate endpoints for the line; the bottom two inputs provide the other set. By varying these values, you can create motion.

The signal values fed into the inputs represent display pixels. Position (0,0) is the upper left corner of the VisSim window. Positive values extend to the right and down. For your line to appear on most video screens, keep its position within the bounds of a VGA screen (640x480).

Other ways to create animation

Animation can also be applied to a simulation using the `light`, `button`, and `bezel` blocks.

Use this block	To	For more information
<code>light</code>	Alternate among three images	See page 250
<code>button</code>	Alternate among 16 images	See page 216
<code>bezel</code>	Create operator control panels	See page 213

Solving Implicit Equations

This chapter covers the following information:

- Setting up an implicit equation with `unknown` and `constraint` blocks
- Solving an implicit equation
- Using the Implicit Solver property sheet
- Sample implicit equation

Setting up an implicit equation

When a system contains an implicit equation, that is, an equation defined in terms of itself, you use `unknown` and `constraint` blocks to solve it. There may be one, more than one, or no solutions for the system.

The key steps to setting and solving implicit equations follows:

1. Define the variable that needs to be determined as an unknown using the `unknown` block. The order is very important — an unknown must be defined first and then given a variable name.
2. Isolate zero on the right-hand side of the equation by moving all terms to the left-hand side.
3. Construct the left-hand side of the equation, and equate the right-hand side by using the `constraint` block to denote zero.

Algebraic loops

In the case of connections backward to earlier blocks already evaluated (often called feedback), VisSim checks to see that such feedback loops contain at least one `integrator`, `transferFunction`, `unitDelay`, or `timeDelay` block. If there is no such block in the feedback, the result is numerically ill-defined and is referred to as an algebraic loop. VisSim detects such algebraic loops and produces a warning message.


Solving an implicit equation

When solving an implicit equation, you can use the Newton Raphson solver or a custom solver. You can also set the error tolerance, maximum iteration count, perturbation, and relaxation parameters.

► To solve an implicit equation

1. Choose **S**imulate > **S**imulation Properties.
2. Click on the Implicit Solver tab.

The Implicit Solver sheet in the Simulation Properties dialog box appears.

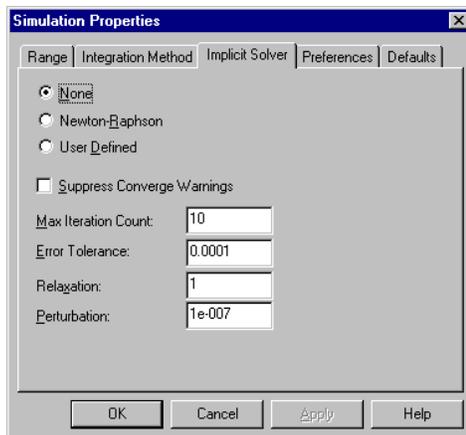

3. Choose the options you want, then click the OK button, or press ENTER. (For more information on the options, see the descriptions below.)
4. Start the simulation.

Using the Implicit Solver property sheet

The Implicit Solver property sheet provides options for selecting the solver, suppressing convergence warnings, specifying the maximum iteration count, and more. The property sheet options are:

None: When you're not solving an implicit equation, activate None.

Newton-Raphson: Newton-Raphson is a singular value decomposition (SVD) based solver that performs static optimization at each time step. VisSim derives an n -dimensional slope by numerically perturbing the unknown outputs and observing the effects on the constraints. VisSim uses the slope matrix to compute values for the unknown blocks that drive the constraints to a minimum. Newton-Raphson is particularly useful for solving static equations in the presence of concurrent dynamics.

User Defined: When User Defined is activated, VisSim uses the DLL file named VSOLVER.DLL in your current directory to solve the equation. For information on creating a custom solver, see page 317.

Suppress Convergence Warnings: If you're solving for a set of roots that are equidistant from zero, you must initialize the unknown block to a value other than zero to force the equations to converge. To suppress the convergence warnings when solving an implicit system with nonlinear dynamics, activate Suppress Convergence Warnings.

Max Iteration Count: This option lets you specify the number of iterations the solver performs while attempting to meet the error tolerance criterion. The default value is 10.

Error Tolerance: This option lets you specify the maximum allowable difference in total error between two successive iterations. A total error is computed as the sum of individual errors squared, where the error signal is the input signal to a constraint block. Newton-Raphson ceases iterating when the difference in total error between two successive iterations becomes less than the tolerance.

Use Error Tolerance in conjunction with Max Iteration Count to control the time spent converging. The larger the tolerance, the quicker and less accurate the solution. The default value is 0.0001.

Relaxation: This option attenuates the iteration update value to attain convergence for equations that prove difficult to converge. As a side effect, it slows the convergence process because it forces the iteration to take smaller steps. The typical range is from slightly greater than 0 to 2. Select values less than 1 for systems that appear to be unstable. The default value is 1.

Perturbation: This option indicates the value by which the unknown blocks are numerically perturbed to evaluate the Jacobian (matrix of first partials). Each element of the Jacobian is a ratio of constraint change with respect to block

perturbation value applied to the unknown blocks. The perturbation value should be at least one order of magnitude less than the unknown initial value, but greater than 1e-12 of the initial value for the unknowns. The default value is 1e-007.


Implicit equation examples

Simple nonlinear implicit equation

Consider the equation:

$$y + \cos(y) = 0$$

This equation can be realized as:

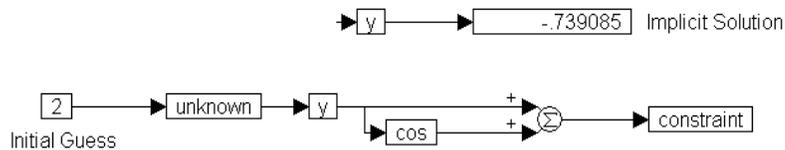

In this configuration, the output of the `summingJunction`, namely $y + \cos(y)$ must equal zero. Further, from left to right, the entire diagram reads

Starting with an initial guess of 2, find a value for the unknown variable called y such that $y + \cos(y) = 0$.


The result indicates that $y = -0.739085$ is one possible solution. Other solutions may exist and can be identified by using different initial guess values for the unknown block.

Advanced nonlinear implicit equation


Consider the equation:

$$x^2 + 3x + 2 = 0$$

The roots of this equation can be obtained analytically as $x = -2$ and $x = -1$ for comparison. This equation can be solved implicitly in VisSim as shown on the next page.

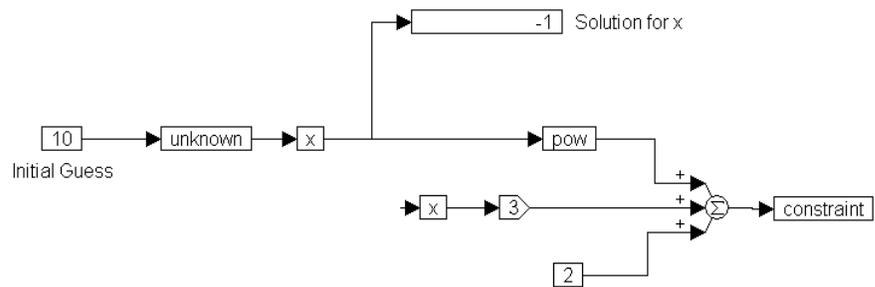

In this configuration, the output of the `summingJunction`, namely $x^2 + 3x + 2$, must equal zero. The simulation yields one of the roots to be $x = -1$, as shown, starting from a guess of $+10$. When a guess value of -10 is used, the diagram becomes:

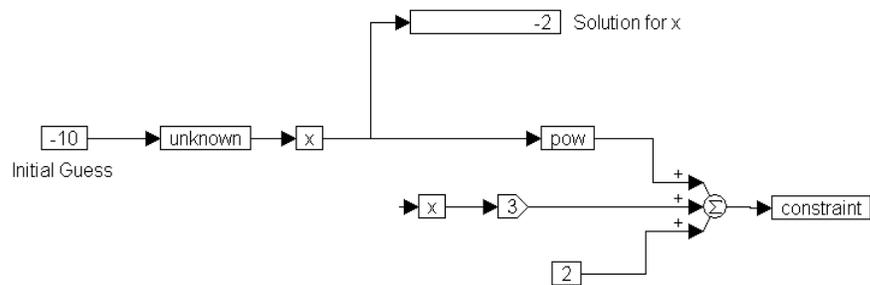

In this case, the second root, $x = -2$ is obtained.

This model shows that the solution obtained depends on the initial guess supplied to the `unknown` block. When the initial guess value is larger than -1 , the solution converges to -1 . When the initial guess value is smaller than -2 , the solution converges to -2 .

Performing Global Optimization

This chapter covers the following information:

- Setting up global optimization with cost and parameterUnknown blocks
- Performing global optimization
- Using the Global Optimization dialog box
- Sample global optimization problem

Global optimization basics

Global optimization involves the automatic adjustment of system parameters to maximize or minimize a specified quantity, while satisfying one or more global constraints.

During global optimization, VisSim iteratively updates the parameter vector such that the cost function generally decreases until it finds a minimum. The resulting parameter values become the optimum values because they minimize the cost function.

Cost functions with many local minimum values

Most cost functions will have many local minimum values and although VisSim tries to avoid local minima, the one VisSim finds may not be the overall minimum. To be sure that it is the global minimum, you may want to perform several runs of the optimizer, using different initial parameterUnknown values.

Cost functions with no minimum values

It is possible that a cost function has no minimum, or has a flat surface away from the minima. In this case, the global optimizer will get confused and wander aimlessly (*how can you run downhill when there is no hill?*). If the optimizer appears to run for a long time with little convergence, you should suspect flat spots in your cost function. In such cases, you may have to reformulate the cost function such that it has at least one minimum. A common mistake is to put a `limit` block just before the cost input. In this case, the optimizer will experiment with larger and larger unknown values to no avail. If a `limit` block is used in the cost function, it must be placed before an integration of total error.

Performing global optimization

Global optimization is almost always a nonlinear problem and rarely is there a single best method for minimizing the cost function. VisSim provides three optimization methods: Powell, Polak-Ribiere, and Fletcher Reeves. You can alternatively write a custom optimizer, as described on page 320.

Regardless of the method you select, VisSim produces a sequence of parameter updates on a per-run basis that decreases the value of the cost function. The basic parameter update equation is:


$$P_{k+1} = P_k + \Delta P_k \equiv \text{iteration index or VisSim run number}$$

The difference between each method is the way ΔP_k is generated. For more information on these methods, see *Numerical Recipes, The Art of Scientific Computing* (Cambridge University Press).

► To perform global optimization

1. Choose Simulate > Optimization Properties.

The Optimization Properties dialog box appears.

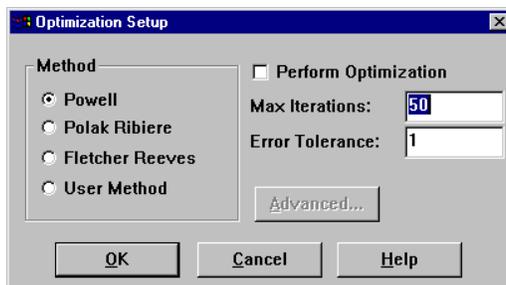

2. Activate the Perform Optimization option.

3. Choose the options you want, then click on the OK button, or press ENTER. (For more information on the options, see the descriptions below.)
4. Click on the OK button, or press ENTER.
5. Start the simulation.

Using the Optimization Properties dialog box

The Optimization Properties dialog box provides the following options:

Method: You can choice between three supplied optimizers or use a custom optimizer.

- **Powell:** A direction-set algorithm that typically runs faster because it does not explicitly calculate the gradient.
- **Polak Ribiere:** A conjugate gradient algorithm that is a bit more sophisticated than Fletcher Reeves for arriving at the supposed minimum of the quadratic form.
- **Fletcher Reeves:** Requires fewer iterations to convergence. This conjugant gradient algorithm is slower than Powell's method.
- **User Method:** When User Method is activated, VisSim uses the DLL file named VOPT.DLL in your current directory to solve the equation. For information on creating a custom global optimizer, see page [320](#).

Perform Optimization: This option must be activated to perform global optimization.

Max Iteration Count: Indicates the maximum number of iterations.

Error Tolerance: Indicates the maximum error between the results of two successive iterations. The default value is 10.

Global optimization examples

Optimized paper bag problem

Suppose you want to manufacture paper grocery bags at the lowest possible cost, where each bag has a volume of at least one cubic foot (1728 cubic inches). To minimize the cost of material, you must determine the optimal bag dimensions that minimize the amount of paper used for each bag, while ensuring that the volume of the bag ($v = whd$) is greater than or equal to 1728 cubic inches. To simplify the problem, additional material for folding and gluing the bag is ignored.

The cost function can be expressed as:

$$s = 2(wh + dh) + dw$$



where s is the surface area of the bag, w is its width, h is its height, and d is its depth.

The cost function is also subject to a given volume constraint:

$$\text{Volume } v = whd \geq 1728 \text{ cubic inches}$$

Though not explicitly specified, it is clear that each of the physical dimensions w , h , and d must be greater than zero.

To solve this problem in VisSim, construct the following block diagram:

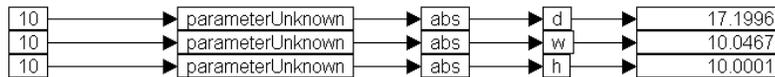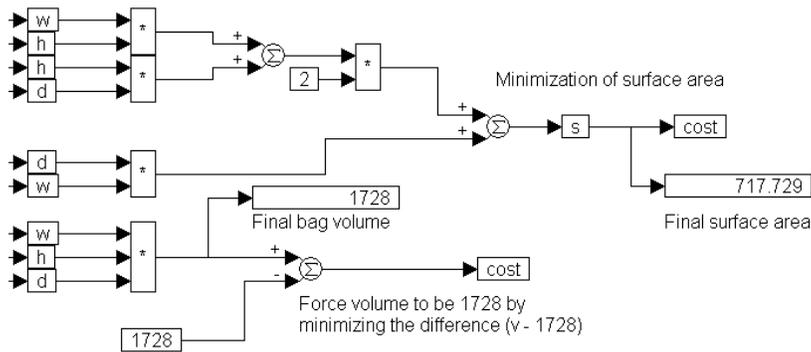

Initial guess values

Optimal parameter values

Three `const` blocks, all set to 10, are used to produce the initial guess values. Their outputs are connected to three `parameterUnknown` blocks. To enforce the requirement that the physical dimensions of the bag are positive, the outputs of the `parameterUnknown` blocks are connected to three `abs` blocks, and the outputs of the `abs` blocks are connected to three `variable` blocks named d , w , and h . The outputs of the three `variable` blocks are connected to `display` blocks to monitor the changes and the final values of the bag dimensions.

The outputs of w , h , and d are connected to a three-input `*` block, and the output of the `*` block is connected to a `summingJunction` and to a `display` block. A `const` block set to 1728 is connected to the other negated input of the `summingJunction`. A `cost` block, connected to the output of the `summingJunction` block, enforces

the minimization of the difference $v - 1728$. This is equivalent to forcing the volume v to be very close to the desired value of 1728 cubic inches.

In order to minimize the surface area, the equation $s = 2(wh + dh) + dw$ is coded using `variable`, `*`, `summingJunction`, and `const` blocks. The output of the final `summingJunction` block is connected to a `variable` s , which is connected to another `cost` block and to a `display` block.

Optimization is performed using the Powell method. The number of iterations is set to 50 and the error tolerance is 0.001. The optimization results indicate that a volume of 1728 cubic inches can be attained by using an ideal surface area of 717.7 square inches, with the final bag dimensions of $w = 10.05$, $h = 10.00$, and $d = 17.20$ inches. In comparison, the intuitive solution of $w = h = d = 12$ inches has a surface area of 720 square inches.


Two segment approximation of $\sin(\pi t)$

Consider the problem of approximating a sinusoid $\sin(\pi t)$ in the range (0,1) by two straight line segments. In the range (0,0.5), the line segment has a positive slope, and in the range (0.5, 1.0), the second line segment has a negative slope. The approximation can be written as:

$$\sin(\pi t) \cong ar(t) - 2br(t - 0.5)$$

where a and b are unknown weight factors, $r(t)$ is a unit ramp that starts at $t = 0$, with a slope of +1, and $-2r(t - 0.5)$ is a ramp that starts at $t = 0.5$ with a slope of -2.

The optimization problem in this case involves the determination of optimal values for the unknown weight factors a and b . This equation can be realized as:

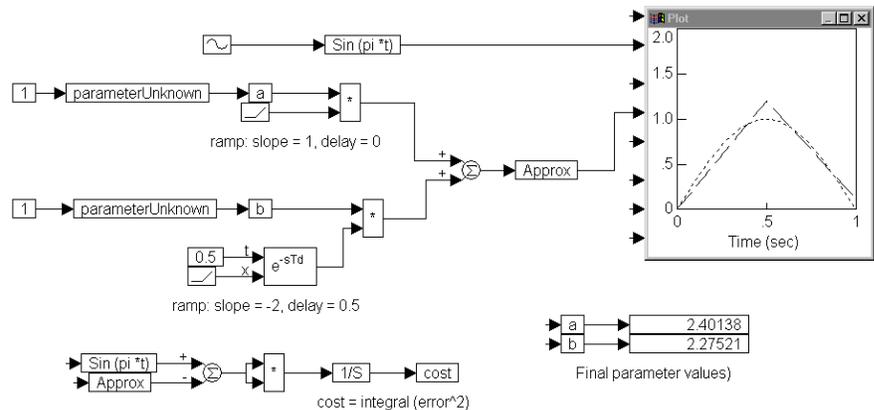

In this configuration, two `const` blocks, both set to 1, provide the initial guess values to two `parameterUnknown` blocks. The outputs of the `parameterUnknown` blocks are connected to `variable` blocks a and b , thereby defining a and b to be unknown parameters. The output of a is connected to a `*` block. A `ramp` block, with a slope of 1 and no delay, is connected to the other input of the `*` block.

To generate a ramp of slope -2 that is delayed by 0.5 sec, a `const` block set to 0.5 is wired to the time delay input of a `timeDelay` block and a `ramp` block with a slope of -2 is wired to the main signal input of the `timeDelay`. The output of the `timeDelay` block is connected to one input of a `*` block and the other input is connected to the output of b .

The outputs of the two `*` blocks are connected to a `summingJunction`, and the output of the `summingJunction` is connected to a `variable` $Approx$. The output of a `sinusoid` block, set to an amplitude of 1 and a frequency of π radians/sec, is connected to a `variable` named $Sin(\pi*t)$. The output of $Sin(\pi*t)$ and $Approx$ are connected to a `plot` block to observe the results.

The `cost` function is constructed using a `summingJunction` to calculate the difference $Sin(\pi*t) - Approx$. The output of the `summingJunction` is connected to both inputs of a `*` block to compute the squared error value. The output of the `*` block is connected to an `integrator` block to compute the integrated squared error, and the output of the `integrator` block is connected to a `cost` block, thereby defining the integrated squared error to be the cost or objective function that needs to be minimized by the optimization process. Two `display` blocks are connected to the outputs of a and b to observe the final values computed by the optimizer for the two weight factors.


Using the Fletcher-Reeves optimization method, with maximum iterations set to 300 and error tolerance of 0.0001, the values of a and b are obtained as 2.39 and 2.28, respectively.

Five segment approximation of $\sin(\pi t)$

By modifying the above problem, consider the usage of five line segments instead of two. The approximation can be written as:

$$\sin(\pi t) \cong ar(t) + br(t - 0.3) - 2cr(t - 0.5) + 3dr(t - 0.6) - 4er(t - 0.7)$$

This can be realized as shown in the diagram on the following page.

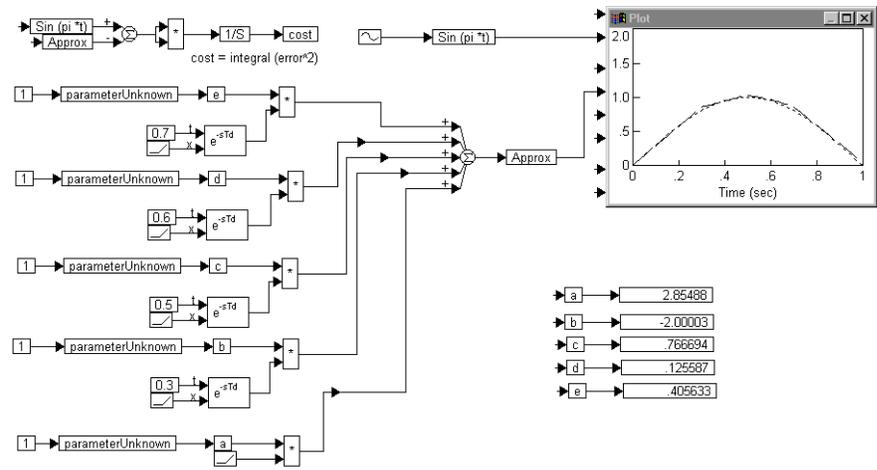

The delayed versions of ramp signals are constructed using a `ramp` block with the correct slope connected to the main signal input of a `timeDelay` block, and a `const` block with the correct delay value connected to the time delayed input of the `timeDelay` block.

Five `parameterUnknown` blocks, with initial guesses set to 1, define the variable blocks a , b , c , d , and e to be unknown parameters. The outputs of the five `*` blocks are connected to a five-input `summingJunction` block. The output of the `summingJunction` is connected to a variable named `Approx`. The output of a `sin` block with an amplitude of 1 and frequency of π radians/sec is connected to a variable named `Sin(pi*t)`. The outputs of `Approx` and `Sin(pi*t)` are connected to a `plot` block.

The cost function is evaluated by computing the integral squared error. In this case, the optimization process yields the parameter values to be $a = 2.85488$, $b = -2.00003$, $c = 0.766694$, $d = -0.125587$, and $e = 0.405633$. From the `plot` block, it is also clear that the five-segment approximation is quite close to the original sinusoid.

Troubleshooting

How do I avoid system instability?

You should limit the cost calculation because, during optimization, some parameters may be supplied with values that drive the system into instability. The resulting large cost value can cause the optimization method to fail to converge due to the limited range of floating point numbers.

When limits are used, they must occur before the integration of the square of the error so that onset of saturation is numerically reflected in the cost function. In this way, onset of saturation is reflected in the cost value and gives the optimizer a slope to follow down.

What do I set the initial tolerance to when I know little about optimal parameter values?

Use an initial tolerance value of 10 in the Optimization Properties dialog box when you know very little about the optimal parameter values; otherwise, the algorithm will take a very long time to search a short distance in parameter space.

Once optimal values are found, the `parameterUnknowns` can be reinitialized with the new optimal values and the optimization can be rerun with a lower tolerance.

Though the algorithm tries to avoid local minima, to verify that the values found are optimal, run the optimizer with different initial values supplied to the `parameterUnknowns`.

Designing Digital Filters

This chapter covers the implementation of:

- Time domain filters with tapped delay
- Time domain filters with transfer functions
- Frequency domain filters
- Interactive IIR and FIR filter design with the `transferFunction` block

Digital filter basics

A digital filter is a discrete time system that delivers an output, which is a modified version of its input.

Filters are the basic building blocks for most signal processing applications. They are typically used to extract or eliminate one or more constituent frequencies of an incoming signal.

Filters used for signal conditioning are usually designed from frequency response specifications, and are called frequency-selective filters. Frequency-selective filters operate by attenuating some frequency components of the input signal while allowing other components to pass through unchanged. For example, a low-pass filter attenuates all frequencies in the input signal that are above a specified frequency.

Filter operations

Filter operations can be represented mathematically by one or more difference equations. A general difference equation can be written as:

$$y(k) = \sum_{i=0}^M a_i x(k-i) - \sum_{j=1}^N b_j y(k-j)$$

This equation represents the relationship between the k^{th} sample of the output to the N previous values of the output, the M previous values of the input, and the current value of the input. If all the coefficients b_j are zero, the resulting filter is called a non-recursive or Finite Impulse Response (FIR) filter. Recursive filters are also known as Infinite Impulse Response (IIR) filters.


In FIR filters, the output is simply the weighted sum of the current and previous inputs. In contrast, in IIR filters, the output is the weighted sum of the current and previous inputs, and the previous outputs.

Time domain filters with tapped delay

Consider a filter described by the following recursive difference equation:

$$y(k) = x(k) - 0.2y(k-1) - 0.8y(k-2)$$

You can easily specify and implement this filter in time domain using `unitDelay` blocks. The filter input is $x(k)$ and the filter output is $y(k)$. The intermediate states are $y(k-1)$ and $y(k-2)$. The filter can be implemented as:

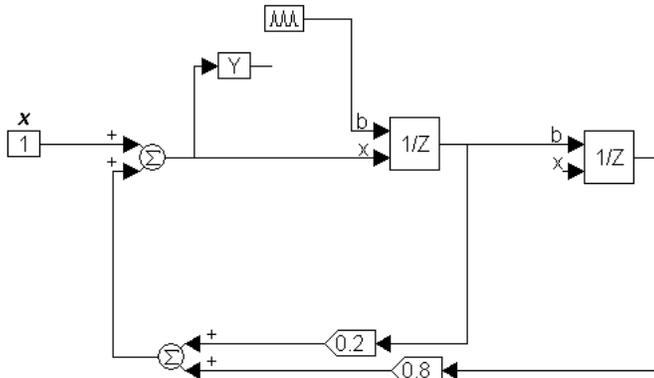

The Time Between Pulses parameter for the `pulseTrain` block must be greater than or equal to the simulation time step. An arbitrary value of 1 is assigned to input x .

Time domain filters with transfer functions


Filters can also be implemented in the time domain using the `transferFunction` block. For example, consider again the difference equation:

$$y(k) = x(k) - 0.2y(k-1) - 0.8y(k-2)$$

You can represent it in the form of a transfer function as:

$$\frac{Y(z)}{R(z)} = \frac{z^2}{z^2 + 0.2z + 0.8}$$

You can then implement the transfer function in block diagram form using the `transferFunction` block:

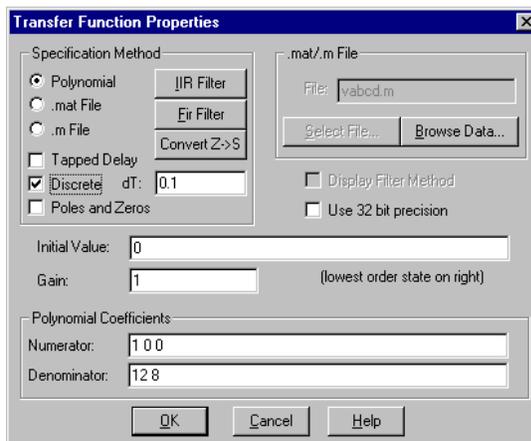

In the Transfer Function Properties dialog box, activate Discrete and set the value of `dT` to be greater than or equal to the simulation time step.

Frequency domain filter implementation

The dual nature of time and frequency domains means a filter in the time domain can be equivalently implemented in the frequency domain. Depending on the application, however, one domain is usually more convenient to work in than the other.

A recursive IIR filter can be implemented in the frequency domain by taking the product of the frequency domain equivalents of the input sequence and the filter.

$$y(k) = IDFT(Y(\omega)) = IDFT\left(x(\omega) \cdot \frac{H_a(\omega)}{H_b(\omega)}\right)$$

Here, $X(\omega)$ and $Y(\omega)$ are the Discrete Fourier Transforms (DFT) of the input and the output sequences respectively, and *IDFT* represents the Inverse Discrete Fourier Transform operation. $H_a(\omega)$ and $H_b(\omega)$ are the DFTs of the filter coefficients a_i and b_j , respectively, as given by the following difference equation:

$$y(k) = \sum_{i=0}^M a_i x(k-i) - \sum_{j=1}^N b_j y(k-j)$$

The DFT's $H_a(\omega)$ and $H_b(\omega)$ must be of the same length as $X(\omega)$ and $Y(\omega)$. To accomplish this, the filter coefficients must be zero-padded appropriately. Consequently, the frequency domain implementation is computationally inefficient and will not be discussed further.

Comparison of FIR and IIR filters

The non-recursive FIR filter has a finite memory due to the finite number of delays that can be realized in a practical implementation. FIR filters usually have superior phase characteristics. To obtain sharp cut-off characteristics, FIR filters need to be of high order.

On the other hand, a recursive IIR filter has infinite memory due to its dependence on all prior outputs. Moreover, it generally requires a significantly lower number of elements to obtain a specific cut-off characteristic. The phase characteristics of IIR filter, however, are inferior to those of FIR filters.

Interactive filter design with the transferFunction block


The first step in the digital filter design process is to specify the characteristics that you desire. The more fundamental specification would be the difference equation that is to be satisfied. Such specifications may arise directly from requirements in a signal processing problem.

However, much more common are the specifications that arise when you want to process a continuous time signal digitally, and you expect the digital filter to approximate the performance of an analog filter.

Using the `transferFunction` block you can design either IIR filters using analog prototypes or FIR filters.

IIR filter design

IIR filter design is the design of digital filters using Bessel, Chebyshev, Butterworth, or Inverse Chebyshev analog prototypes. To set up an IIR filter, click on the IIR Filter command button in the Transfer Function Properties dialog box.

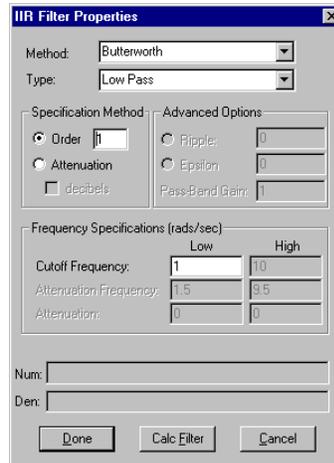

Using the IIR Filter Properties dialog box

The IIR Filter Properties dialog box lets you constrain the design through either filter order or goodness-of-fit. The analog prototypes can be subsequently converted into a digital filter using bilinear transformation.

Method: You can choose from four analog filter methods, as described below.

- **Bessel:** Bessel filters are designed using Bessel polynomials. The Bessel filters are characterized by the property that the group delay is maximally flat at the origin of the s -plane. The step response of the Bessel filters exhibits very low overshoot and both the magnitude and impulse response exhibit gaussian decay as the filter order is increased.
- **Butterworth:** Butterworth filters are characterized by the property that the magnitude characteristic is maximally flat at the origin of the s -plane. This means that all the existing derivatives of the magnitude response are zero at the origin. Butterworth Low Pass filters are all-pole designs and have an attenuation of 3 dB at the critical frequency. The filter order completely specifies the filter and can either be explicitly provided or determined from the attenuation frequency and the attenuation level desired.
- **Chebyshev and Inverse Chebyshev:** Chebyshev filters are characterized by the property that the peak magnitude of the approximation error is minimized over a prescribed band of frequencies. The magnitude is equi-ripple over the band of frequencies. For example, the magnitude oscillates between the maxima and minima of equal amplitude.

For the Chebyshev filters, the band of the frequencies over which the error is minimized is the Pass Band. For Inverse Chebyshev filters, the error is

minimized over the Stop Band. The optimality property of the Chebyshev filters guarantees that no other all-pole filter offers equal or better performance in both the Pass and Stop bands. Inverse Chebyshev filters exhibit monotonic behavior in the Pass Band (maximally flat around the zero frequency) and equi-ripple behavior in the Stop Band. The Low Pass filter has poles in the left half of the s-plane and zeros on the imaginary axis.

Type: Indicates the band pass filter type.

Specification method: The following table describes how the specification method relates to the analog filter prototypes.

Filter	Notes
Bessel	You only need to specify the order.
Butterworth	If you specify the order, VisSim determines the attenuation. If you specify the attenuation, VisSim determines the order.
Chebyshev	If you specify the order, then the order and epsilon define the filter. The attenuation is fixed once a particular order and epsilon are chosen. If you specify attenuation, VisSim determines the order based on the attenuation and epsilon. VisSim determines the order such that the attenuation and epsilon specifications are met.
Inverse Chebyshev	Whether you specify the order or epsilon, the attenuation needs to be specified. If you specify the order, VisSim computes the epsilon based upon the attenuation and the attenuation level desired. In general, as the attenuation desired for a fixed-order filter increases, the corresponding epsilon also increases. This property could be exploited to yield very narrow band filters by specifying an extremely high attenuation, along with a narrow band. If you specify epsilon, VisSim determines the order based upon the attenuation desired. VisSim determines the order such that the attenuation and epsilon specifications are met.

The order of the filter that is generated is twice the order of the filter specified. For example, if you enter 2 in the Order box for a Band Pass filter, the filter generated will have an order of 4.

Cut-off Frequency: The low and high cut-off frequencies in the Frequency Specification box define the band edges. For Low Pass and High Pass filter types, there is only one cut-off frequency. For Band Pass and Band Stop filters, the low and high frequencies are both cut-off frequencies.

Attenuation and Attenuation Frequency: The attenuation characteristics of the filter are defined by:

- **Low and high attenuation frequencies:** The attenuation frequencies are set by the Attenuation Frequency (Low) and Attenuation Frequency (High) parameters. The values you enter indicate the frequency at which the specified

attenuation level is reached.

- **Low and high attenuation levels:** The attenuation levels are set by the Attenuation (Low) and Attenuation (High) parameters. The values you enter indicate the amount by which you desire to suppress the level. An attenuation level of 100 equals a magnitude of 1/100.

For example, a Band Pass filter with band edges specified at 100 and 1000, an attenuation level of 10, and attenuation frequencies of 20 (low) and 100 (high) means that the filter gain is 0.1 at 80 and 0.05 at 1100. The epsilon (ϵ) is a measure of the attenuation level reached by the filter's magnitude characteristics at the critical frequency. Attenuation level at the critical frequency is given by:

Advanced Settings: The Epsilon and Ripple parameters provide two alternate ways of specifying the behavior of a Chebyshev filter.

There is a fluctuation (or ripple) in the amount (or attenuation gain) of the Band Pass and Band Stop. The filter order affects the size of the ripple, and the filter can be tuned to minimize that ripple.

Epsilon refers to the error between the ideal filter and the actual filter, regardless of the ripple. Minimizing the epsilon provides a best fit filter.

$$\frac{1}{\sqrt{1 + \epsilon^2}}$$

The ripple is the attenuation level at the critical frequency. Defining the epsilon completely defines the ripple.

Setting the frequency units

Frequency units can be specified in either radians per second or hertz. You set the frequency unit in the dialog box for the Simulate > Simulation Properties command.

Generating an IIR filter

When you generate an IIR filter, VisSim calculates the polynomial coefficients for the transfer function with the desired frequency characteristics.

► To generate an IIR filter

1. Click on the Calc Filter command button to calculate the filter coefficients. The coefficients will be displayed in the Num (numerator) and Den (denominator) boxes.
2. Click on the Done button to close the IIR Filter Setup dialog box and transfer the filter numerator and denominator coefficients to the Transfer Function Setup dialog box.

FIR filter design

VisSim uses the Remez Multiple Exchange algorithm to design FIR filters. FIR filters in discrete time are realized as all-zero filters and are characterized by a finite impulse response in the time domain. Because they are all-zero filters, they are particularly well suited to efficient computation by tapped delay.

FIR filter design is typically executed in the frequency domain for convenience. The filter has the desired magnitude specifications and a linear phase characteristic.

Differentiators and Hilbert transformers

You can also design differentiators and Hilbert transformers using the Remez Multiple Exchange algorithm.

Differentiators are characterized by an approximate linear magnitude response over the desired frequency range.

Hilbert transformers are characterized by a flat magnitude response and a phase of 90° over the specified frequency range. Frequency characteristics of an ideal Hilbert transformer are:

$$H(e^{j\omega}) = -j \quad 0 \leq \omega \leq \frac{\pi}{T}$$

$$= +j \quad \frac{\pi}{T} \leq \omega \leq \frac{2\pi}{T}$$

where ω is the angular frequency and T is the sampling time period.

Discrete and continuous FIR filter design

The discrete time filter design problem is treated as a weighted Chebyshev approximation problem and is solved using the Remez Multiple Exchange algorithm to compute the filter coefficients. The algorithm builds a discrete time representation of the filter.

In VisSim, the Discrete parameter in the Transfer Function Setup dialog box controls whether the generated FIR filters are discrete or continuous. When you design a discrete FIR filter, you must also specify a time step in the dT box.


To implement a continuous FIR filter, de-activate the Discrete parameter. In this case, the filter is initially designed as a discrete time filter. Bilinear transformation is subsequently used to produce a continuous time equivalent. For more information on the Remez algorithm, see *Theory and Application of Digital Signal Processing* (Prentice Hall).

Tapped delay implementation

Tapped delay is a method of transfer function implementation that has linear computational and storage requirements with respect to model order. Because most FIR filters have a tendency to be high order, it makes sense to design FIR filters with tapped delay implementation. To do so, activate Tapped Delay in the Transfer Function Properties dialog box.

Using the FIR Filter Properties dialog box

When you click on the FIR Filter command button in the Transfer Function Setup dialog box, the FIR Filter Setup dialog box is opened.

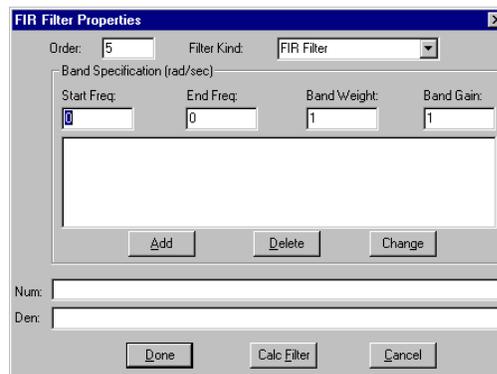

Order: The value specified in the Order box defines the filter order. Typically, higher orders yield better approximations.

Filter Kind: Indicates the type of filter to be generated. Your choices are FIR, differentiator, and Hilbert transformation. Descriptions of these filters are on page 110.

Band specification: Band specifications describe the frequency bands magnitude response characteristics of the filter. The following rules must be observed when entering band specifications:

- Frequencies are specified in hertz for discrete and continuous filters.
- For discrete filters, the frequency specified must be lower than the Nyquist frequency.
- For continuous filters, infinite frequency is indicated using the reserve word “inf.”

Start Freq and End Freq: Defines the lower and upper cut-off frequencies for each band.

Band Weight: Dictates the relative amounts of error allowed for each band. Higher weight values of a particular frequency band reflect higher sensitivity to error, where error is perceived as the difference between the actual and desired filter response. At least one band must have a weight of 1. For each of the other bands, you can use a higher or lower weight depending on the relative error that can be tolerated.

An equal weight of 1 on all bands indicates that the maximum absolute error on all bands is the same. A weight of 10 on one band and a weight of 1 on other bands implies that the former band has a maximum approximation error that is ten times less than that of the other bands.

Band Gain: Defines the desired frequency response magnitude for each band.

► **To add a band**

- Enter the band specification and click on the Add button.

The band information is added to the list box. Each row in the list box corresponds to a single band. For FIR filters, if the number of bands increases, the filter order must be increased correspondingly, to maintain the same approximation error. For differentiator and Hilbert transformers, the number of bands is limited to one. The gain on the differentiator implies the gain achieved at the end frequency. The weight in either case is optimally adjusted to give the best error characteristics.

► **To delete a band**

- Select the band to be deleted from the list box and click on the Delete button.

► **To change a band's specifications**

1. Select the band to be changed from the list box.

The band's data appears in the edit boxes.

2. Make the desired changes.
3. Click on the Change button. The band data is modified in the list box to reflect the changes.

Generating an FIR filter

The Calc Filter command button generates the appropriate filter coefficients. Before computing the filter coefficients, the algorithm computes the maximum approximation error. This error is usually referred to as delta (δ) and is defined as the weighted difference between the actual and the desired magnitude response. A band with a weight of one will have delta as its absolute approximation error, while

a band with a weight of 10 will have its absolute error 0.1 times δ . The value of δ is displayed in the message box.

► **To generate an FIR filter**

1. Click on the Calc Filter button. The coefficients are displayed in the Num (numerator) and Den (denominator) boxes. If the delta displayed is too large, increase the order of the filter and re-calculate the filter.
2. Click on the Done button to close the FIR Filter Properties dialog box and transfer the filter numerator and denominator coefficients to the Transfer Function Properties dialog box.

Working with Other Applications

This chapter covers the following information:

- Importing data from other applications into VisSim
- Exporting data from VisSim to other applications
- Exchanging matrix data with MatLab
- Using ActiveX to pass information to other applications
- Creating DDE links to other applications
- Creating look-up tables
- Exchanging information with Mathcad 2000
- Saving diagrams in Windows Metafile Format (WMF) for inclusion in other applications

Importing basics

VisSim uses the `import` block to import information from many different file types generated by other applications. These include data files (.DAT), MatLab and MatLab-like files (.MAT and .M), and 8-bit or 16-bit sound files (.WAV).

The `import` block reads data points from the specified input file into the system model and translates them into scalar, vector, or matrix output signals. The `import` block can receive up to 50 scalar inputs and an unlimited number of vector or matrix input. The data can be either fixed interval or asynchronous.

The `import` block is particularly useful for comparing experimental data with simulated results and for inserting trial control data from an external source.

Setting up the input file

The input file can contain a header line to describe the separation of data points. The following table describes the header line format:

For this type of interval	Use this format
Fixed interval	#I=start-time, end-time, increment
Asynchronous interval	#T=number (time-column)


Importing data

Importing data involves dragging an `import` block into the work area and setting up the block to reference the input file.

► To import data

1. From the Signal Producer category in the Blocks menu, drag an `import` block into the work area.
2. Choose Edit > Block Properties.
3. Click the mouse over the `import` block.

The Import Properties dialog box appears.

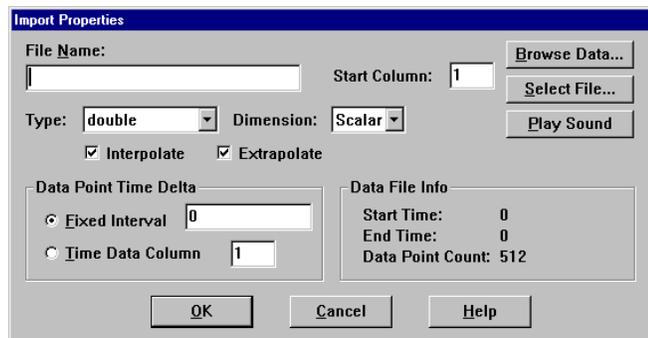

4. Select the import parameters. (See the descriptions below for more information about each parameter.)
5. Click on the OK button, or press ENTER.

Using the Import Properties dialog box

The Import Properties dialog box provides the following options:

File Name: Indicates the file to be used as input to VisSim. You can specify .DAT, .M, .MAT, or .WAV files. When you specify a .WAV file, you can play the sounds you imported by clicking on the Play Sound button.

If you do not know the name or location of the input file, click on the Select File button to locate and choose a file.

To browse or edit the input file, click on the Browse Data button after you select a file.

Start Column: In a multi-column file, you can choose the column that corresponds to the top-most connector tab. The default value 1 corresponds to the first column.

Type: Indicates the type of data to be imported.

Dimension: Controls the dimensionality of the output signals. The choices are scalar, vector, and matrix.

Interpolate: Interpolates between two data points, instead of using the last known data value. Thus, if the data point is 5 at t_1 , and 15 at t_2 , then at $t_{1.5}$, the data point is 10 with interpolation, and 5 with no interpolation.

Extrapolate: Infers the next unknown data point based on the difference between the last two known data points.

Data Point Time Delta: Indicates the time interval between data points in the input file. If the input file was generated by VisSim using the `export` block, VisSim automatically reads the time interval information from the file header and sets the parameter accordingly. You have the following choices:

- **Fixed Interval:** Indicates that data points occur in fixed intervals. Enter the interval in the corresponding box. This is the default setting.
- **Time Data Column:** Indicates that data points occur in irregular time intervals. Enter the column containing the time data points in the corresponding box. Valid column numbers are 1 through 16.

Data File Info: Provides read-only information about the imported data. The Start Time and End Time fields indicate when VisSim starts and stops recording data. The Data Point Count field indicates the maximum number of data points to be read into VisSim. If the input file was generated in VisSim using the `export` block, VisSim automatically reads the data point count from the file header and sets the field accordingly. The maximum number of data points that can be read into VisSim is 250 million.

Exporting basics

The export block writes signals to an output file in .DAT, .M, .MAT, or .WAV file format. The export block can send up to 50 scalar outputs and an unlimited number of vector or matrix output. The output file can subsequently be used as input to VisSim or to a variety of other programs, such as MatLab and Microsoft Excel. The following information is written to the file:

- Data points that represent signal values. Data points are stored as ASCII text.
- Time interval information that applies to the data points.


Exporting data

Exporting data involves dragging an export block into the work area and setting up the block to reference the output file.

► To export data

1. From the Signal Consumers category in the Blocks menu, drag an export block into the work area.
2. Choose **E**dit > **B**lock Properties.
3. Click the mouse over the export block.

The Export Properties dialog box appears.

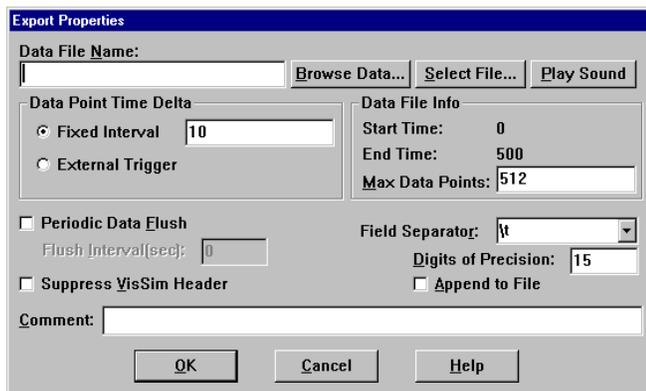

4. Select the export parameters. (See the descriptions below for more information about each parameter.)
5. Click on the OK button, or press ENTER.

Using the Export Properties dialog box

The Export Properties dialog box provides the following options:

Data File Name: Indicates the name of the export file into which data points are to be written. You can type the file name directly into this box or select one using the Select File button. If you do not specify a data file, VisSim writes the data points to a file using the same name as your current block diagram. VisSim applies the .DAT extension to the file and stores it in your current directory.

You can export data in .DAT, .M, .MAP, .MAT, and .WAV file formats. The following special considerations apply to map files and wave files:

- If you want to create an output file to be used as input to the map block, you must specify the .MAP extension.
- You can create 8-bit and 16-bit sound files. You specify the bit count in the Digits of Precision box. Provided you have the appropriate hardware configuration and software drivers installed, you can preview the sound by clicking on the Play Sound button.

If you click on the Browse Data button, the file specified in the Data File Name box is opened for you to examine or edit.

Data Point Time Delta: Controls how VisSim writes the time interval information to the data file. You have the following choices:

- **Fixed Interval:** Indicates that data points occur in fixed intervals. The default interval used will be taken from the simulation step size. You can specify a different interval, however, it should be a multiple of the simulation step size, because the export block does not interpolate. Data is only exported at integral multiples of the simulation step size. This automatic adjustment is invisible when it occurs, which means it is not reflected in either the export block's dialog box or the data file header. You can see the adjustment only when you open the data file.

If you import the output file into a simulation, you should edit the file header to reflect the interval at which the data was actually exported. The import block will interpolate as needed, retaining the timing of the original simulation run. Use the Browse Data button to open the data file for editing. The format of the data header file should be as follows:

#I = start-time, end-time, increment

The default is Fixed Interval.

- **External Trigger:** Indicates that data will be recorded based on the state of the external trigger input. When External Trigger is activated, VisSim adds a round input connector tab to the export block. A zero value on the trigger inhibits

data recording. A value of 1 causes a data point to be recorded. Valid column numbers are 1 through 16, inclusive.

Periodic Data Flush and Flush Interval: When activated, Periodic Data Flush writes the data in the export buffers to the specified data file at intervals established with Flush Interval.

Suppress VisSim Header: Suppresses writing the data header to the export file. Suppressing the data header may be necessary if the export file is to be imported into a software product other than VisSim.

The header information indicates whether the data is fixed or variable interval; the valid time range over which the data is collected; the actual fixed interval; and the time column for variable interval data. The following formats are used:

Fixed Interval	<i>#I = start-time, end-time, increment</i>
Variable Interval	<i>#T= number (time-column)</i>

Field Separator: Specifies the column separation character in the export file, which allows for compatibility with other applications. Recognized column separators are tabs, new lines, spaces, commas, semi-colons, and colons.

Digits of Precision: Specifies (for .DAT, .M, .MAT files) the maximum number of significant digits printed regardless of the decimal point. The default is 15.

For .WAV files, use Digits Of Precision to indicate whether the sound file is 8-bit or 16-bit. Enter 8 for 8-bit sound files or 16 for 16-bit sound files.

Append to File: Appends the exported data to the end of a specified file, instead of re-writing the file at the start of each new simulation run. This parameter is useful for multi-run applications, such as data acquisition, Monte Carlo simulations, and neural network training

Comment: Specifies a comment that is placed at the beginning of the exported data file. A comment is limited to 180 characters.

Data File Info: Provides read-only information about the export file. The Start Time and End Time fields indicate when VisSim starts and stops writing data points to the export file. These settings are obtained from the current settings of Range Start and Range End in the Simulation Properties dialog box.

The Max Data Points field indicates the maximum number of data points to be written to the export file. The default is 512 data points. The maximum number of data points that can be written to file is 250 million.

VisSim-MatLab interface basics

The VisSim-MatLab interface allows you to access MatLab to perform matrix calculations and transfer variables between the two applications. VisSim provides three interface blocks:

- **The MatLab Expression block**, which invokes MatLab to calculate a general matrix expression.
- **The MatLab Read Variable block**, which reads a variable from the MatLab workspace into VisSim.
- **The MatLab Write Variable block**, which writes a variable into the MatLab workspace.

To use the VisSim-MatLab interface, MatLab version 5+ must be installed on your computer. All the blocks are located under the Blocks > MatLab Interface.

Evaluating MatLab expressions

The MatLab Expression block evaluates MatLab expressions using the MatLab engine. The MatLab Expression block accepts any number of matrix inputs and produces a single matrix output.

With MatLab expressions, you can more easily execute matrix operations. To illustrate a simple element multiply using the MatLab Expression block, consider the following example:

```
>> a = [1 2 3 4]
```

```
a =
```


```
    1 2 3 4
```

```
>> b = 22
```


```
b =
```

```
    22
```

Here, two matrices a and b are defined in the MatLab workspace. To multiply the matrices by a four element VisSim matrix ([1 2 3 4]), you set up your diagram as shown below:

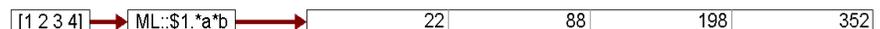

Setting up a MatLab expression: The MatLab Expression Block Properties dialog box lets you set up your expression:

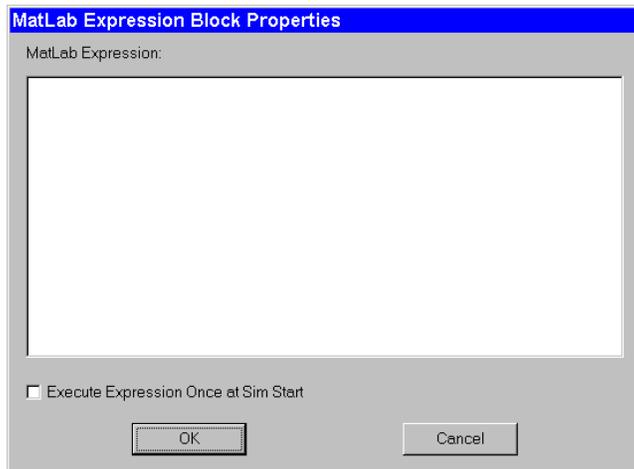

MatLab Expression: Indicates a MatLab expression. A MatLab expression consists of one or more MatLab tokens. You enter expressions according to the syntax rules for the MatLab language. If you're unfamiliar with the language, refer to the MatLab documentation.

The MatLab Expression block accepts any number of matrix inputs and produces a single matrix output. You reference the inputs in the expression using the notation \$1 for input 1, \$2 for input 2, and so on.

Execute Expression Once at Sim Start: Gets the expression result from MatLab for the first time step.

Reading and writing MatLab variables


To read and write MatLab variables, use the MatLab Read Variable and MatLab write variable blocks. For example:



Here, the MatLab variable a is read into VisSim. The display block shows that a is a 1-by-4 matrix.

To write a variable to MatLab:

[2 2;2 2] → ML::a

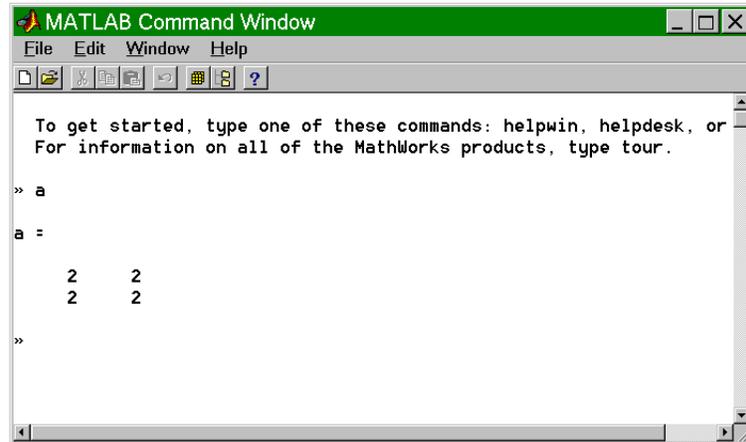


This time, the variable a is a 2-by-2 matrix, as shown in the MatLab command window.

► **To read MatLab variables into VisSim**

1. Choose Tools > MatLab Connect.
2. Click on the MatLab Read variable block.
3. Click the mouse in the workarea.
4. Choose Edit > Block Properties and click on the MatLab Read variable block.

The MatLab Read Variable Block Properties dialog box appears.

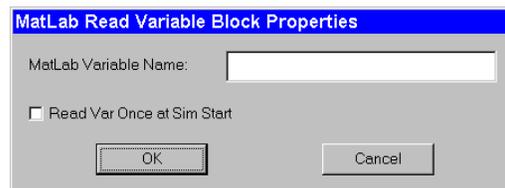


5. Do the following:
 - In the MatLab Variable Name box, enter the name of the variable to be read into VisSim.
 - Activate the Read Var Once at Sim Start option to retrieve the variable value at the first time step of the simulation.
 - Click on the OK button, or press ENTER.
6. To verify that the data has been properly passed to VisSim, do the following:
 - Feed the MatLab Read Variable block into a display block.
 - Choose Simulate > Go, or press the  button

► **To write variables into MatLab**

1. Choose Tools > MatLab Connect.
2. Click on the MatLab write variable block.
3. Click the mouse in the workarea.
4. Choose Edit > Block Properties and click on the MatLab write variable block.

The MatLab Write Variable Block Properties dialog box appears.

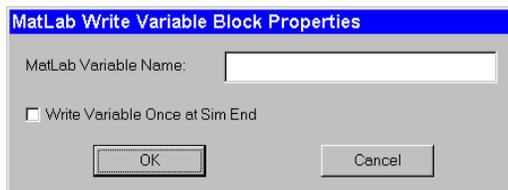

5. Do the following:
 - In the MatLab Variable Name box, enter the name of the variable to be written to MatLab.
 - Activate the Write Variable Once at Sim End option if you want to send the variable value at the first time step of the simulation.
 - Click on the OK button, or press ENTER.
6. Feed matrix input into the MatLab write variable block.
7. Choose Simulate > Go, or press the  button.

8. To verify that the variable has been passed to MatLab, do the following:
 - Go to the MatLab command window.
 - Type the name of the variable or “who”.

Transmitting data using ActiveX

VisSim offers the `ActiveX read` and `ActiveX write` blocks for real-time, interprocess communication. Using these blocks, you can exchange data with other applications that support ActiveX. The `ActiveX read` block receives data from the Active X container; the `ActiveX write` block sends data to an ActiveX container.


Required files

To register properly, the VisSim ActiveX control requires the following files:

File	Location
MFC42.DLL	\WINDOWS\SYSTEM
MSVCRT.DLL	\WINDOWS\SYSTEM
OLEAUT32.DLL	\WINDOWS\SYSTEM
VSMIPCD.DLL	\VISSIM45

Using the ActiveX read block

The `ActiveX read` block links source information in an application file to a VisSim block diagram. The source application must be an ActiveX container.

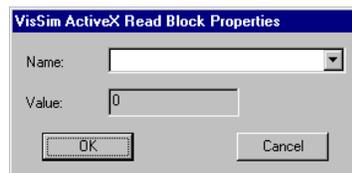

Name: Indicates the name of the ActiveX control. Click on the DOWN ARROW to choose from existing names.

Value: Indicates the current value for the ActiveX control. This is a read-only box.

► To create an ActiveX link to read data into VisSim

Follow this general procedure when you want to read data into VisSim. Because each application may handle ActiveX controls differently, see that application’s documentation for specific instructions.

After you have established your link between the application and VisSim, run the simulation to begin transmitting data.


1. In the application, insert the VisSim ActiveX control or OLE object.

The following element appears in the workspace:

VisSim::IPC var

2. To manipulate the data:
 - Start Microsoft Visual Basic. In many applications, you can start Visual Basic from the application. For example, in Microsoft Excel 97, click on Tools > Macro > Visual Basic Editor.
 - Write the appropriate subroutine to manipulate data that is written into the ActiveX container. For information on writing subroutines, see the Microsoft Visual Basic documentation, go to the Object Browser for a list of available functions, and see page 129 for descriptions of the VisSim-specific functions.
3. Return to the application and invoke the VisSim ActiveX control properties dialog box. For most applications, just click the right mouse button over VisSim::IPC var and select VisSim IPC Control Object; then click on Properties.

The VisSim IPC Control Properties dialog box appears.

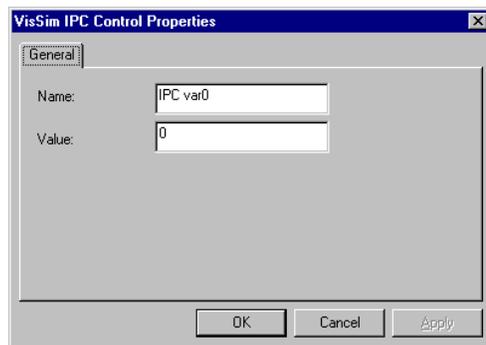


4. Do the following:
 - In the Name box, enter the name of the ActiveX control.
 - In the value box, enter a value for the control. Typically, the value is set dynamically using Microsoft Visual Basic.
 - Click on the OK button, or press ENTER.

5. Start VisSim and open the appropriate block diagram.
6. Click on Blocks > Real Time > ActiveX read.
7. Click the mouse where you want the ActiveX read block to be inserted.
8. Choose Edit > Block Properties.
9. Click on the ActiveX read block.
10. In the Name box, click on the DOWN ARROW and select the name of the ActiveX control that you specified in the corresponding VisSim IPC Control Properties dialog box (step 3).
11. Click on the OK button, or press ENTER.
12. Run the simulation.

Using the ActiveX write block

The ActiveX write block links source information in a VisSim block diagram to another application. The destination application must be an ActiveX container.

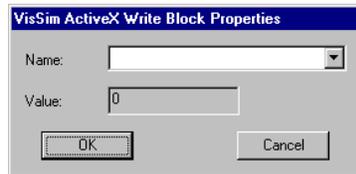


Name: Indicates the name of the ActiveX control. Click on the DOWN ARROW to select from a list of active names, or type in a new name.

Value: Indicates a value for the signal. Typically, the value is set dynamically by the application.

► To create an ActiveX link to write data to an ActiveX container


1. Start VisSim and open the appropriate block diagram.
2. Click on Blocks > Real Time > ActiveX write.
3. Click the mouse where you want the ActiveX write block to be inserted.
4. Choose Edit > Block Properties.
5. Click on the ActiveX write block.

The VisSim ActiveX Write Block Properties dialog box appears.

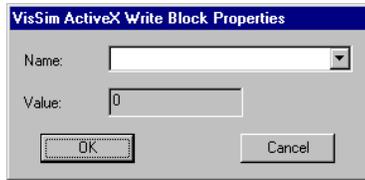

6. Do the following:
 - In the Name box, click on the DOWN ARROW and enter the name of the ActiveX control.
 - Click on the OK button, or press ENTER.
7. Switch to the destination application and open the file in which you want to create a link.
8. Insert the VisSim ActiveX control or OLE object.
9. Invoke the VisSim IPC Control Properties dialog box. For most applications, you click the right mouse button over VisSim::IPC var and select VisSim IPC Control Object; then click on Properties.

The VisSim IPC Control Properties dialog box appears.

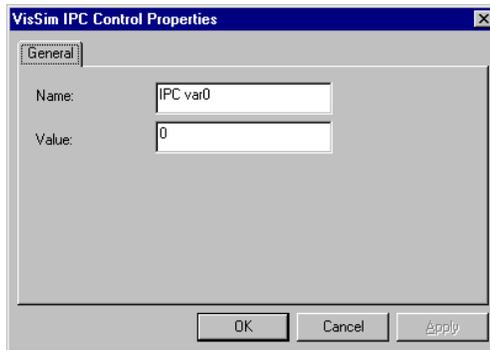

10. Do the following:
 - In the Name box, enter the name of the ActiveX control that correspond to the ActiveX control name in VisSim (see step 6).
 - In the value box, do not type anything. Typically, the value is set dynamically using Microsoft Visual Basic.
 - Click on the OK button, or press ENTER.
11. To manipulate the data:

- Start Microsoft Visual Basic. In many applications, you can start Visual Basic from the application. For example, in Microsoft Excel 97, click on Tools > Macro > Visual Basic Editor.
- Write the appropriate subroutine to manipulate data that is written into the ActiveX container. For information on writing subroutines, see the Microsoft Visual Basic documentation, go to the Object Browser for a list of available functions, and see page 129 for descriptions of the VisSim-specific functions.

12. Return VisSim and run the simulation.

VisSim-specific ActiveX functions

VisSim supports two functions for ActiveX design:

- `getlpcValue ()`
- `setlpcValue ()`


The `getlpcValue` function gets the 64-bit floating point value associated with the named data item. The `setlpcValue` function sets the 64-bit floating point value associated with the named data item.

ActiveX example

The following example demonstrates how to send data to Excel, manipulate the data and return it to VisSim in real time.

In the VisSim window, the ActiveX `write` block named *level* writes a sinusoidal signal to Excel. The value is displayed in cell C3. Cell C4 displays the value of C3 plus 2. The sum is sent back to VisSim through the ActiveX `read` block named *po0*.

A subroutine, shown in the Microsoft Visual Basic window, gets the data from *level* and displays it in cell C3; then writes the data from C4 to *po0*. This simple subroutine only updates the value of C4 and sends the data to VisSim each time you click the mouse on a different cell.

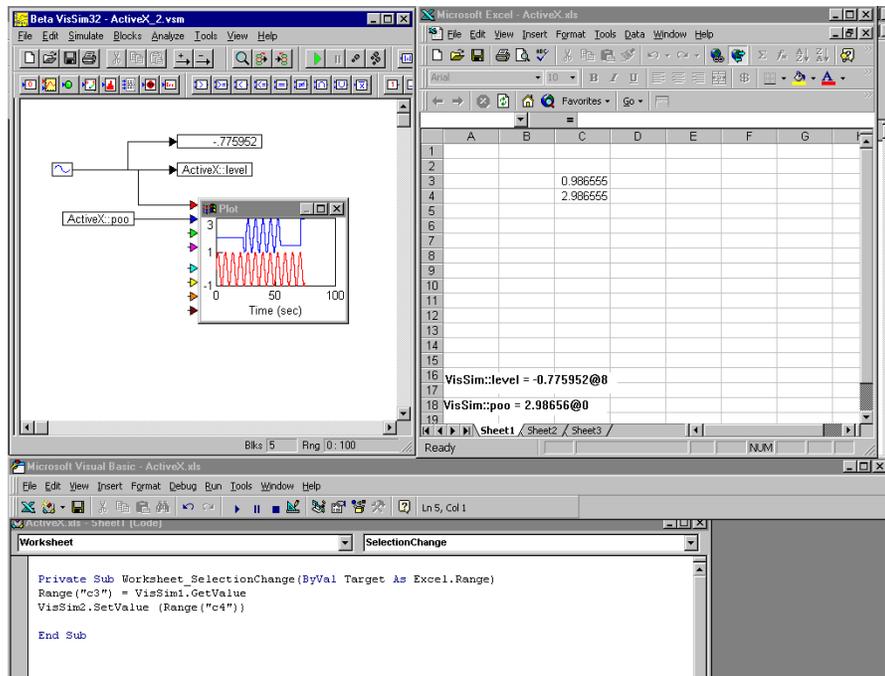

DDE basics

By creating dynamic data exchange (DDE) links, you can share information in one file with several other files, and you need only maintain the original file; the other files are updated automatically. For example, if you store data in a Microsoft Excel spreadsheet, you can use that data in a VisSim block diagram. When you update the spreadsheet, VisSim automatically updates the data in the block diagram when you run a simulation.

You create DDE links by copying a selection from one application (referred to as the source or server) and pasting it into another one (referred to as the destination or client) using the Paste Link or Paste Special command. Before you can create a link, the source file must be saved to disk.

VisSim offers three blocks for creating DDE links:

- **The DDEsend block**, which links source information in a VisSim block diagram to another application, such as a Microsoft Excel or Visual Basic file.
- **The DDEReceive block**, which links source information in an application file to a VisSim block diagram.

- **The DDE block**, which establishes a two-way link: it acts as both the source (sender) and destination (receiver). For example, a DDE block can send data to a Visual Basic program to work on, and then receive the updated data back from Visual Basic.

You can create DDE links only between VisSim and other Windows applications that support DDE linking. Some applications do support DDE links, but do not support creating the links by copying and pasting selections. When this is the case, you can still create a link by entering the link address directly to both the source and destination files.

Creating an app-to-VisSim link with DDEreceive

Follow this procedure when the source information for the link is contained in an application other than VisSim.

► To create a DDE link from an application into VisSim

1. In the application, select the information you want linked to your block diagram, and from the Edit menu, choose the Copy command.


The selected information is copied to the Clipboard.

2. Switch to VisSim and open the block diagram in which you want to create a DDE link.
3. Do one of the following:
 - a) Choose Edit > Paste Link.
 - b) Position the pointer where you want the DDEreceive block to appear and click the mouse.

-Or-

 - a) From the Blocks menu under DDE, drag a DDEreceive block into the work area.
 - b) Choose Edit > Block Properties and click the mouse over the DDEreceive block.

4. The DDE Receive Link Configure dialog box appears.

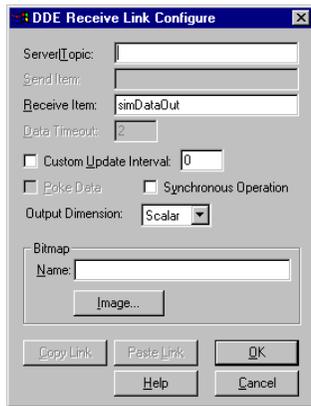

5. Click on the Paste Link button and choose the options you want. (For information on the options, see the descriptions below.)
6. Click on the OK button, or press ENTER.
7. Choose Simulate > Go to update the link.

Using the DDE Receive Link Configure dialog box

The DDE Receive Link Configure dialog box provides the following options:

Server|Topic: Indicates the name of the source application (server) and the type of information (topic). For example, Excel|FOO.XLS indicates an Excel spreadsheet named FOO.

If the source application supports Copy Link, VisSim automatically fills in this parameter when you click on the Paste Link button.

If the source application does not support Copy Link, you must enter the source application name and topic name directly to this box. Use the same names that the source file uses as its server and topic names. Separate the names with a pipe (|) character.

Send Item: This option does not apply to the DDEreceive block.

Receive Item: Indicates a name that references cells, cell ranges, values, or a field of data in the source file. For example, R1C1 references the information in the cell occupying row 1, column 1 of an Excel spreadsheet.

If the source application supports Copy Link, VisSim automatically fills in this parameter when you click on the Paste Link button.

If the source application does not support Copy Link, you must enter the same name that the source file uses as its item name.

Data Timeout: This option does not apply to the DDEreceive block.

Custom Update Interval: Indicates how often the DDEreceive block requests information from the linked application. If you enter the value 1, DDEreceive requests information once per sec; if you enter 10, DDEreceive requests information once every 10 sec; and so on. If you do not enter a value, DDEreceive updates at each time step of the simulation by default.

Poke Data: This option does not apply to the DDEreceive block.

Synchronous Operation: Suspends the simulation until the DDEreceive block receives a message with updated data.

The DDEreceive block has a buffer that contains the current value of the block. If the block is not synchronous, at every time step, DDEreceive supplies whatever value is in its buffer. When Synchronous Operation is turned on and the DDEreceive block has not received updated data since the last time step, DDEreceive waits until it receives a new message with updated data.

Output Dimension: Controls the dimensionality of the data exiting the DDEreceive block. The choices are scalar, vector ($n \times m$), or matrix ($m \times n$).

Bitmap: Applies a bitmap image to the DDEreceive block. You can type the file name directly into the Name box or select one by pressing on the Select Bitmap button.


Creating a VisSim-to-app link with DDEsend

Follow this procedure when the source information for the link is contained in a block diagram.

► To create a DDE link from a VisSim block to another application

1. In VisSim, wire a DDEsend block to the output of the block that contains the information you want linked to another application.
2. Choose Edit > Block Properties and click the mouse over the DDEsend block.

The DDE Send Link Configure dialog box appears.

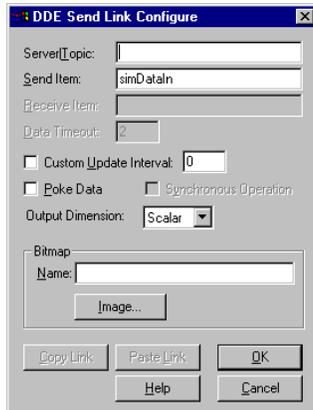

3. In the Send Item box, enter a name. The default name is simDataIn.

Note: When the block diagram contains multiple links to other applications (that is, the diagram contains more than one DDEsend block), the name you enter in the Send Item box must be unique to that block diagram. If it's not unique, VisSim will not pass the correct information to the application.

4. Choose the options you want. (For information on the options, see the descriptions below.)
5. Click on the Copy Link button.
6. Click on the OK button, or press ENTER.
7. Switch to the destination application and open the file in which you want to create a link.
8. Position the insertion point where you want to insert the information.
9. Choose Edit > Paste Link.

Note: Some applications have a Paste Special command instead of a Paste Link command. Refer to the application's documentation for information on linking.

10. Switch back to the block diagram, and choose Simulate > Go to update the link.

Using the DDE Send Link Configure dialog box

The DDE Send Link Configure dialog box provides the following options:

Server|Topic: Indicates the name of the source application (server) and the type of source information (topic). This parameter defaults to *VisSim|name-of-block-diagram*. The server name must always be VisSim.

Send Item: Indicates a name for the source information. The destination file uses this name in its item field. To maintain multiple DDE links from a single block diagram, the name you enter must be unique.

The information in this box defaults to `simDataIn`.

Receive Item: This option does not apply to the `DDEsend` block.

Data Timeout: This option does not apply to the `DDEsend` block.

Custom Update Interval: Overrides the time step interval for sending data to the destination application. If you enter the value 1, `DDEsend` sends data once per sec; if you enter 10, `DDEsend` sends data once every 10 sec; and so on. If you do not enter a value, `DDEsend` sends data at each time step of the simulation. You can use Custom Update Interval only when Poke Data is activated.

Poke Data: Sends data to the destination application at every time step, regardless of whether it is ready to receive the data. When Poke Data is not activated, data is sent only when the destination application requests it.

You can override the time step interval for sending data with the Custom Update Interval.

Output Dimensions: Controls the dimensionality of the data entering the `DDEsend` block. The choices are scalar, vector ($n \times m$), or matrix ($m \times n$).

Bitmap: Applies a bitmap image to the `DDEsend` block. You can type the file name directly into the Name box or select one by pressing on the Select Bitmap button.

Creating a two-way link with DDE

The DDE block is a combination of the `DDEreceive` block and `DDEsend` block: the DDE block can both send and receive information. As a server, the DDE block passes source information to another application to work on. As a client, the DDE block receives updated information back from the application.

► To create a two-way DDE link


Use this procedure when you want VisSim to fill in the name of the server and topic pair of the destination application.

1. Create the link to pass information from the application to VisSim:
 - a) In the application, select the information you want linked to your VisSim block diagram, and choose Edit > Copy.
The information is copied to the Clipboard.
 - b) Switch to VisSim and open the block diagram in which you want to link the copied information.
 - c) From the Blocks menu under DDE, drag a DDE block into the work area.

- d) Choose **E**dit > **B**lock Properties and click the mouse over the DDE block.
The DDE Link Configure dialog box appears.
 - e) Choose the Paste Link button and the additional options you want. (For information on the options, see the descriptions below.)
 - f) Click on the OK button, or press ENTER.
2. Create the link to pass information from VisSim back to the application:
- a) In VisSim, wire the block (containing the information you want linked to the other application) to the DDE block.
 - b) Choose **E**dit > **B**lock Properties and click the mouse over the DDE block.
The DDE Link Configure dialog box appears.
 - c) In the Send Item box, enter a unique name.
 - d) Choose the Copy Link button and the additional options you want. (For information on the options, see the descriptions below.)
 - e) Click on the OK button, or press ENTER.
 - f) Switch back to the application file.
 - g) Move the insertion point to where you want to insert the information.
 - h) Choose Edit > Paste Link.
Note: Some applications have a Paste Special command instead of a Paste Link command. Refer to the application's documentation for information on linking.

Using the DDE Link Configure dialog box

The DDE Link Configure dialog box provides options for establishing a DDE link, specifying the source information, indicating the time-out interval, and more.

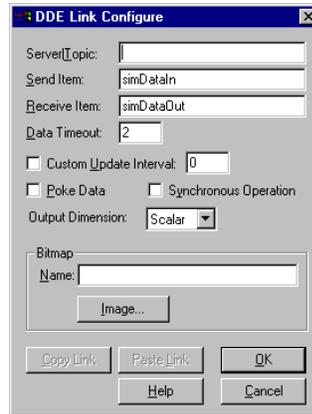

Server|Topic: Indicates the name of the application (server) and the type of information (topic) to which you're establishing a link. For example, VBDDE|NNET sends data to and receives data from the application called VBDDE on the NNET topic. Use the pipe (|) character to separate the server from the topic.

Send Item: Indicates a name for the source information. The destination file uses this name for its item field. To maintain multiple DDE links from a single block diagram, the name you enter must be unique.

The information in this box defaults to simDataIn.

Receive Item: Indicates a name that references cells, cell ranges, values, or a field of data in the source file. For example, R1C1 references the information in the cell occupying row 1, column 1 of an Excel spreadsheet.

If the source application supports Copy Link, VisSim automatically fills in this parameter when you click on the Paste Link button.

If the source application does not support Copy Link, you must enter the same name that the source file uses as its item name.

Custom Update Interval: Overrides the time step interval for sending and receiving information. If you enter 1, DDE requests and sends information once per sec; if you enter 10, DDE requests and sends information once every 10 sec; and so on. If you do not enter a value, DDE updates at each time step of the simulation.

Data Timeout: Indicates the time, in sec, that VisSim will wait to receive simulation time step data from the client. The default is two sec.

Poke Data: This option does not apply to the DDE block.


Synchronous Operation: This option does not apply to the DDE block.

Output Dimension: Controls the dimensionality of the data entering and exiting the block. The choices are scalar, vector ($n \times m$), or matrix ($m \times n$).

Bitmap: Applies a bitmap image to the DDE block. You can type the file name directly into the Name box or select one by pressing on the Select Bitmap button.

Creating DDE links with applications that do not support Copy Link and Paste Link

A DDE link consists of a three-part link address contained in both the source (server) and destination (client) files. An example of such an address is shown below:

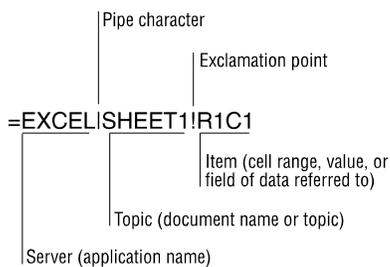

Most applications, including VisSim, automatically create the link address using the Copy Link and Paste Link commands. If, however, the application with which you're linking supports DDE but not the Copy Link and Paste Link commands, you can still create a DDE link by typing the link address directly into the source and destination files. Just make sure that the server, topic, and item names are the same in source and destination files.

Refer to the descriptions of the [DDE](#), [DDEreceive](#), and [DDEsend](#) blocks earlier in this chapter for information on how to enter these fields directly into the blocks. Refer to the documentation for the other application for entering link addresses.

Creating look-up tables

To create a look-up table, VisSim relies on the map block. There are two ways to set up a map block:

- Insert a map block directly into your diagram and choose the appropriate set-up parameters from its Properties dialog box
- Use the Look-up Table Wizard

The Look-up Table Wizard automates the process of setting up a map block by guiding you through the steps for specifying a data source, activating interpolation or extrapolation, and choosing the data file's dimensionality.

The purpose of the Look-up Table Wizard and map block is to allow you to encapsulate nonlinear behaviors through direct measurements. You can, for example, use laboratory data or a manufacturer's component performance data directly in a simulation.

Specifying the data source

Whether you use the Look-up Table Wizard or set up the map block manually, you must create the data source, typically referred to as a map file. A map file is a multi-column ASCII data file from which the input signals are mapped to the desired output domain. Signals can be separated by commas, spaces, tabs, vertical bars, colons, semicolons, or slashes.

A map file can be a one-, two-, or three-dimensional file. The following rules apply to each file:

- **One-dimensional map files:** A one-dimensional map file has one independent variable, but can have from one to 16 dependent variable outputs. The first column is an independent variable range. The numbers in the independent variable column must be either increasing in order or decreasing in order, but not both. Each additional data column you supply in the map file yields an additional dependent variable. Use the Edit > Add Connector command to add an output connector for each dependent variable column in the resulting map block.

A one-dimensional matrix is limited to 8,000 rows. Lines that are prefaced with a semi-colon (;) are treated as comments.

- **Two-dimensional map files:** A two-dimensional map file has two independent variables and one dependent variable output. The first row contains the domain points for the first independent variable; and the first column (excluding the column member in row 1) represents the second independent variable. The position (1,1) must be left blank.

Like one-dimensional mapping, the independent variable values must be either monotonically increasing or decreasing.

A two-dimensional matrix is limited to 90 rows by 90 columns (or, a maximum of 89 * 89 data points).

Lines that are prefaced with a semi-colon (;) are treated as comments.

An example of a two-dimensional map file is shown below.

	<i>10</i>	<i>11</i>	<i>20</i>	<i>25</i>
-5	-5	-2	1	20
2	2	5	7	10
3	3	7	8	5
4	4	9	10	2
5	5	11	15	-5

In the above matrix, the first row represents the domain points of the first independent variable, and the first column represents the domain points of the second independent variable. The entries represent the dependent variable values at the corresponding values of independent variables 1 and 2. For example, for $x_1 = 10$, $x_2 = 2$, the output is 2; for $x_1 = 10.5$, $x_2 = 2.5$, the output is 4.25.

- **Three-dimensional map files:** A three-dimensional map file has three independent variables and one dependent variable output. The format of the first seven lines is as follows:

Line	Format
1	Starts with #3D
2	Indicates the size of dimension 1
3	Indicates the interpolation points of dimension 1
4	Indicates the size of dimension 2
5	Indicates the interpolation of dimension 2
6	Indicates the size of dimension 3
7	Indicates the interpolation of dimension 3

Lines 8 through n are elements of dimension 3 matrices of (dimension 1 columns) * (dimension 2 rows). Lines that are prefaced with double hyphens (--), double slashes (//), or commas (,) are treated as comments.

Dependent variables are linearly interpolated for independent variable values between map points, and linearly extrapolated for values beyond the bounds of the table using the last two points in the table. This feature can be used for static function approximation with measured data or for device calibration, such as thermocouple-voltage-to-temperature conversion.

Using the Look-up Table Wizard

► To create a look-up table


1. Choose **T**ools > **I**mport > **L**ookup Table.

The Get Data dialog box appears.



2. In the Lookup Table Data box, enter the name of the map file to be used as input. You can type the name directly into the text box, or select one using the Select Data File button.
3. Click on the Next button, or press ENTER.


The Interpolation/Extrapolation dialog box appears.

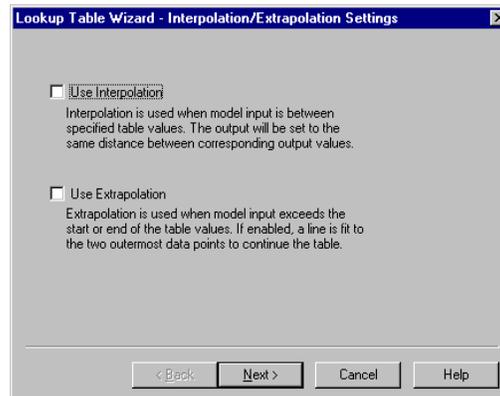


- Under Interpolation Settings, make the desired selections.

If you select	This occurs
Interpolation	Allows dependent variables to be linearly interpolated for independent variable values between data points.
Extrapolation	Allows dependent variables to be linearly extrapolated for values beyond the bounds of the table using the last two data points in the table.

- Click on the Next button, or press ENTER.
- The Map Dimensions dialog box appears.

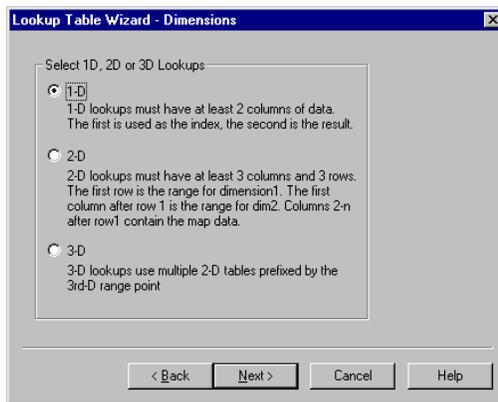

- Choose the dimensionality of the map file.
 - Click on the Next button, or press ENTER.
- The Create Map Block dialog box appears.

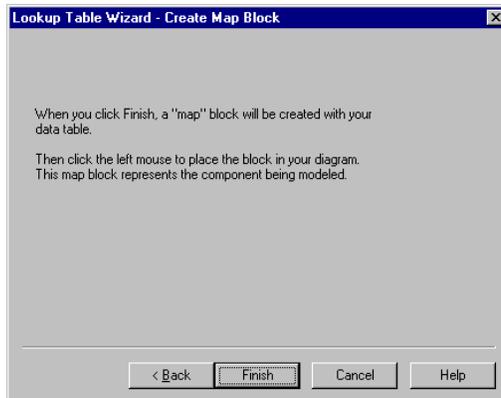

9. Click on the Finish button, or press ENTER.

VisSim displays the current block diagram. Attached to the pointer is a dashed rectangle representing the newly-created map block.

10. Click the mouse to insert the map block in your diagram.

Using the map block

You can set up a look-up table or change an existing table without using the Look-up Table Wizard. You can alternatively insert a map block directly into your diagram and specify the data source, map dimensionality, and whether data is interpolated or extrapolated through the block's Properties dialog box.


► To insert a map block

1. Choose **Blocks > Nonlinear**.
2. Click on the map block.
3. Click in the work area where you want to insert the map block.

► To set up, view, or change map block parameters

1. Choose **E**dit > **B**lock Properties.
2. Click the mouse over the map block.

The Map Properties dialog box appears.

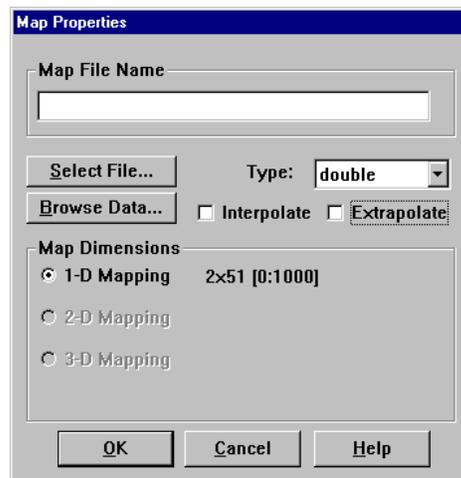

3. In the Map File Name box, enter the name of the map file. You can type in a file name directly into this box or select one using the Select File button. To open the specified file with the default text editor, click on the Browse Data button

4. Under Map Dimensions, select the dimensionality of the map file.

- **1-D Mapping:** Indicates 1-D mapping capability.

The numbers to the right of the 1-D Mapping parameter refer to the dimensionality and range of the map vector. For example, 10x1[1:100] represents a 1-D table with 10 elements ranging from 1 to 100.

Lines that begin with a semi-colon (;) are treated as comments.

- **2-D Mapping:** Provides simultaneous mapping for two independent variables.

Lines that begin with a semi-colon (;) are treated as comments.

The numbers to the right of the 2-D Mapping parameter refer to the dimensionality and range of the map vector. For example, 10x50[10:20, -10:10] represents a 2-D table with 10 columns and 50 rows, where the minimum column is 10, the maximum column is 20, the minimum row is -10, and the maximum row is 10.

- **3-D Mapping:** Provides simultaneous mapping of three independent variables. Lines that begin with a double hyphen (--), semi-colon (;), or double slash (//) are treated as comments.

5. In the Type box, click on the down arrow and select the type of data read in from the map file.

6. Select one, both, or neither of the following options, depending on how you want the data interpreted.

Choose this	To do this
Interpolate	Allows dependent variables to be linearly interpolated for independent variable values between data points. This feature can be used for static function approximation with measured data or for device calibration, such as thermocouple-voltage-to-temperature conversion.
Extrapolate	Allows dependent variables to be linearly extrapolated for values beyond the bounds of the table using the last two data points in the table. This feature can be used for static function approximation with measured data or for device calibration, such as thermocouple-voltage-to-temperature conversion.

7. Click on the OK button or press ENTER.


Examples

1-D look-up table

Consider a hypothetical electrical motor that accepts DC input voltage in the range of 0 to 40 V. Furthermore, assume that the current drawn by the motor is equivalent to that of an ideal 3Ω resistor. The motor manufacturer has specified the following current-torque curve for the motor:

Current (A)	Torque (N-M)
0.	0.
.3	0.
.68	10.
Current (A)	Torque (N-M)
1.15	11.8
2.16	12.77
2.86	13.04
3.7	12.86
4.36	12.66
5.74	11.84
6.73	11.18
10.5	8.62
11.5	8.62

Assuming that the voltage is applied at the rate of $1.2 t$, where t is time in sec. This system can be realized as shown on the next page.

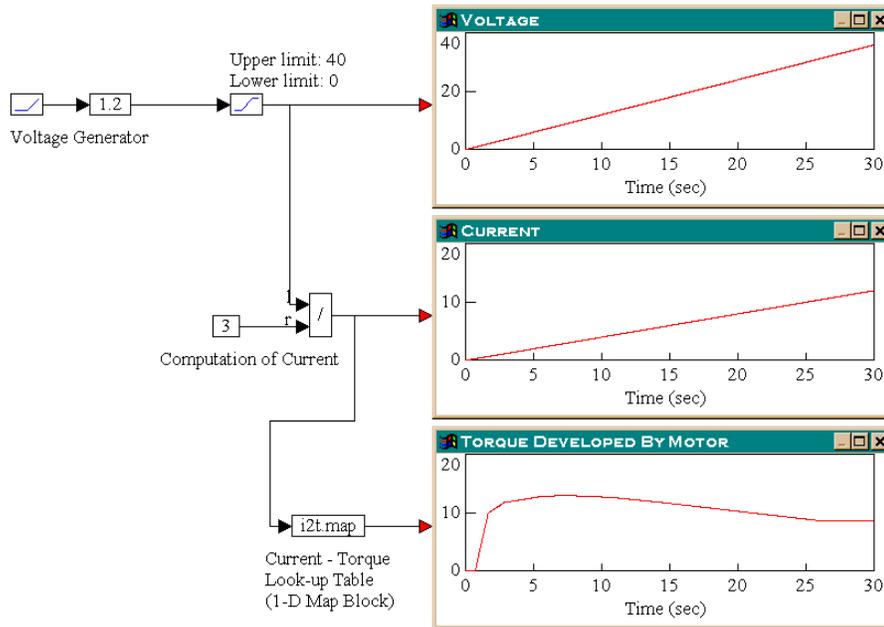

To generate the voltage, wire a `ramp` block, used to generate simulation time t , to a `gain` block set to 1.2. The output of the `gain` block passes through a `limit` block with its lower and upper limits set to 0 and 40, respectively. The output of the `limit` block is the voltage applied to the motor and is monitored in the upper plot.

To compute the current, divide the output of the `limit` block by a constant value 3. The current is monitored in the middle plot.

A `map` block points to the data file `I2T.MAP`, with two columns of data containing the current-torque curve for the motor. (The sample data used in this example is shown in the table above.)

The `map` block monitors the input value and compares it with the data in the first column. For example, if the input value is 3, the `map` block recognizes that the input is between the two points 2.86 and 3.7 in the input column. The `map` block performs a linear interpolation between the corresponding values in the second column, namely 13.04 and 12.86. Consequently, for an input of 3, the output of the `map` block is:

$$13.04 + (3 - 2.86) * (12.86 - 13.04) / (3.7 - 2.86)$$

which is equal to 13.01.

2-D look-up table

Using the same hypothetical motor described above, make the following assumptions:

- The torque developed by the motor is a function of the current, as well as the operating temperature of the motor.
- The current-temperature-torque has the following profile:

Current (A)	Torque (Temperature Dependent) (N-M)			
	Torque at 30° C	Torque at 40° C	Torque at 50° C	Torque at 60° C
0.	0.	0.	0.	0.
0.3	0.	0.	0.	0.
0.68	10	9.5	9.10	8.7
1.15	11.8	11.21	10.74	10.27
2.16	12.77	12.13	11.62	11.19
2.86	13.04	12.39	11.87	11.35
3.7	12.86	12.22	11.70	11.18
4.36	12.66	12.03	11.52	11.01
5.74	11.84	11.25	10.77	10.30
6.73	11.18	10.62	10.17	9.73
10.5	8.62	8.19	7.84	7.50
11.5	8.62	8.19	7.84	7.50


- The motor temperature profile is given by $T_m = (30 + t)^0$ C, where T_m is the motor temperature and t is time in seconds.
- A data file named 2DI2T.MAP is formatted as shown below:

	30.	40.	50.	60.
0.	0.	0.	0.	0.
0.3	0.	0.	0.	0.
0.68	10	9.5	9.10	8.7
1.15	11.8	11.21	10.74	10.27
2.16	12.77	12.13	11.62	11.19
2.86	13.04	12.39	11.87	11.35
3.7	12.86	12.22	11.70	11.18

4.36	12.66	12.03	11.52	11.01
5.74	11.84	11.25	10.77	10.30
6.73	11.18	10.62	10.17	9.73
10.5	8.62	8.19	7.84	7.50
11.5	8.62	8.19	7.84	7.50

The values of the temperature are entered in row 1, starting with column 2. The values of current are entered in column 1, starting with row 2. The values of the current and the temperature are shown in bold type for clarity.

Using a 2D map block, the system simulation can be realized as:

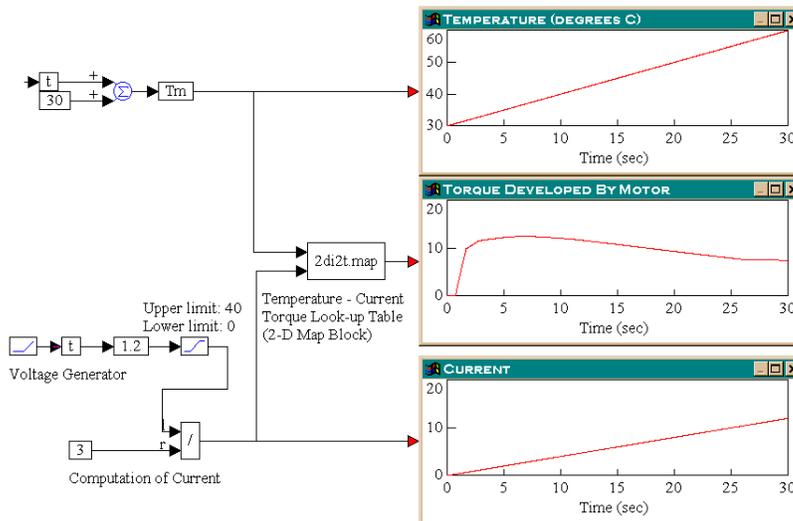

In addition to the blocks used in Example 1, a variable t , defined as simulation time, is connected to the output of the ramp block. A map block is used to access 2DI2T.MAP. Because this data file is a 2-D look-up table, the map block accepts two inputs: temperature (the independent variable in the first row) and current (the independent variable in the first column).

To generate the temperature profile, a const block of 30 is added to variable t , fed through another variable T_m , and monitored in the top plot block.

As before, the outputs of the map block, and the / block are monitored to observe the profiles of the motor torque and current, respectively.

During simulation, when the temperature is $\geq 30^\circ\text{C}$ and $< 40^\circ\text{C}$, the second column of data is used to generate the torque profile. Similarly, for temperatures that are

$\geq 40^\circ\text{C}$ and $< 50^\circ\text{C}$ or $\geq 50^\circ\text{C}$ and $< 60^\circ\text{C}$, data in the third and fourth columns is used respectively.

3-D look-up table

The structure and usage of a VisSim diagram that includes a 3-D look-up table is very similar to a 2-D look-up table. The major difference is in the specification of the data file to be used by the 3-D map block. As an example, consider the following data file:

```
#3D_EX.MAP
--Table_Caxial_0 5 10 3
--Mach No. breakpoints
5
    1.05  1.10  1.20  1.35  1.50
--Angle_of_Attack breakpoints
10
    4.00  6.00  8.00 10.00 12.00 14.00 16.00 18.00 20.00 22.00
--Angle_of_Sideslip breakpoints
3
    0.00  2.00  4.00
--
-- Angle_of_Sideslip = 0.00


    0.493  0.533  0.550  0.529  0.496
    0.492  0.532  0.549  0.529  0.497
    0.491  0.530  0.547  0.529  0.497
    0.488  0.528  0.545  0.529  0.497
    0.485  0.525  0.541  0.529  0.497
    0.481  0.520  0.536  0.529  0.497
    0.474  0.513  0.528  0.530  0.498
    0.465  0.504  0.517  0.530  0.498
    0.452  0.488  0.482  0.530  0.498
    0.430  0.439  0.444  0.531  0.499
--
-- Angle_of_Sideslip = 2.00
    0.493  0.533  0.550  0.529  0.496
    0.492  0.532  0.549  0.529  0.497
    0.490  0.530  0.547  0.529  0.497
    0.488  0.528  0.544  0.529  0.497
```

```

0.485  0.525  0.541  0.529  0.497
0.480  0.520  0.535  0.529  0.497
0.474  0.513  0.528  0.530  0.498
0.465  0.503  0.516  0.530  0.498
0.451  0.487  0.480  0.530  0.498
0.429  0.437  0.442  0.531  0.499
--
-- Angle_of_Sideslip = 4.00
0.493  0.532  0.549  0.529  0.496
0.491  0.531  0.548  0.529  0.497
0.490  0.530  0.546  0.529  0.497
0.487  0.527  0.543  0.529  0.497
0.484  0.524  0.540  0.529  0.497
0.479  0.519  0.534  0.529  0.497
0.473  0.512  0.527  0.530  0.498
0.463  0.502  0.514  0.530  0.498
0.449  0.485  0.476  0.530  0.498
0.426  0.433  0.437  0.531  0.499
--

```

This data corresponds to one of the aerodynamic coefficients of a projectile in motion, traveling at speeds ranging from 1 to 1.5 mach. The value of the coefficient varies with three parameters: mach number, angle of attack, and angle of sideslip. Assuming sinusoidal variations in all three parameters, a diagram that uses this data file can be realized as shown below.

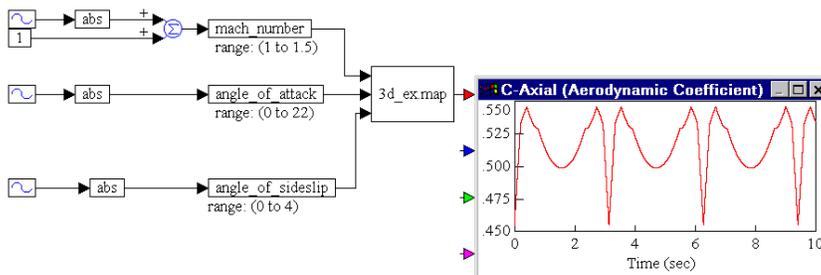

Three `sin` blocks produce sinusoidal variations of amplitudes 0.5, 22, and 4 for the three variables `mach_number`, `angle_of_attack`, and `angle_of_slideslip`. Three `abs` blocks ensure that the values attained by the variables are strictly positive. A constant value of 1 is used to obtain a variation in the range (1, 1.5) for `mach_number`.

The outputs of the three `variable` blocks are fed into a `map` block that points to the map file `3D_EX.MAP`, whose contents are shown above. The resulting value of the C-axial aerodynamic coefficient are shown in the `plot` block.

Exchanging information with Mathcad 2000

The primary purpose of embedding a Mathcad document is to run a simulation in VisSim that depends on one or more Mathcad calculations. These calculations could be performed:

- To provide initial conditions for a VisSim simulation (evaluated once at the beginning)
- As a part of the simulation (evaluated at every simulation step)
- Using the end results of a VisSim simulation as inputs (evaluated only once at the end)

Use of the `inx` and `outx` keywords

The fundamental means of setting up the exchange of data between a VisSim simulation and an embedded Mathcad document is the use of the keywords `inx`, and `outx` in the embedded Mathcad document.

- The keywords `in0`, `in1`, `in2`,... refer to the input connector tabs on the an embedded Mathcad document, where `in0` corresponds to the top input connector.
- The keywords `out0`, `out1`, `out2`,... refer to the output connector tabs on the an embedded Mathcad document, where `out0` corresponds to the top output connector.

Note that all keywords must be lowercase.

Embedding Mathcad documents


You can embed existing objects from files or insert new blank objects and create the information right in your diagram. To do so, you use the `Insert Mathcad Object` command in the `Tools` menu.

The following procedures explain how to embed objects in a VisSim diagram. For a step-by-step example on embedding a Mathcad document in a VisSim diagram, see the example under [“Examples,”](#) later in this document.

► To embed an existing Mathcad document

1. Choose `Tools > Insert Mathcad Object > From File`.

The Find Mathcad Document dialog appears.

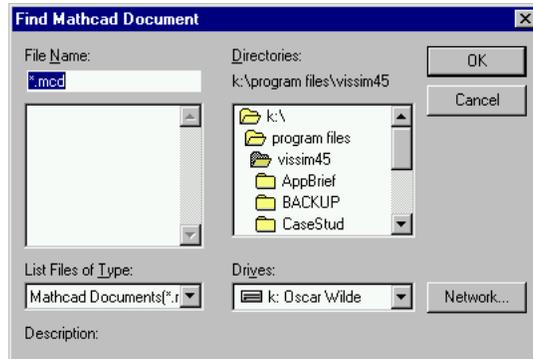

2. Find and select the Mathcad document (.MCD) you want to embed in your VisSim diagram.
3. Click on the OK button, or press ENTER.

► **To embed a new Mathcad document**

1. Choose Tools > Insert Mathcad Object > New.

VisSim opens a Mathcad window in which to create an embedded Mathcad document.

2. Create the document. For information on using Mathcad, see your Mathcad documentation.
3. Click outside the Mathcad document to return to VisSim.

Editing and updating Mathcad documents

You can edit an embedded Mathcad document directly from VisSim, or you can invoke Mathcad as a separate, stand-alone application. To update the embedded Mathcad document and return to the VisSim environment, simply click outside the Mathcad document.

► **To edit an embedded Mathcad document directly from VisSim**

1. Do one of the following:
 - Double-click on the embedded Mathcad document.
 - Or-
 - Click the right mouse button on the embedded Mathcad document.
 - From the drop-down menu, choose Mathcad Object > Edit.

VisSim opens a Mathcad window with the Mathcad document.

2. Make the changes you want. For information on using Mathcad, see your Mathcad documentation.
 3. Click outside the Mathcad document to update the Mathcad document and return to VisSim.
- **To invoke Mathcad as a stand-alone application**
1. Click the right mouse button on the embedded Mathcad document.
 2. From the drop-down menu, choose Mathcad Object > Open.
VisSim opens a Mathcad window with the Mathcad document.
 3. Make the changes you want. For information on using Mathcad, see your Mathcad documentation.
 4. To update the Mathcad document and return to VisSim, do the following:
 - Choose File > Update
 - Choose File > Exit and Return to.

Scaling and cropping embedded Mathcad documents

You can resize an embedded Mathcad document by scaling or cropping it. When you scale an embedded Mathcad document, the text within the block is also scaled. When the dimensions of the embedded Mathcad document are much larger than the text, you can adjust the size of the block by cropping its sides. The size of the text within the block is not affected by this action.

- **To scale an embedded Mathcad document manually**
1. Click on the embedded Mathcad document.
 2. Position the pointer over one of the handles on the block.
 3. Hold down the mouse button and drag until the block is the size you want.
 4. Click outside the Mathcad document to return to VisSim.
- **To scale an embedded Mathcad document using the Mathcad Properties dialog box**
1. Click right mouse button over the embedded Mathcad document.
 2. In the drop-down menu, choose Properties.
 3. The Mathcad Properties dialog box appears.
 4. Click on the View tab.
 5. To scale the block with respect to its original size, activate the Relative To Original Size option.
 6. In the Scale box, select the scaling factor.

7. Click on the Apply button to preview the new size.
8. Click on the OK button to make the change permanent.

► **To crop an embedded Mathcad document manually**

1. Double-click on embedded Mathcad document.
2. Position the pointer over one of the handles on the block.
3. Hold down the mouse button and drag until the block is the size you want.
4. Click outside the Mathcad document to return to VisSim.

► **To reset the size of an embedded Mathcad document**

You can use this method when you cropped the embedded Mathcad document or when you scaled it manually.

1. Click the right mouse button on the embedded Mathcad document.
2. From the drop-down menu, choose Reset Size.

Examining the properties of an embedded Mathcad document

The Mathcad Properties dialog box lists the size of your embedded Mathcad document, and allows you to control the general appearance of the document in your VisSim diagram. You can also use the Mathcad Properties dialog box to scale the corresponding embedded document. This feature is described on page [153](#).

► **To access general information about an embedded Mathcad document**

You can display the size and location of the embedded Mathcad document.

1. Click right mouse button over the embedded Mathcad document.
2. In the drop-down menu, choose Properties.
3. The Mathcad Properties dialog box appears.
4. Click on the General tab.

► **To control the appearance of an embedded Mathcad document**

You can display the size and location of the embedded Mathcad document.

1. Click right mouse button over the embedded Mathcad document.
2. In the drop-down menu, choose Properties.
3. The Mathcad Properties dialog box appears.
4. Click on the View tab.
5. Do the following:

To	Do this
Display the contents of the embedded Mathcad document	Activate the Display As Editable Information option.
Display a Mathcad icon	Activate the Display As Icon option. Click on the Change Icon button to select the type of icon to be displayed.

- Click on the OK button.

Changing the number of connector tabs on an embedded Mathcad document


To add or delete connectors to an embedded Mathcad document, follow the standard procedures for adding or deleting connectors on VisSim blocks, as described on page 23.

Troubleshooting

This section contains information that may help you work through problems you encounter.

Server Busy message

Occasionally, when VisSim loads the Mathcad interface OLE control for the first time, you may experience a delay and the appearance of the following message:

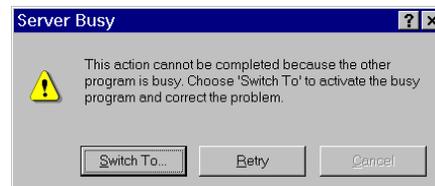

Just click on the Retry button several times. Once the control is fully loaded, you will not see this message for the rest of your session.

Incorrect results

The most common reason for getting unexpected results when using an embedded Mathcad document is due to input/output mismatch caused by incorrect numbering.

When you are entering an expression or equation in an embedded Mathcad document, it is important to remember that the input and output keywords begin with the index of 0, and not 1. In other words, the first (that is, top) input connector on the embedded Mathcad document is represented in the Mathcad expressions by the

keyword `in0`; the second input by the keyword `in1`, and so on. Similarly on the output side, the first (that is, top) output of the embedded Mathcad document takes the value defined by the keyword `out0`; the second output takes the value of `out1`, and so on.

Examples


This section describes:

- A step-by-step procedure to perform a basic arithmetic operation in Mathcad.
- A pre-configured room temperature control system using Mathcad.


Setting up a simple calculation in an embedded Mathcad document

This example passes two values to Mathcad. Mathcad performs a simple arithmetic operation and returns the result to VisSim. This example is included in the `../MATHCAD_EXAMPLES` directory and is named `SIMPLE_EXAMPLE.VSM`.


1. Start VisSim.
2. Choose **T**ools > Insert Mathcad **O**bject > New.
VisSim creates a Mathcad object window. The environment automatically changes to the standard Mathcad editing work-area.
3. In the Mathcad object window, type the following expression:
`out0 := in0 + in1`
Important: The keywords `out0`, `in0`, and `in1` must be lowercase.
4. Click outside the Mathcad object window to return to the VisSim editing environment. The menus automatically change back to VisSim menus.
5. Attach one more input connector tab to the embedded Mathcad document.

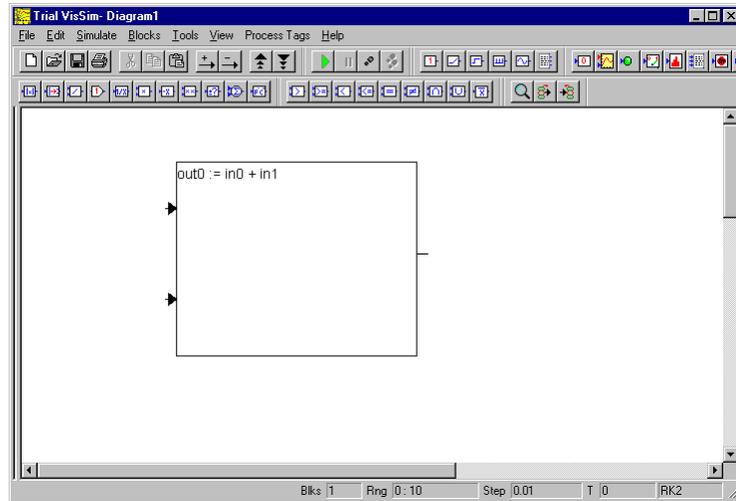

6. Wire two `const` blocks (Blocks > Signal Producer > `const`) to the inputs on the embedded Mathcad document and set their parameter values to 3 and 4; then wire a `numerical display` block (Blocks > Signal Consumer > `display`) to the output on the embedded Mathcad document to see the result.

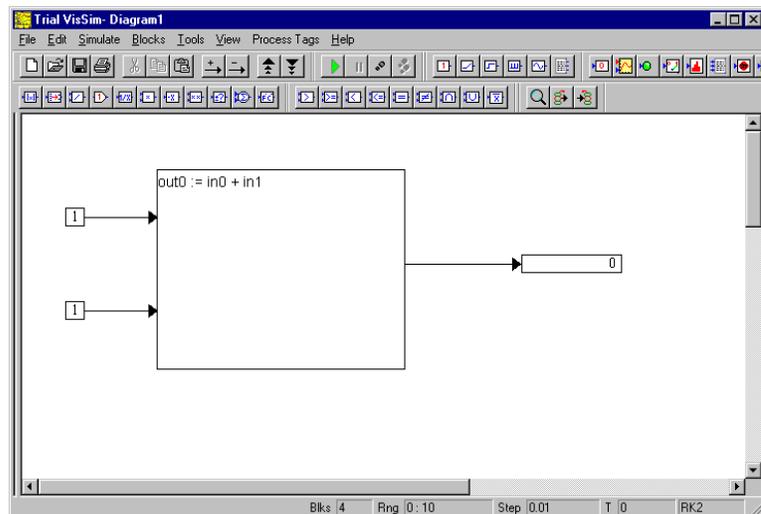


7. Choose Simulate > Simulation Properties.
The Simulation Properties dialog box appears.
8. Set the Start and End values to 0 and 1, respectively.

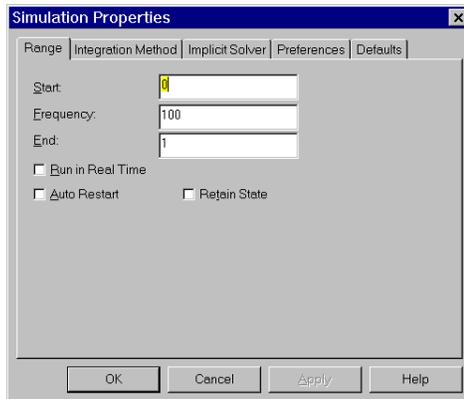

9. Click on the OK button, or press ENTER.
10. Choose Simulate > Go, or click on the Run button in the toolbar. You can alternatively press the F5 key on your keyboard.

VisSim passes the values of the constants you have selected to Mathcad via the embedded Mathcad document, obtains the computed output value, and displays it in the display block.

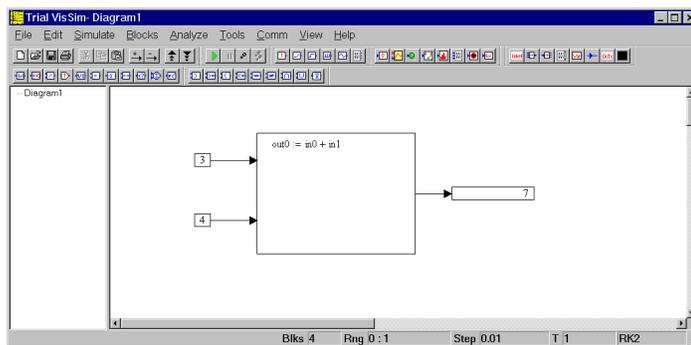

Room temperature control: ROOMCTRL_MC.VSM

This model simulates the closed-loop temperature control of a room, with calculations being performed simultaneously in VisSim/Comm and Mathcad based on a bi-directional exchange of computational results at every simulation step.

The controller itself is a simple yet realistic ON-OFF controller with deadband. Most commercial and domestic room temperature controllers use this implementation. In this simulation, the deadband is implemented in an embedded Mathcad document,

and the rest of the simulation including numerical integration and dynamic room model with randomly varying number of occupants, is implemented in VisSim.

WMF basics

One of the most common image file formats for the PC is the Windows Metafile Format (WMF). WMF files are vector files that look good when printed on high resolution devices.

When VisSim saves a diagram as a WMF file, it uses the number of colors available to your monitor. In general, you can use the generated WMF file in any application that recognizes this file format; however, in some cases, if you have set the size of your monitor's color palette to greater than 256 colors, you may experience trouble printing or displaying the WMF file from the other application. In the unlikely event that this occurs, simply change the size of your color palette to 256 colors and resave the diagram.

Saving a diagram as a WMF file

When you save a VisSim diagram as a WMF file, VisSim saves only the current level of the diagram and strips away common window elements (including title bars, menu bars, and scroll bars). You should also keep in mind that the WMF file is a picture of the diagram; therefore, none of the block diagram information is preserved.


► To save a VisSim diagram as a WMF file

1. Go to the level of the diagram that you want saved as a WMF file.
2. Choose **File > Save As Metafile**.
3. In the Save In box, enter or select the directory in which the WMF file is to be saved.
4. In the File Name box, enter a name for the WMF file.
5. Click on the OK button, or press ENTER.

Inserting a WMF file in another application

To insert a WMF file in another application, you use a command like Import, Insert, or Picture. For example, to insert a WMF file in a Word document, you use the Picture command under the Insert menu. Similarly, to insert a WMF file in a Pagemaker document, you use the Place command under the File menu. Because each application has its own unique method for inserting WMF files, you must read that application's documentation for its particular procedure.

Below is an example of a WMF file of a VisSim diagram that has been inserted in a Word document.

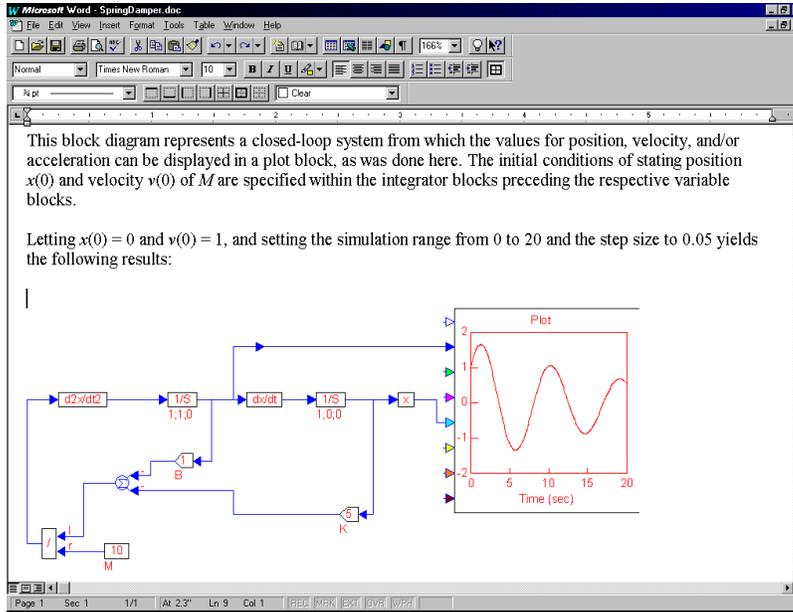

Working with Large Diagrams

This chapter covers the following information:

- Creating model hierarchy
- Embedding blocks
- Adding block diagrams
- Using variables to pass signals
- Using path aliases to reference files
- Tracking diagram progress
- Protecting your work

Creating model hierarchy

Compound blocks allow you to encapsulate one or more blocks in a single block. This gives you more flexibility in constructing and editing your block diagram models, especially if they are complex. The top-level blocks display major component connectivity, leaving the underlying levels to describe the logic of each component.

Compound blocks also encourage a modular approach to large model construction by allowing you to design and test functionally independent subcomponents concurrently. Then using the `embed` block or the `File > Add` command (as described on pages 173 and 174), you can incorporate each subcomponent back into the large system diagram.

If your compound block contains sensitive information, you can prevent other users from viewing the compound block by locking it closed. You can alternatively apply read-only attributes to the compound block. This lets other users view the contents

of the compound block but denies them the ability to edit it. Applying protection to compound blocks is described on page 185.

If you choose to identify a compound block by name, you can change the name with the Edit > Block Properties command, as described on page 17.

This section describes how to:

- Create compound blocks
- Drill into compound blocks
- Automatically configure compound blocks
- Trigger the execution of compound blocks
- Check the number of blocks encompassed in compound blocks
- Hide compound blocks
- Configure pictures on compound blocks
- Label connector tabs on compound blocks
- Dissolve compound blocks

Creating a compound block

When you create a compound block, VisSim attaches connector tabs to the compound block for each of the following situations:

- All unsatisfied connector tabs on the internal blocks (except global variables)
- All satisfied connector tabs to external blocks

You can have as many levels as you want in a compound block. (The number is limited only by your system resources.)

► To create a compound block

1. Select the blocks to be encapsulated.
2. Choose Edit > Create Compound Block.
3. Under compound name, enter a name. Avoid using the dot (.) character in the name; VisSim uses it to separate compound block names in the title bar. The default name is *Compound*.
4. Click on the OK button, or press ENTER.

Drilling into a compound block

The process of moving through and displaying the levels of a compound block is referred to as *drilling*. As you drill into a compound block, VisSim adds the name of the compound block to the title bar to help you keep track of where you are.

► To drill down

1. Point to a compound block.
2. Click the right mouse button.
3. If the compound block is password-protected, enter the password in the Password dialog box, then click on the OK button, or press ENTER.



The compound block remains unlocked until you close the diagram.

► To pop up

1. Point to empty screen space.
2. Click the right mouse button.

Automatically configuring a compound block

By using a compound block's Auto Dialog dialog box, you can speed up tasks, such as setting, viewing, selecting, and changing user-defined parameter values encapsulated in the compound block.

The Auto Dialog dialog box presents all the `dialogConstant` blocks in the compound block, along with their current values. The changes you make in the Auto Dialog dialog box are automatically applied to the specific blocks. This means you no longer have to drill into a compound block and change each block parameter.

By displaying only `dialogConstant` blocks, the Auto Dialog dialog box helps ensure that only relevant information is exposed to other users. This greatly reduces the chances of accidental or unnecessary changes to the compound block.

There are three basic steps in creating Auto Dialog dialog boxes:

1. Insert and set-up the `dialogConstant` blocks for the Auto Dialog dialog box.
2. Encapsulate the `dialogConstant` blocks in a compound block.
3. Activate the Auto Dialog dialog box.

Using dialogConstants to create Auto Dialog dialog boxes

A `dialogConstant` block is the only type of block that can appear in an Auto Dialog dialog box. A `dialogConstant` block has three properties — a name, a data type, and a value — that control how the `dialogConstant` block is presented in the Auto Dialog box.

You can have multiple `dialogConstant` blocks with different data types within a single Auto Dialog dialog box. VisSim automatically adjusts the size of the Auto Dialog dialog box to accommodate all the `dialogConstants`.


► To insert a dialogConstant block

1. Choose **B**locks > Signal Consumers; then click on the `dialogConstant` block.
2. Click the mouse where you want to insert the `dialogConstant` block.

► To set up dialogConstant block properties

1. Choose **E**dit > **B**lock Properties.
2. Click on the `dialogConstant` block.

The following dialog box appears:

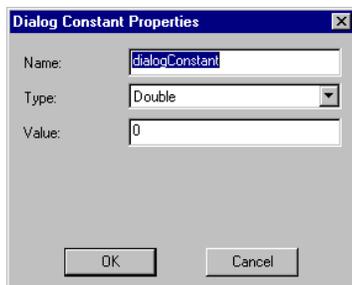

3. Make the following entries:
 - In the Name box, enter the name to be displayed on the block and in the resulting Auto Dialog dialog box. When you do not supply a name, VisSim uses *dialog constant*.
 - In the Type box, click on the DOWN ARROW and select the appropriate data type. The data type controls how the data associated with the `dialogConstant` block will be displayed in the Auto Dialog box. Your choices shown in the table on the following page.

Type	Definition	How the data is displayed
Integer List	Integer data	Creates a drop-down list box. To create entries into the list box, enter them in the Value text box, as described below.
Double	Double precision floating point data	Creates a static text box in which numeric values can be entered. To create an entry in the text box, enter it in the Value text box, as described below.
Boolean	Boolean	Creates a check box that can be turned on or off. To set its initial value, enter it in the Value text box, as described below.

- In the Value box, enter the following:

If the data type is	Enter
Integer List	Each entry for the drop-down list on a separate line. Entries appear in the drop-down list in the order they are entered in the Value box. The default entry is the first entry.
Double	A numeric value that will appear in the static text box.
Boolean	1 to turn on check box option; 0 to turn off check box option.

Once you insert a `dialogConstant` block, you can change its value through the Auto Dialog dialog box.

Encapsulating `dialogConstant` blocks in a compound block

You can insert `dialogConstant` blocks into existing compound blocks, or create a compound block from existing `dialogConstant` blocks. In addition, `dialogConstant` blocks can occupy multiple layers in a compound block and still appear in the Auto Dialog dialog box. To create a compound block, see page 162.


Invoking the Auto Dialog dialog box

To invoke the Auto Dialog dialog box for a compound block, you must activate the Create Auto Dialog Box From Contained `dialogConstants` options in the Compound Properties dialog box. When this option is activated, you can no longer drill into the compound block. If there are no `dialogConstants` in a compound block, the Create Auto Dialog Box From Contained `dialogConstants` option is dimmed.

► To switch between displaying the Auto Dialog dialog box from a compound block and drilling into the compound block

1. Choose **E**dit > **B**lock Properties.
2. Click on the compound block.

The Compound Properties dialog box appears.

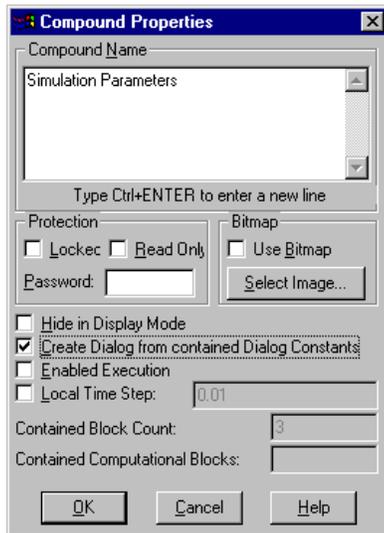

3. Do one of the following:

To	Do this
Display the Auto Dialog dialog box	Activate the Create Dialog From Contained dialogConstants option.
Enable drilling into the compound block	De-activate the Create Dialog From Contained dialogConstants option.

4. Click on the OK button, or press ENTER.
5. Click the right mouse button over the compound block.

If the Auto Dialog dialog box has been enabled, VisSim displays an Auto Dialog dialog box containing all the `dialogConstants` contained in the compound block. If the Auto Dialog dialog box has been disabled, VisSim displays the next lower level of the compound block.

Creating an Auto Dialog dialog box: an example

The following example steps you through the process of creating an Auto Dialog dialog box. In this exercise, you'll create an Auto Dialog dialog box in which you can control the value of a variable.

1. Insert a `dialogConstant` block into a block diagram.
2. Choose Edit > Block Properties and click on the `dialogConstant` block.

The Dialog Constant Properties dialog box appears.

3. Create a static text like the one shown below.




4. Click on the OK button, or press ENTER.
5. Feed the dialogConstant block through a variable named initial_brown_hardward_level block and into a display block.



6. Encapsulate the three blocks in a compound block named Simulation Parameters.
7. Choose Edit > Block Properties and click on the newly-created compound block.

The following dialog box appears:

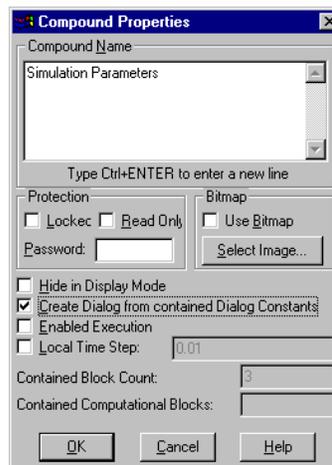

8. Activate the Create Dialog From Contained Dialog Constants option, and click on the OK button, or press ENTER.
9. To change the value of the dialogConstant, choose Edit > Block Properties and click on the compound block.


The following dialog box appears:



10. Enter a new value in the text box.

Creating more complex Auto Dialog dialog boxes

An Auto Dialog box can contain many dialogConstant block. For example, the Auto Dialog dialog box shown below contains five dialogConstant blocks of varying data types.

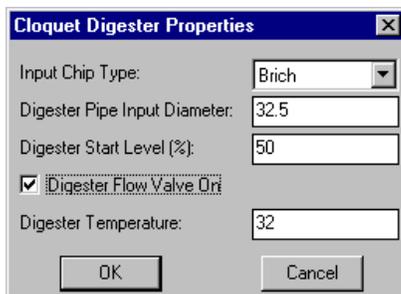


The dialogConstants displayed in the above dialog box are:

Name of dialogConstant	Data Type	Value
Input Chip Type	Integer List	Birch
Digester Pipe Input Diameter	Double	32.5
Digester Start Level (%)	Double	50
Digester OutFlow Valve On	Boolean	1
Digester Temperature	Double	32

Triggering the execution of compound blocks

You can control when and whether VisSim executes a compound block by using an external Boolean trigger on the compound block. The trigger appears as a red ball attached to the input side of the compound block. When the input to the trigger is greater than or equal to one, the trigger is enabled and the blocks within the compound block are executed. Conversely, when the input to the trigger is less than one, the trigger is disabled and the blocks within the compound block are not executed. When there is no input to the trigger, the blocks within the compound block are not executed.

As a simple example, suppose you want to control when VisSim executes a divide operation. You can set up a diagram like the one shown below:

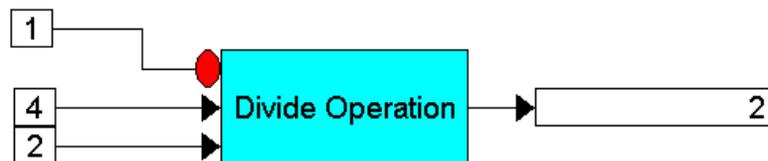

Here, the compound block performs a divide operation on the input signals. When a value of 1 is fed into the trigger, the divide operation to be performed. Output from the compound block shows the quotient. If, however, the trigger input is .2, the divide operation is not performed, and the output from the compound block is 0.



► To enable and disable a trigger

1. Choose Edit > Block Properties.
2. Point to the compound block and click the mouse.
3. The Compound Properties dialog box appears.
4. Do one of the following:


To	Do this
Enable the trigger	Activate the Enabled Execution parameter.
Disable the trigger	De-activate the Enabled Execution parameter.

- Click on the OK button, or press ENTER.

Specifying a local time step

The Local Time Step parameter provides a general implementation of multi-rate simulation. When this parameter is activated, you can specify the time step for the compound block. Each compound block can run at an arbitrary time step. The time step is entered in the text box to the right of the parameter.

The following example demonstrates a multi-rate simulation. Here, separate simulation step sizes are specified and plotted for each subsystem: Slow System has a step size of 0.1, whereas Fast System has one of 0.01.

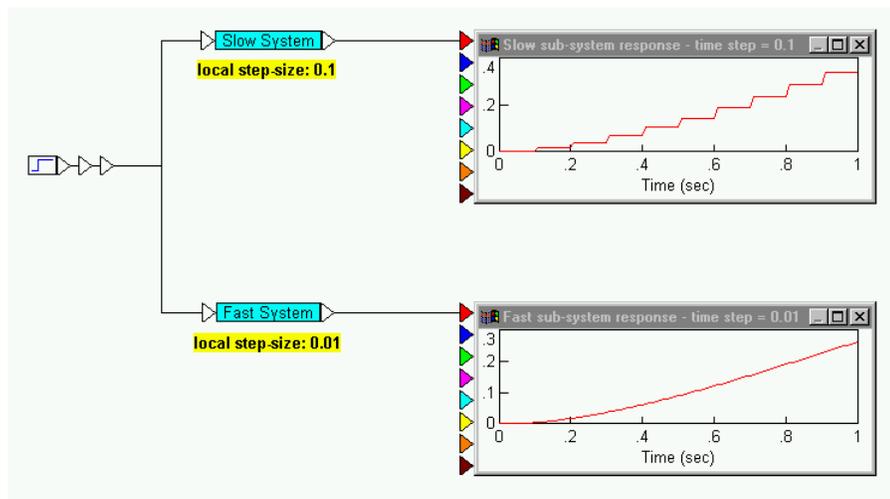

Keeping track of the number of blocks in a compound block

If you want to know how many blocks are in a given compound block, you can look in its Compound Properties dialog box. The dialog box lists the total number of blocks in the compound block, as well as the number of computational blocks.

Hiding compound blocks

You can selectively hide compound blocks while working in display mode.

► To hide compound blocks

- Choose Edit > Block Properties.

2. Point to the compound block you want hidden in display mode and click the mouse.
3. Activate the Hide In Display Mode parameter.
4. Click on the OK button, or press ENTER.
5. Activate View > Display Mode.

Configuring pictures on compound blocks

The pictures that can be configured on compound blocks are graphical images in .BMP file format. You can create them yourself or choose from the VisSim bitmap library, which resides in VISSIM\BITMAP\DIAGRAM. See [Appendix E, Working with Bitmaps](#), for pictures of these bitmaps.

► To configure a picture on a compound block

1. Choose Edit > Block Properties.
2. Point to the compound block on which the picture is to be configured and click the mouse.
3. Click on the Select Image button and choose the bitmap image to be configured on the block.
4. Click on the OK button, or press ENTER.
5. Click on the OK button, or press ENTER when the Compound Properties dialog box appears.

► To reset bitmaps

Bitmaps may appear distorted in size under the following conditions:

- You open a block diagram and the current screen resolution is not set to the resolution when the bitmaps were originally created
- You change the font size in VisSim

The Edit > Reset Bitmap Scaling command will remove bitmap scaling.

- Choose Edit > Reset Bitmap Scaling.

Labeling connector tabs on compound blocks


When you want to distinguish between the inputs and outputs on compound blocks, you can assign labels to their connector tabs. When the View > Connector Labels command is activated, connector labels are displayed on the block. In addition, when you drill into it, those labels appear next to the input and output connectors on the left and right side of the screen.

If you do not specify a connector label, the label defaults to the class name specified in the Connector Properties dialog box, if one is specified.

► **To assign connector labels**

1. Point to the connector tab on the compound block you want to label. The pointer turns into an upward pointing arrow.
2. Double-click the mouse.

The Connector Properties dialog box appears.

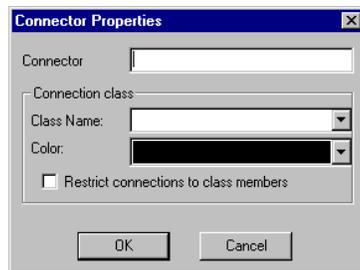

3. In the Connector box, enter a name.
4. Click on the OK button, or press ENTER.
5. If you want the label to appear on the block, activate the Connector Labels command in the View menu.

Dissolving a compound block

Use the Edit > Dissolve Compound Block command to de-encapsulate the blocks one level below the current level. When you execute Dissolve Compound Block, the blocks immediately below the current level move up to the current level. The blocks remain highlighted until the next command is executed to make it easier to recreate the compound block, in case you change your mind.

When you dissolve a compound block, VisSim maintains all internal wiring connections.

► **To dissolve a compound block**

1. Choose Edit > Dissolve Compound Block.
2. Point to the compound block and click the right mouse button.
3. Click the mouse on empty screen space to exit this command.

Other things you can do with compound blocks

VisSim lets you do other things with compound blocks.

For information about	See
Coloring compound blocks	Page 317
Protect compound blocks	Page 185

Embedding blocks

With embedding, you can include information created in one VisSim block diagram, referred to as the *source diagram*, in one or more other block diagrams, referred to as the *destination diagrams*. Each time the source diagram changes, the changes are propagated in the destination diagrams.

When you embed a block diagram, a read-only version of the diagram is inserted into the destination diagram along with a link to the source diagram. You can drill into the embedded diagram just as you would a compound block; however, you cannot edit it. Edits can only be made to the source diagram.

VisSim Personal Edition limitations

If you are using VisSim Personal Edition, embedding is not available. For a complete list of VisSim Personal Edition limitations, see the [Preface](#).

Setting up a diagram to be embedded

Before you can embed a diagram, check that its top level is a single compound block. If it's not, use the Edit > Create Compound Block compound to create one, as described on page [162](#).

If you want to restrict access to the embed block, apply the protection to the compound block, as described on page [187](#).

Embedding a block diagram

Embedding a block diagram involves dragging an embed block into the work area and setting up the link to the source file.

► To embed a block diagram

1. Open the destination diagram and move to the block diagram level where you want to insert an embedded block diagram.
2. Drag an embed block into the work area.
3. Choose Edit > Block Properties.

4. Click the mouse over the **embed** block.
5. In the File Name box, enter the name of the block diagram file to be embedded. If you do not see the file you want, click on the Select File button to search for it.
6. Click on the OK button, or press ENTER.

Editing an embedded block diagram

You cannot edit an embedded block diagram itself. Instead, you open and edit the source file to which the embedded diagram is linked. When you edit a source file, all embedded diagrams linked to that source file are immediately updated to reflect the changes.

Reconnecting an embedded block diagram

You may lose a link if you move or rename the source file. If this occurs, you must redirect the link to the appropriate location or file name.

► To reconnect a link

1. Choose Edit > Block Properties.
2. Point to the **embed** block and click the mouse.
3. In the File Name box, enter the correct path or new file name. If you are unsure of the path or file name, click on the Select File button to search for the file you want.
4. Click on the OK button, or press ENTER.

Adding block diagrams

You can add another block diagram to the currently opened diagram using the File > Add command. After you've added the block diagram, some blocks and wires may overlap as a result of this operation; use the mouse and Edit menu commands to reposition them appropriately.

► To add a block diagram to the current diagram

1. Open the block diagram into which you want to add another block diagram.
2. Choose File > Add.
3. In the File Name box, type or select the name of the block diagram you want to add. If you do not see the block diagram you want to add, select a new drive or directory.
4. Click on the OK button, or press ENTER.


An empty rectangular box appears that represents the block diagram. The pointer is anchored to the box.

5. Move the box to where you want the block diagram added.
6. Click the mouse.

Using variables to pass signals

The `variable` block lets you name a signal and transmit it throughout your diagram without the use of wires.

Variables of the same name share signals. For example, in the diagram below, the variable `j` is used in three different locations:

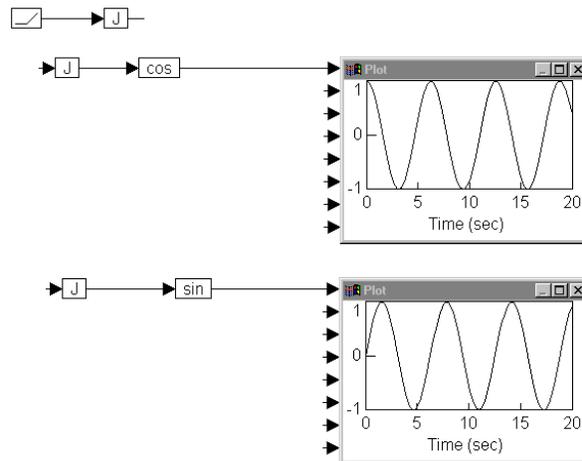

The variable `j` in the upper part of the diagram is the declared variable. Only declared variables are allowed input signals. In addition, there can be only one declared variable of a given name. The other two `j` variables are referenced variables. Wires cannot be fed directly into referenced variables; they receive their input from the declared variable.

All variables can have any number of output signals.


Creating variables

The `variable` block is located under the Blocks menu in the Annotation category.

► To create a variable block

1. Choose **E**dit > **B**lock Properties.

- Click the mouse over the `variable` block.
The Set Variable Name dialog box appears.

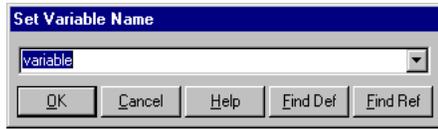

- Do one of the following:

To	Do this
Create a new variable	Enter a new name. To limit the scope of the variable, preface the name with a colon (:) character to make it local; two colon (::) characters to make it definition-scoped, or no colons to make it global. (For information on scoping variables, see the descriptions below.)
Reference an existing variable	Click on the DOWN ARROW and choose a name from the list. (For information on the scope of the variables, see the descriptions below.)

- Click on the OK button, or press ENTER.

Naming a variable

It is never a good idea to name a `variable` block `-X`, or a number, like 1 or 2 or 3. Naming a variable `-X` leads to confusion with the `-X` block. Naming a variable a number leads to confusion with the `const` block.

Scoping variables

In VisSim, you can define which portions of the diagram can reference a variable by designating its scope. There are three types of scope: *diagram scope*, *definition and below scope*, and *level scope*.

- Diagram scope indicates that the variable can be referenced at any hierarchical level of the block diagram. Variables with diagram scope are referred to as *global variables*.
- Definition and below scope indicates that the variable can be referenced at the current hierarchical level, as well as all levels beneath it. To identify definition-scope variables, preface their names with two colon (::) characters.

- Level scope indicates that the variable can be referenced only at the current level of the block diagram. Variables with hierarchical level scope are referred to as *local variables*.

Level scope

A variable with level scope cannot be referenced outside of its current hierarchical level. Although level scoping is the most restrictive type of scope, it actually has several key advantages. By limiting the region over which variables can be referenced, you can construct sections of a diagram without worrying about whether your variable names conflict with other names used in other parts of the diagram. In addition, users reading your diagram will know immediately that the variables' use is limited to a small region.

Variables with level scoping are prefaced with the colon (:) character.

Definition and below scope

Giving a variable definition and below scope allows the variable to be referenced not only at the hierarchical level of the diagram at which it was defined, but also at all the levels beneath it. For example, if compound block A contains a definition scope variable, all the sublevels in compound block A are able to use the variable.

By using definition-scoped variables, you can copy or add subsystems to an existing diagram without breaking or misdirecting references.

To give a variable definition and below scope, preface its name with two colon (::) characters.

Diagram scope

Variables with diagram scope are called global variables. Because global variables reference any part of a block diagram, you should exercise caution in your use of them. Global variables can make a block diagram hard to maintain because they increase the diagram's complexity.

In addition, global variables increase the chances of a conflict in names between modules. For example, engineers working on different parts of a large project may choose the same name for different global variables. The problem won't surface until each module is added to the master diagram.

As a rule of thumb, global variables should be used only when transmitting system-wide constants or signals that would be laborious or visually messy to represent as wires.

Making copies of global variables: When you make a copy of a compound block containing a global variable with wired input, VisSim renames the copied occurrence of the global variable in the following manner:

original-variable-block-name@unique-number

Finding variable definitions

There are two ways to find variables in your diagram:

- Use the Edit > Find command and activate the Match Variable Definitions Only option
- Click the right mouse button over the variable block and click on the Find Def button

Finding variable references

There are two ways to find variables in your diagram:

- Use the Edit > Find command and activate the Match Variables Only option
- Click the right mouse button over the variable block and click on the Find Ref button

Built-in variables

The following variable block names are built into VisSim:

Block name	Description
\$firstPass	Generates an initial unit pulse on the first step of a simulation.
\$lastPass	Generates a final pulse on the last step of a simulation.
\$randomSeed	Accesses the random seed set in the dialog box for the Simulation Properties command.
\$runCount	Holds the simulation iteration count for multiple simulation runs, such as Monte Carlo simulations and parameter sweeps.
\$timeStart	Returns the start time of the simulation.
\$timeStep	Returns the step size of the simulation.
\$timeStop	Returns the stop time of the simulation.

Using path aliases to reference files

As its name implies, a path alias is another name for all or part of the full specification of a file. You use path aliases to quickly insert frequently referenced files — for example, map files, import files, and bitmap image files. Rather than

entering the complete file specification for each file, you can use path aliases to reference any part of the specification.

You can also use path aliases whenever automatically updating information would make maintaining your diagrams easier. For example, suppose an `animate` block referenced numerous bitmap images in `C:\MYTEST\BMPS`. If you moved the location of the bitmap images to `C:\DIAGRAMS\BITMAPS`, changing each file specification of each referenced bitmap would be a frustratingly long exercise. With path aliasing, you'd only have to update the path alias once for VisSim to correctly locate each bitmap image.

Types of path aliases

VisSim distinguishes between two types of path aliases: global and local. Global path aliases are saved in your `VISSIM.INI` file and apply to all diagrams. Local path aliases, on the other hand, are saved with a specific diagram and apply only to that diagram.

Displaying conflicts between local and global path aliases

If you have both a local and global path alias of the same name, the local path alias takes precedence. To warn you if this occurs, use the Warn of Conflicting Local Alias Definitions option.

► To warn about conflicting path aliases

1. Choose Edit > Preferences.
2. Click on the Preferences tab.
3. Activate the Warn of Conflicting Local Alias Definitions option.
4. Click on the OK button, or press ENTER.

Creating path aliases

You create path aliases using the Preferences command in the Edit menu. Global path aliases are specified under the Path Aliases tab; local path aliases are specified under the Local Aliases tab. When you click on either of these tabs, an Alias=Path window appears listing all existing global or local path aliases. New path aliases are entered in this window.

► To create a path alias

1. Choose Edit > Preferences.

2. Do one of the following:

To create a	Click on
Global path alias	Path Aliases
Local path alias	Local Path Aliases

3. In the Alias=path window, double-click the mouse over the ellipses. The pointer becomes an I-beam.
4. Enter the path alias in the following format:

path-alias=pathname

The path-alias cannot include commas (,), semi-colons (;), colons (:), or dollar signs (\$). The pathname must adhere to the MS/DOS rules for drive, directory, and file specifications. The following table shows valid and invalid path aliases:

If you create this path alias	It is
BmpDir=C:\BITMAPS\PUMP.BMP	Valid. This path alias points to a specific file
BmpDir=C:\BITMAPS	Valid; however, you must include the file specification prefaced with a backward slash when you use the path alias.
BmpDir=C:\BITMAPS\	Valid; however, you must include the file specification and enclose BmpDir in parentheses.
\$BmpDir=C:\BITMAPS	Invalid; a dollar sign is not allowed in the path alias.

5. Click on the OK button, or press ENTER.

► **To change a path alias**

1. Open the diagram to which the local path alias is to be applied.
2. Choose Edit > Preferences.
3. Do one of the following:

To edit a	Click on
Global path alias	Path Aliases
Local path alias	Local Path Aliases

4. In the Alias=path window, double-click the mouse over the ellipses. The pointer becomes an I-beam.
5. Edit the path alias accordingly. Refer to the above procedure for rules on entering path aliases.
6. Click on the OK button, or press ENTER.

Specifying path aliases in blocks

You can use global and local path aliases in any block that references a file. When you specify a path alias, prefix it with a dollar (\$) sign. During simulation, when VisSim encounters a path alias, it expands the alias to its corresponding pathname.

► To specify a path alias in a block

1. Choose **E**dit > **B**lock Properties.
2. Click the mouse over the block to which a path alias will be applied.
3. In the Properties dialog box, position the insertion point in the text box in which you want to insert the path alias. (Typically, this is the File Name, Name, Bitmap Image, or Image box.)
4. Enter the path alias, prefaced with a dollar sign (\$).

Because the pathname associated with the path alias is not necessarily a complete file specification, you may have to include the missing parts of the specification along with the path alias. For example, suppose you want to access the file C:\BITMAPS\PUMP.BMP. The following table shows what you specify based on how the path alias was originally created.

If the BmpDir path alias is defined as	You specify
BmpDir=C:	\$BmpDir\BITMAPS\PUMP.BMP
BmpDir=C:\	\$(BmpDir)BITMAPS\PUMP.BMP
BmpDir=C:\BITMAPS	\$BmpDir\PUMP.BMP
BmpDir=C:\BITMAPS\	\$(BmpDir)PUMP.BMP
BmpDir=C:\BITMAPS\PUMP	\$BmpDir.BMP
BmpDir=C:\BITMAPS\PUMP.BMP	\$BmpDir

Note that the path alias must be enclosed in parentheses whenever a backslash (\) or period (.) does not separate it from the ensuing file specification.

Default drives: If you do not define the drive, VisSim uses the current default drive.

5. Click on the OK button, or press ENTER.

Creating nested path aliases

A simple path alias expands to a specific pathname, for example, a drive, directory, and/or file. Frequently, however, you want to create a path alias that expands to another path alias. This is called nested path aliases. Nested path aliases make it easier to modify a path when the file, directory, or disk that is referenced moves or is renamed. For example, suppose you want to create a path alias to

C:\BITMAPS\PUMP.BMP. You could create the following simple path alias:

```
PUMP=C:\BITMAPS\PUMP.BMP
```

If you moved the \BITMAPS directory to the D: drive, changing the path alias would be a simple exercise. But suppose you created path aliases for 100 bitmap files in C:\BITMAPS. Now you'd have to edit all 100 path aliases to point to D:. Using nested path aliases, as shown below, avoids this needless editing:

```
BMPDISK=C:
```

```
BMPS=$BMPDISK\BITMAPS
```

```
PUMP=$BMPS\PUMP.BMP
```

```
OPEN_VALVE=$BMPS\O_VALVE.BMP
```

```
CLOSED_VALVE=$BMPS\C_VALVE.BMP
```

```
SEALER=$BMPS\SEALER.BMP
```

```
.  
. .  
. . .
```

To redirect all the path aliases to the D: drive, simply edit the first path alias to read:

```
BMPDISK=D:
```

Similarly, if you moved all the bitmaps to a different directory, edit the second path alias accordingly.

Maintaining an edit history

The Diagram Information command in the File menu helps you keep track of important information about a block diagram as it is being developed. You can list the author's name and attach comments or an edit history to the block diagram. You can also identify the block diagram by a longer, more descriptive name. The name appears in File Open and File Add dialog boxes when you select its DOS file name.

The Diagram Information command also maintains statistics about the block diagram, including its DOS file name, its byte and block size, its last modification date, and the version of VisSim used to create it. Note that the Byte Size and Last Modified fields are not updated until you save the block diagram.

► To add or view diagram information

1. Open the block diagram whose information is to be added to or viewed.
2. Choose **File > Diagram Information**.
3. You can add or change information in the Title, Author, and Comment boxes. The statistical information can be viewed, but not edited.
4. When you finish adding or viewing diagram information, click on the OK button, or press ENTER.

You can add or revise diagram information for the current block diagram at any time.

Protecting your work


VisSim offers several levels of protection for your work:

- You can assign your block diagram a password to keep other users from opening the diagram. You can also request or require that they open the diagram in read-only mode.
- In large project development, where multiple users are working on the same diagram, you can assign password protection to particular parts of the diagram to prevent other users from viewing the information. You can also request or require that they view the information in read-only mode.

If you decide to use a password to restrict access, make sure to write it down exactly as you entered it — passwords are case sensitive — and store it in a safe place. Without the password, even you can't access the information.

Protecting block diagrams

To assign a password to a block diagram and set options that control how much access other users have to the diagram, choose the Diagram Information command in the File menu.

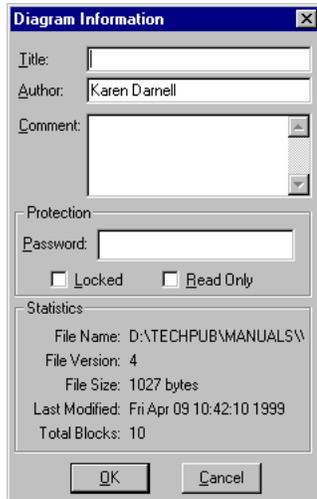

Password Protected: To prevent other users from opening the block diagram, type a password in the Password box and activate the Locked option. Only users who know the password can open the diagram and make changes to it.

Read-Only Password Protection: To allow other users to open the diagram, but prohibit them from making changes, type a password in the Password box and activate the Read Only option. Only users who know the password can open the diagram. Once opened, the diagram can be viewed, however, it cannot be changed.

Read-Only Requested Protection: To recommend, but not require, that other users only view a diagram without making changes to it, activate the Read Only check box. Although the diagram is opened in read-only mode, any user can de-activate the read-only protection and edit the diagram.

► **To restrict access to a block diagram**

1. Open the block diagram to which restricted access is to be applied.
2. Choose **File > Diagram Information**.
3. Do one of the following:
 - To lock the diagram closed, enter a password in the Password box and activate the Locked parameter.
 - To make the block diagram read-only, enter a password in the Password box and activate the Read Only parameter.

A password can contain up to 10 characters and can include any combination of letters and numbers. VisSim echoes an asterisk (*) for each character you type. Passwords are case sensitive.

4. Click on the OK button, or press ENTER.
5. VisSim asks you to re-enter the password for verification.

► **To change or delete a password**

1. Choose File > Diagram Information command.
2. In the Password box, select the row of asterisks that represent the existing password and do one of the following:
 - To change the password, type in a new password.
 - To delete the password, press the DEL key.
3. Click on the OK button, or press ENTER.

If you entered a new password, VisSim asks you to re-enter the new password for verification.

Protecting compound blocks

Restricting access to a compound block is similar to restricting access to a block diagram. You have the choice of password protection, read-only password protection, and read-only requested protection. You enter the level of protection in the Compound Properties dialog box.



► **To restrict access to a compound block**

1. Choose Edit > Block Properties.
2. Point to the compound block you want protected and click the mouse.

3. Do one of the following:
 - To lock the compound block, activate the Locked parameter and enter a password in the Password box.
 - To make the compound block read-only, activate the Read Only parameter and enter a password in the Password box.

A password can contain up to 10 characters and can include any combination of letters and numbers. VisSim echoes an asterisk (*) for each character you type. Passwords are case sensitive.
4. Click on the OK button, or press ENTER.
5. VisSim asks you to re-enter the password for verification.

► **To change or delete a password**

1. Choose Edit > Block Properties.
2. Point to the compound block whose password you want to change and click the mouse.
3. In the Password box, select the row of asterisks that represent the existing password and do one of the following:
 - To change the password, type in a new password.
 - To delete the password, press the DEL key.
4. Click on the OK button, or press ENTER.

If you entered a new password, VisSim asks you to re-enter the new password for verification.

► **To edit a read-only compound block with password protection**

1. Choose Edit > Block Properties.
2. Point to the compound block that is read-only with password protection and click the mouse.
3. In the Password box, select the row of asterisks that represent the existing password and type in the correct password.
4. Click on the Read Only attribute to de-select it.
5. Click on the OK button, or press ENTER.

Protecting embed blocks

Password locking is a mechanism that prevents other users from drilling into and viewing the contents of an embedded diagram. Only users who know the password can unlock the embed block and view its contents.

Password locking is inherited from the compound block in the source file. In other words, you do not apply protection to the `embed` block itself, but rather to the compound block in the source file.

► **To drill into a protected embed block**

1. Choose Edit > Block Properties.
2. Click the mouse over the `embed` block.
3. Enter the password.
4. Click on the OK button, or press ENTER.

► **To protect an embedded block diagram**

1. Open the source file that contains the compound block to be protected.
2. Choose Edit > Block Properties.
3. Click the mouse over the compound block.
4. Activate the Locked parameter and enter a password in the Password box.

A password can contain up to 10 characters and can include any combination of letters and numbers. VisSim echoes an asterisk (*) for each character you type. Passwords are case sensitive.

If you do not enter a password, a user can subsequently unlock the `embed` block.

5. Click on the OK button, or press ENTER.
6. VisSim asks you to re-enter the password for verification.

► **To change or delete a password**

1. Open the source file that contains the compound block to whose password is be changed or deleted.
2. Choose Edit > Block Properties.
3. Point to the compound block and click the mouse.
4. In the Password box, select the row of asterisks that represent the existing password and do one of the following:
 - To change the password, type in a new password.
 - To delete the password, press the DEL key.
5. Click on the OK button, or press ENTER.

If you entered a new password, VisSim asks you to re-enter the new password for verification.


Block Reference

The Blocks menu lists the standard blocks provided with VisSim. When you click on the Blocks menu, most of the items that appear have a filled triangle (►) next to them. These items are block categories. Click on a block category and a cascading menu appears listing the additional blocks.

To make it easier to find blocks in this chapter, they are presented in alphabetical order, regardless of their block category. For most blocks, a mathematical function is included. The following table translates the symbols that may appear in the function:

Symbol	What it represents
A	Amplitude
e	Naperian constant
dt	Derivative with respect to time
lb	Lower bound
mod	Modulus
s	Laplacian operator
t	Time
ub	Upper bound
ω	Frequency
x	Input signal
y	Output signal

Input signals are represented as x_1, x_2, \dots, x_n , where x_1 represents the topmost signal entering the block. When n is omitted, x_1 is assumed. Output signals are represented as y_1, y_2, \dots, y_n , where y_1 represents the topmost signal exiting the block. When n is omitted, y_1 is assumed.

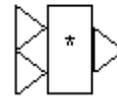*** (multiply)**

$$y = x_1 * x_2 * \dots * x_n$$

Block Category: Arithmetic

The * block produces the product of the input signals. Inputs can be scalars or vectors.

VisSim assigns ones to all unconnected inputs.

Multiplying vectors and matrices

To perform a single value summation of an element-by-element multiply of two vectors, use the `dotProduct` block, as described on page 231.

To multiply two matrices, use the `multiply` block, as described on page 263.

Examples

1. Multiplication of two scalar inputs

Consider the equation $y = 24 * 32$, which can be realized as:




Two `const` blocks provide the values 24 and 32. When connected to a * block, the product is 768.

2. Multiplication of a scalar and a vector

Consider the equation

$$y = 24 \mathbf{x}$$

where $\mathbf{x} = [1 \ 2 \ 3]$. This equation can be realized as shown on the next page.

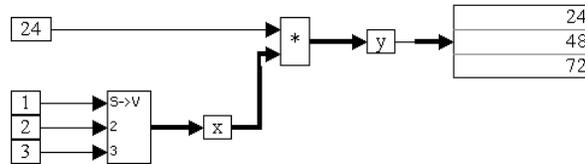


A `scalarToVec` block creates a three-element vector from the constant values 1, 2, and 3. When the simulation runs, the `*` block multiplies all the elements of the incoming vector line with the constant value 24.

3. Multiplication of vectors

Consider the equation:


$$\mathbf{w} = \mathbf{x} \mathbf{y} \mathbf{z}$$

where $\mathbf{x} = [-1 \ 2 \ 3]$, $\mathbf{y} = [3 \ -2 \ 2]$, and $\mathbf{z} = [6 \ 2 \ -7]$. This equation can be realized as:

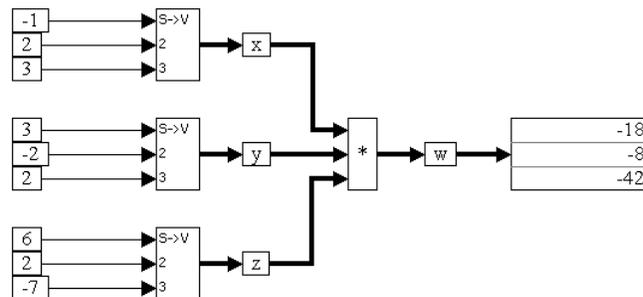

When the simulation runs, the `*` block performs an element-by-element multiplication operation on the incoming vectors. For example, $w(1) = x(1) * y(1) * z(1)$, $w(2) = x(2) * y(2) * z(2)$, and so on.

-X (negate)

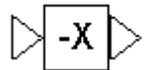

$$y = -x$$


Block Category: Arithmetic

The `-X` block negates the input signal. Input can be scalar, vector, or matrix.

Examples

1. Negation of a scalar

Consider the equation $y(t) = -\sin(t)$, which can be realized as:

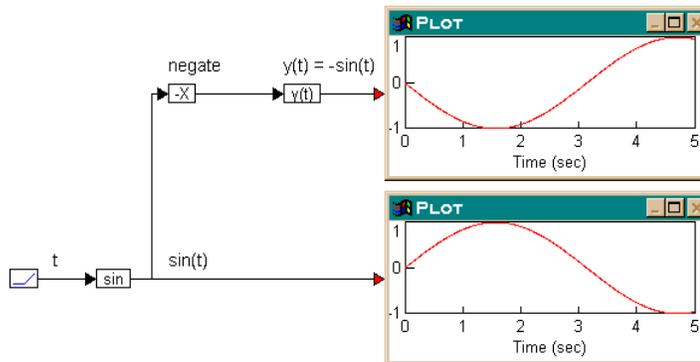


A ramp block is used to access simulation time t , a sin block generates $\sin(t)$, and a $-X$ block converts $\sin(t)$ to $-\sin(t)$. Both $\sin(t)$ and $y(t)$ are plotted for comparison.

2. Negation of a vector

Consider the equation:

$$\mathbf{z} = -\mathbf{x}$$

where $\mathbf{x} = [-1 \ 5.6 \ 4]$. This equation can be realized as:

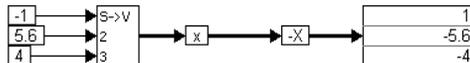

A scalarToVector block creates a three-element vector from the constant values -1, 5.6, and 4. When the simulation runs, the $-X$ block performs an element-by-element negate operation on the incoming vector.


3. Negation of a matrix

Consider the equation:

$$\mathbf{Z} = -\mathbf{X}$$

$$\text{where } \mathbf{X} = \begin{bmatrix} 2 & -5.6 & 4 \\ -1.2 & 2.1 & -3.6 \\ 1 & -8.7 & 6.4 \end{bmatrix}$$

This equation can be realized as:

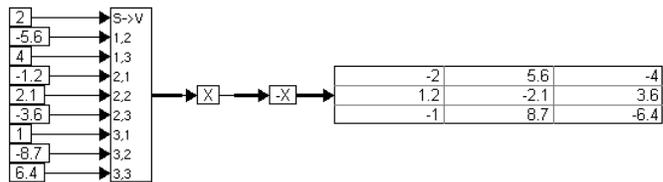

When the simulation runs, the $-X$ block performs an element-by-element negate operation on the incoming matrix.

/ (divide)



$$y = \frac{x_1}{x_2}$$

Block Category: Arithmetic

The $/$ block produces the quotient of the input signals. The inputs can be scalars or vectors. On the connector tabs, “l” represents the numerator x_1 and “r” represents the denominator x_2 . If x_1 is unconnected, VisSim feeds it a zero. If x_2 is equal to 0 or unconnected, VisSim displays a “Divide by 0” message and highlights the offending block in red.


Performing matrix inversions

To perform matrix inversions, use the `invert` block, as described on page [249](#).

Examples

1. Division of two scalar inputs

Consider the equation $y = 24/32$, which can be realized as:

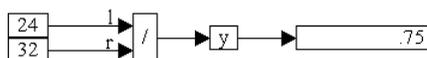


2. Division of a vector by a scalar

Consider the equation:

$$\mathbf{y} = \mathbf{x}/24$$

where $\mathbf{x} = [12 \ 24 \ 36]$. This equation can be realized as:

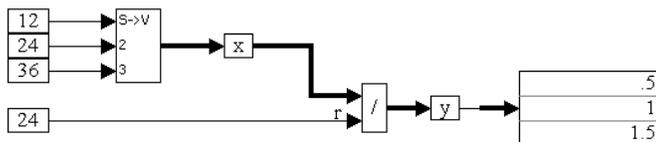


When the simulation runs, the / block divides each element of vector \mathbf{x} with the constant value of 24.

3. Division of vectors


Consider the equation:

$$\mathbf{w} = \mathbf{x}/\mathbf{y}$$

where $\mathbf{x} = [12 \ 24 \ 36]$ and $\mathbf{y} = [6 \ 12 \ 18]$. This equation can be realized as:

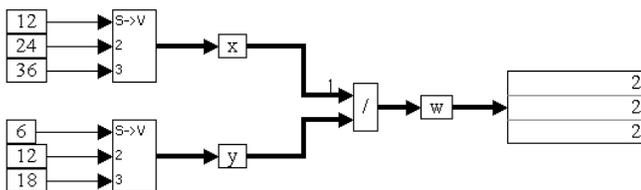

When the simulation runs, the / block performs an element-by-element division operation on the incoming vectors. For example, $w(1) = x(1)/y(1)$, $w(2) = x(2)/y(2)$, and so on.

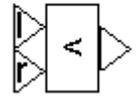

< (less than)

$$y = \begin{cases} 1 & \text{if } x_1 < x_2 \\ 0 & \text{if } x_1 \geq x_2 \end{cases}$$

Block Category: Boolean

The < block produces an output signal of 1 if and only if input signal x_1 is less than input signal x_2 . Otherwise, the output is 0. On the connector tabs, “l” represents x_1 and “r” represents x_2 .

If you click the right mouse button over the < block, the Boolean block menu appears allowing you to assign a different function to the block.


Examples

1. Simple if-then-else construct

Consider a variable y such that:

If $t < 4$ then $y = 1$; else $y = 0$


Assume that t is simulation time. This system can be realized as:

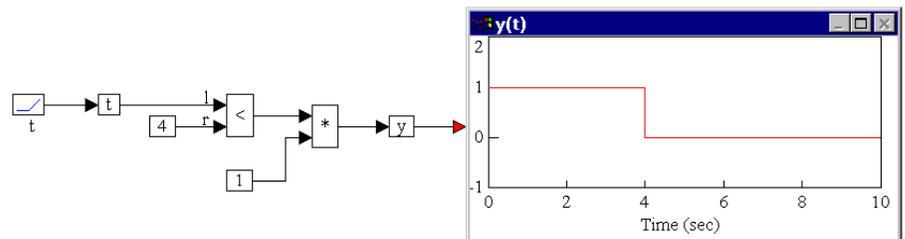

By multiplying a constant value 1 with the output of the < block, y is guaranteed to assume a value of 0 until the inequality is true. When the inequality is true, y assumes a value equal to the output of the * block.


2. Modified if-then-else construct

The previous example can also be realized as:

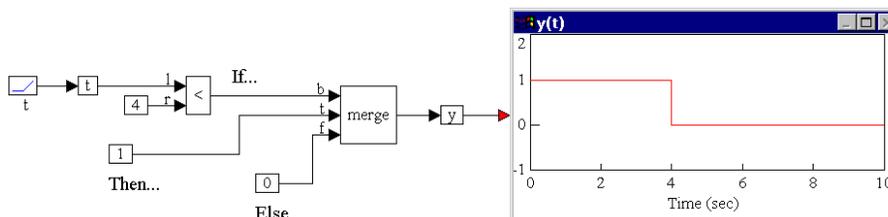

The key difference in implementation is the use of a merge block rather than a * block. The merge block explicitly depicts the if-then-else structure; the * block is a shortcut and can lead to confusion.

<= (less than or equal to)

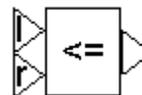

$$y = \begin{cases} 1 & \text{if } x_1 \leq x_2 \\ 0 & \text{if } x_1 > x_2 \end{cases}$$

Block Category: Boolean

The <= block produces an output signal of 1 if and only if input signal x_1 is less than or equal to input signal x_2 . Otherwise, the output is 0. On the connector tabs, “l” represents x_1 and “r” represents x_2 . The <= block accepts two scalar inputs.

If you click the right mouse button over the <= block, the Boolean block menu appears allowing you to assign a different function to the block.


Examples

1. Simple if-then-else construct

Consider a variable y such that:


If $x \leq 0.5$ then $y = \cos(3t)$; else $y = 0$

where t is simulation time. Let x be a unit step delayed by 7 sec, represented as $u(t - 7)$. This system can be realized as shown on the next page.

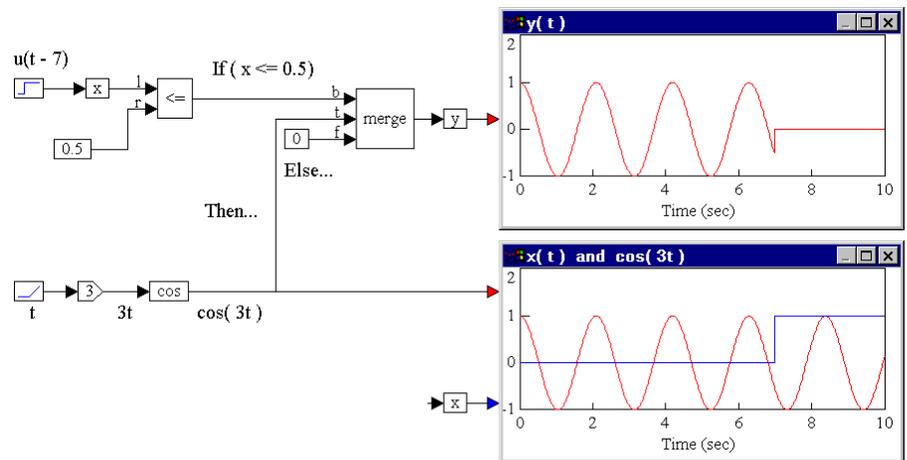

Until the onset of the step input at $t = 7$ sec, the Boolean inequality $x \leq 0.5$ evaluates to true, and y takes on a value of $\cos(3t)$. At $t = 7$ sec, the Boolean inequality evaluates to false and remains false for the duration of the simulation. Consequently, from this point onwards, y takes on the value of 0. The lower plot block monitors the outputs of the `cos` and variable `x` blocks.

== (equal to)

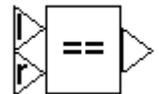

$$y = \begin{cases} 1 & \text{if } x_1 = x_2 \\ 0 & \text{if } x_1 \neq x_2 \end{cases}$$

Block Category: Boolean

The `==` block is useful for evaluating the Boolean `==` equality. This block accepts two scalar inputs labeled “l” (for x_1) and “r” (for x_2). The output of the `==` block is 1 if and only if input “l” is identically equal to input “r;” otherwise, the output is zero.

Boolean equality comparisons of floating point variables and non-integer constants

As with programming in any language, it is generally not a good idea to perform Boolean equality comparisons involving floating point variables and non-integer constants. These types of comparisons should be converted to Boolean inequality comparisons. (For example, {If position is equal to π , then...}) should be converted to {If position is greater than or equal to $\langle \pi$ rounded off \rangle , then...}.) The reason for this is because a floating point variable, such as position, is rarely exactly equal to a non-zero non-integer value, particularly if it is obtained by solving one or more equations.

If you click the right mouse button over the == block, the Boolean block menu appears allowing you to assign a different function to the block.


Examples

1. Comparing constants

Consider a variable y such that:

If $x = 0.5$ then $y = \cos(2t)$; else $y = 0$

where t is simulation time. Let x be a step function of amplitude 0.5, delayed by 3 sec. This is usually represented as $0.5 u(t - 3)$. This system can be realized as:

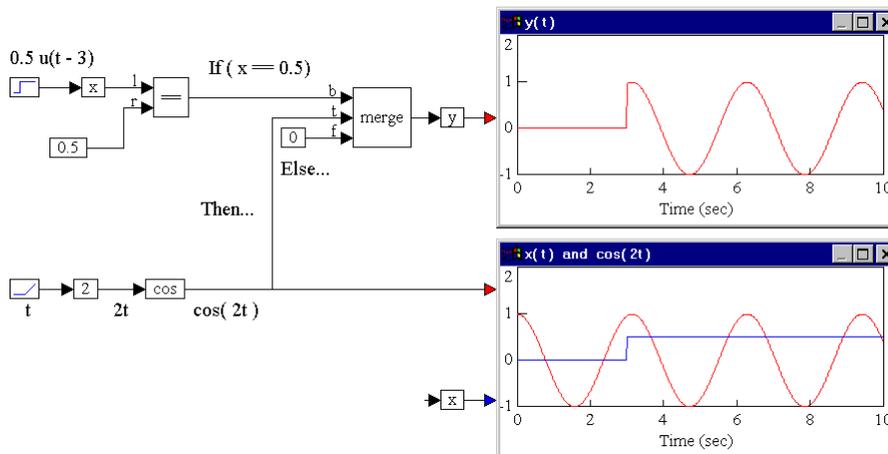

Until the onset of the step input at $t = 3$ sec, the Boolean equality $x == 0.5$ evaluates to false, and y takes on a value of 0. At $t = 3$ sec, the Boolean equality evaluates to true, and remains true for the duration of the simulation. Consequently, from this


point onwards, y takes on the value of $\cos(2t)$. The lower `plot` block is used to monitor the outputs of the `cos` block and the variable x .

2. Comparing a floating point variable with a non-integer constant

In a collision detection problem, if position x of a mass in motion is equal to π , then a collision is assumed to have occurred with an immovable wall that is located at $x = \pi$. Furthermore, the position of the mass is assumed to be given by the solution of the following first order differential equation:

$$\dot{x} = \sin(|x|)$$

The initial condition is assumed to be $x(0) = 3.0$. It is tempting to realize this system as:

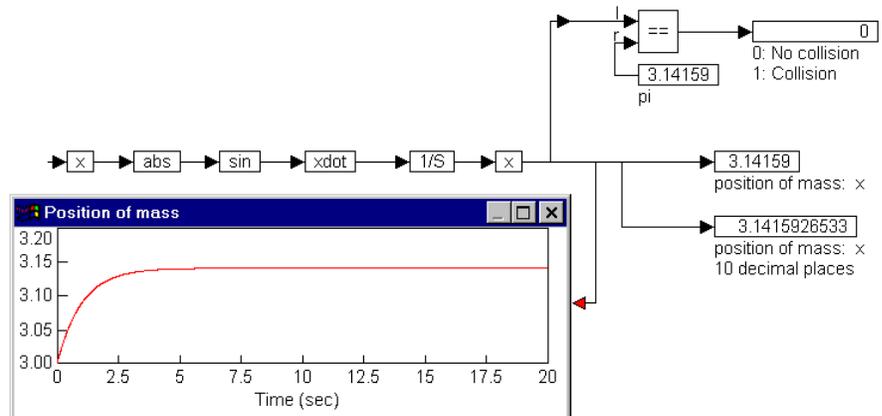

From the result shown in the `plot` block, at around $t = 7$ sec, the mass arrives at the boundary located at π . However, the collision detection logic, using an `==` block that compares x with a constant value of π , never detects the collision. This is because the final mass position, as obtained from the output of the `integrator`, is 3.141592653, which is not equal to 3.14159.


It is clear from the `plot` block, that for all practical purposes, the mass collided with the wall around $t = 7$ sec. To capture this reality in the simulation, convert the Boolean equality comparison:

If $x = 3.14159$ then...

to a Boolean inequality comparison:

If $x \geq 3.1415$ then...

After reducing the `const` block to four decimal places with no round-off, the system can be realized as:

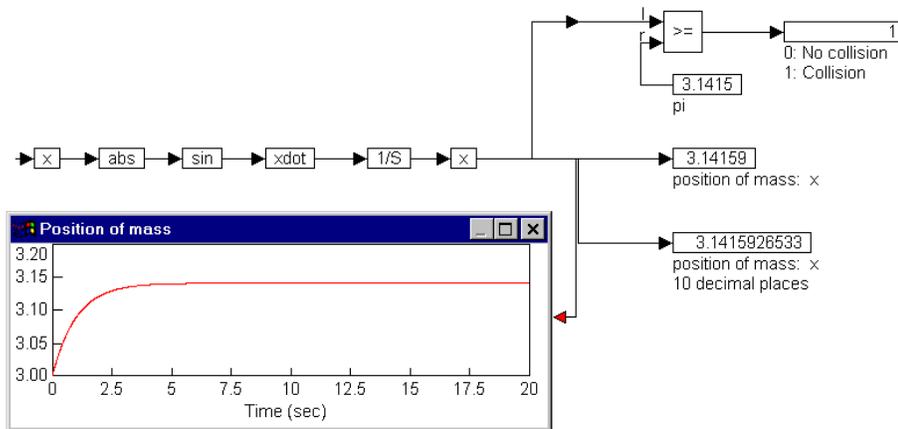

Except for replacing the `==` block with the `>=` block, this diagram is similar to the previous one. In this case, the collision detection logic detects a collision around $t = 8$ sec. Obviously, the time at which the collision is detected depends on the number of decimal places retained for the π approximation.


!= (not equal to)

$$y = \begin{cases} 1 & \text{if } x_1 \neq x_2 \\ 0 & \text{if } x_1 = x_2 \end{cases}$$

Block Category: Boolean

The `!=` block produces an output signal of 1 if and only if the two scalar input signals are not equal. On the connector tabs, “l” represents x_1 and “r” represents x_2 .

If you click the right mouse button over the `!=` block, the Boolean block menu appears allowing you to assign a different function to the block.

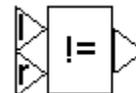


Examples

1. Comparing constants

Consider a variable y such that:

If $t \neq 0.5$ then $y = \cos(t)$; else $y = 0$


where t is simulation time. This system can be realized as shown on below.

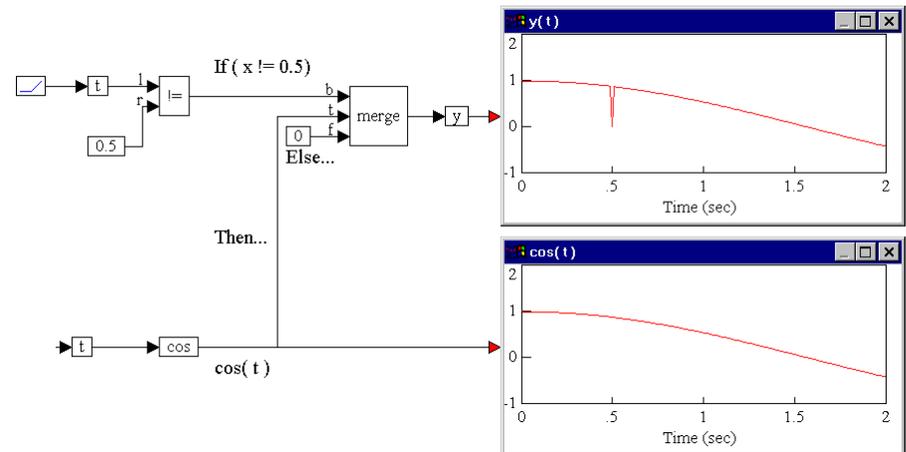

Until the value of t reaches 0.5, the Boolean inequality $t \neq 0.5$ evaluates to true, and y takes on a value of $\cos(t)$. At $t = 0.5$ sec, the Boolean inequality evaluates to false, and at the very next time step, returns to true, and remains true for the duration of the simulation. Consequently, at the moment $t = 0.5$ sec, y takes on the value of 0, and at every other point, y is equal to $\cos(t)$.

> (greater than)

$$y = \begin{cases} 1 & \text{if } x_1 > x_2 \\ 0 & \text{if } x_1 \leq x_2 \end{cases}$$

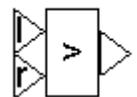

Block Category: Boolean

The > block is useful in evaluating the Boolean > inequality. It accepts two scalar inputs, labeled “l” and “r.” The output of the > block is 1 if and only if input “l” > input “r;” otherwise the output is zero.

If you click the right mouse button over the > block, the Boolean block menu appears allowing you to assign a different function to the block.


Examples

1. Simple if-then-else construct

Consider a variable y such that:

If $t > 2$ then $y = 7.2$; else $y = 0$


Assume that t is simulation time. This system can be realized as:

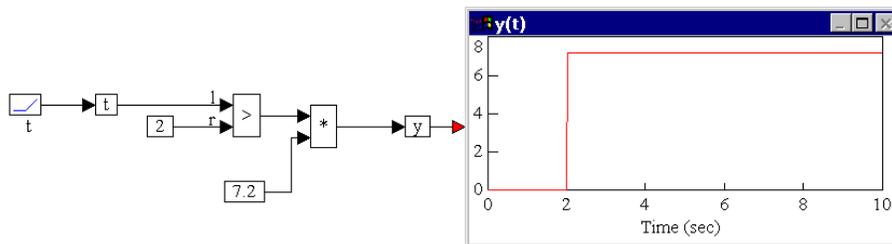


By multiplying a constant value of 7.2 with the output of the > block, y is guaranteed to assume a value of 0 until the inequality is true. When the inequality is true, y assumes a value equal to the output of the * block.

2. Modified if-then-else construct

Using the above equation, it can also be realized as:

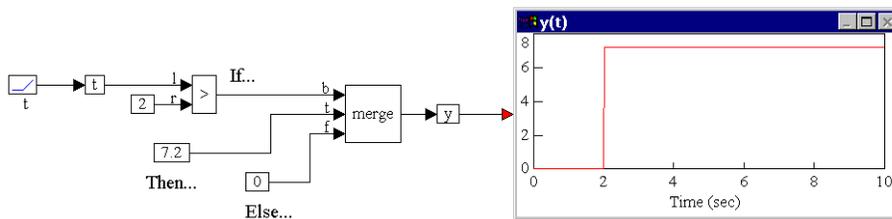

The key difference in implementation is the use of a merge block rather than a * block. The merge block explicitly depicts the if-then-else structure, whereas the * block is a shortcut and can lead to confusion.

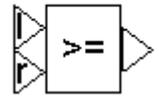

>= (greater than or equal to)

$$y = \begin{cases} 1 & \text{if } x_1 \geq x_2 \\ 0 & \text{if } x_1 < x_2 \end{cases}$$

Block Category: Boolean

The >= block produces an output signal of 1 if and only if input signal x_1 is greater than or equal to input signal x_2 . Otherwise, the output is 0. On the connector tabs, “l” represents x_1 and “r” represents x_2 . The >= block accepts two scalar inputs.

If you click the right mouse button over the >= block, the Boolean block menu appears allowing you to assign a different function to the block.


Examples

1. Simple if-then-else construct

Consider a variable y such that:


If $x \geq 0.5$ then $y = \sin(t)$; else $y = 1$

where t is simulation time. Let x be a unit step delayed by 3 sec. This is usually represented as $u(t - 3)$. This system can be realized as:

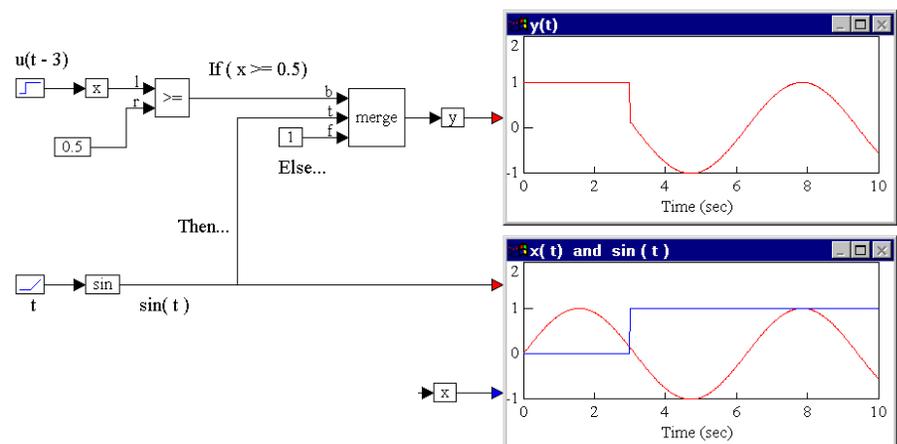

Until the onset of the step input at $t = 3$ sec, the Boolean inequality $x \geq 0.5$ evaluates to false and y takes on a value of 1. At $t = 3$ sec, the Boolean inequality evaluates to true and remains true for the duration of the simulation duration. Consequently, from this point onwards, y takes on the value of $\sin(t)$.

1/X (inverse)

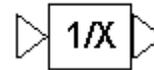

$$y = \frac{1}{x}$$

Block Category: Arithmetic

The 1/X block produces the inverse of the input signal. The input can be scalar, vector, or matrix.

Computing the matrix inverse of a matrix

Use the `invert` block to compute the matrix inverse of a matrix. If a vector or matrix is fed into an 1/X block, the result will be an element-by-element inversion of the vector or matrix (that is, [one divided by the element] operation). This is not equivalent to a normal vector pseudo-inverse operation or a normal matrix inverse operation.

Examples

1. Computation of 1/X of a scalar

Consider the equation $y = 1/25$, which can be realized as:



The incoming constant value of 25 results in $1/25 = 0.04$.

2. Computation of 1/X of a vector

Consider the equation:

$$\mathbf{z} = 1/\mathbf{y}$$

where $\mathbf{y} = [-1 \ 5.6 \ 4]$, and where an element-by-element inversion is implied. This equation can be realized as:



An element-by-element inverse operation is performed on the three elements in the `ScalarToVec` block.


3. Computation of 1/X of a matrix

Consider the equation:

$$\mathbf{Z} = 1/\mathbf{Y}$$


$$\text{where } \mathbf{Y} = \begin{bmatrix} 2 & -5.6 & 4 \\ -1.2 & 2.1 & -3.6 \\ 1 & -8.7 & 6.4 \end{bmatrix}$$

This can be realized as:

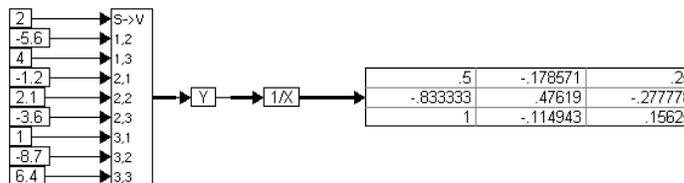

When the simulation runs, the 1/X block performs an element-by-element inverse operation on the incoming matrix.

abs

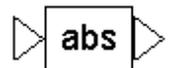

$$y = |x|$$


Block Category: Arithmetic

The abs block produces the absolute value of the input signal. The inputs can be scalars, vectors, or matrices.

Examples

1. Absolute value of a scalar

Consider the equation $y = \text{abs}(\sin(t))$, which can be realized as shown on the next page.

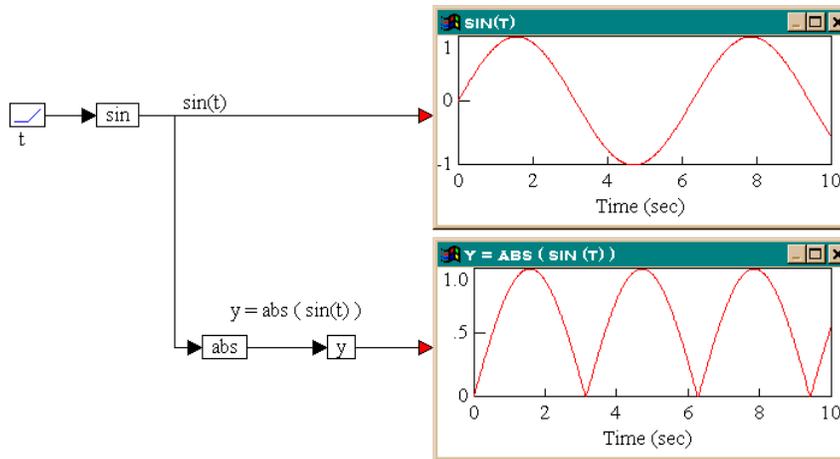


The results in the two plot blocks show that the abs block computes the absolute value of the input signal.

2. Absolute value of a vector

Consider the equation:

$$\mathbf{w} = \text{abs}(\mathbf{x})$$

where $\mathbf{x} = [-7 \ 1 \ -2.2]$. This equation can be realized as:

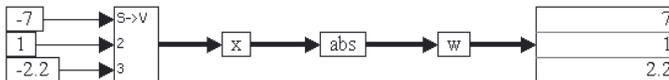


When the simulation runs, the abs block computes and outputs an element-by-element absolute value of the vector \mathbf{x} .

3. Absolute value of a matrix

Consider the equation:


$$\mathbf{Z} = \text{abs}(\mathbf{Q})$$

where $\mathbf{Q} = \begin{bmatrix} -7 & 1 \\ 2.2 & -3.3 \end{bmatrix}$. This equation can be realized as shown below.

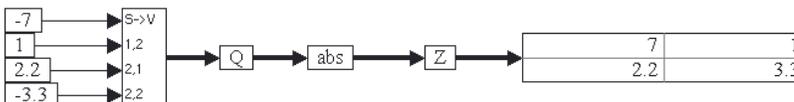

Four `const` blocks provide the vector element values of **Q** through a `scalarToVector` block. When the simulation runs, the `abs` block computes the element-by-element absolute value of the incoming matrix.

acos

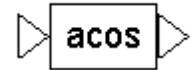

$$y = \arccos x$$


Block Category: Transcendental

The `acos` block produces the inverse cosine of the input signal. The output is an angle in radians.

Examples

1. Computation of $\cos^{-1}(1) = 0$; $\cos^{-1}(0) = \pi/2$

This equation can be realized as:

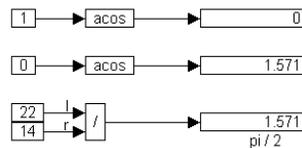

Two `acos` blocks are used to compute the inverse cosines. For comparison, the constant value of $\pi/2$ is generated by connecting two `const` blocks, set to 22 and 14, to the “l” and “r” inputs of a `/` block. From the results obtained, the `acos` blocks yield correct values for the angles.

ActiveX read

Block Category: Real Time


The `ActiveX read` block gets data from an ActiveX container. For more information, see page [125](#).

ActiveX write

Block Category: Real Time

The `ActiveX write` block sends data to an ActiveX container. For more information, see page [125](#).

and

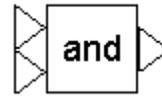

$$y = x_1 \text{ bitwise AND } x_2$$

Block Category: Boolean

The and block produces the bitwise AND of two to 256 scalar input signals.


If you click the right mouse button over the and block, the Boolean block menu appears allowing you to assign a different function to the block.

Examples**1. Three variable and**

Consider a variable y such that:


If $a \neq 6$ and $b > 2.2$ and $c < 7$, then $y = \cos(t)$; else $y = 0$

where t is simulation time. Furthermore, let t be the input to all three parameters a , b , and c . This system can be realized as:

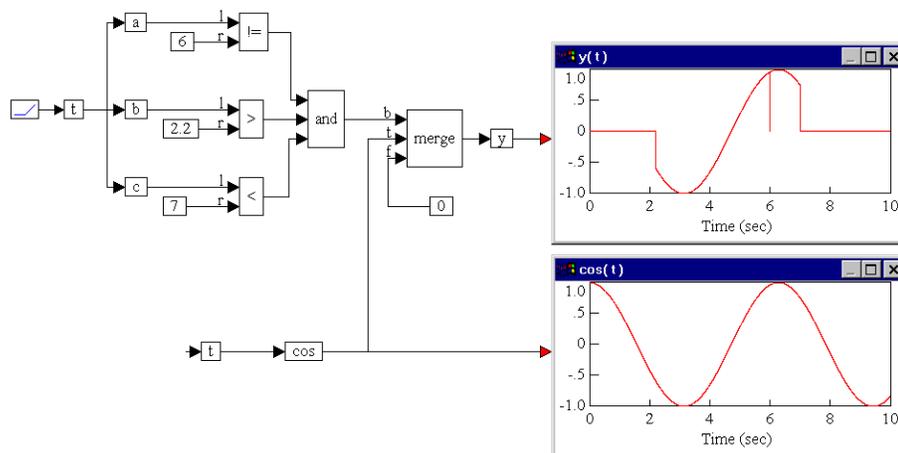

The output of the and block is true only when all the three inputs are true. This happens in the range $t = (2.2, 7)$, except for the instant $t = 6$. This result is apparent from the top plot block. The variable y is equal to $\cos(t)$ in the range $t = (2.2, 7)$. At the instant $t = 6$, variable a is momentarily false, and consequently, $y = 0$ at $t = 6$, since the output of the and block evaluates to false at that instant.

animate

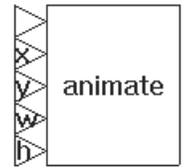

Block Category: Animation

The `animate` block lets you animate an image during simulation. For more information, see page 83.

asin



$$y = \arcsin x$$


Block Category: Transcendental

The `asin` block produces the inverse sine of the input signal. The output is an angle in radians.

Examples

1. Computation of $\sin^{-1}(1) = \pi/2$; $\sin^{-1}(0) = 0$

This equation can be realized as:

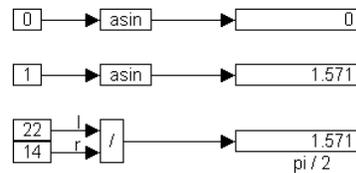

Two `const` blocks, set to 0 and 1, are fed to the `asin` blocks. For comparison, the constant value of $\pi/2$ is generated by feeding two `const` blocks, set to 22 and 14, into the “l” and “r” inputs of a `/` block. From the results obtained, the `asin` blocks yield correct values for the angles.

atan2



$$y = 4\text{quad arc tan}(x_1, x_2)$$


Block Category: Transcendental

The `atan2` block computes the four quadrant inverse tangent of the input signals. The `atan2` block uses the signs of both input signals to determine the sign of the output signal. The output is an angle in radians.

Examples

1. Computation of $\tan^{-1}(\infty) = \pi/2$

This equation can be realized as:

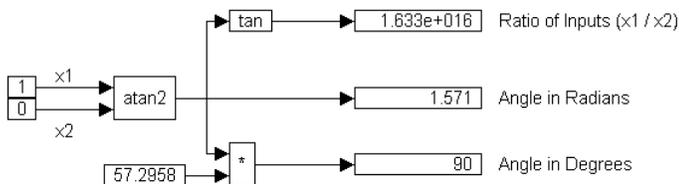


To convert radians to degrees, the angle in radians is multiplied by $(180/\pi) = 57.2958$.


Since the `atan2` block uses the value of x_1 , the signs of x_1 and x_2 , and the ratio x_1/x_2 in computing the inverse tangent, the result depends on all these parameters. In the current case, since the ratio is infinity, `atan2` computes the inverse correctly to be $\pi/2$ radians, or 90° . Also, in the current case, x_1 can be any positive value, since its ratio with 0 will be infinity, regardless of its value.

2. Computation of $\tan^{-1}(-1)$: quadrant dependency

Using the same configuration in the above example, $\tan^{-1}(-1)$ can be realized as:

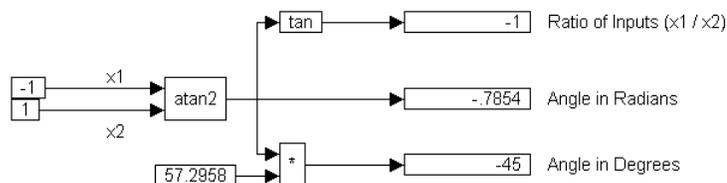

Here, the angle obtained is -0.7854 radians, or -45° , because the `atan2` block determines that the angle lies in the fourth quadrant. However, it is immediately apparent that the same ratio of -1 can be obtained by flipping the signs on x_1 and x_2 :

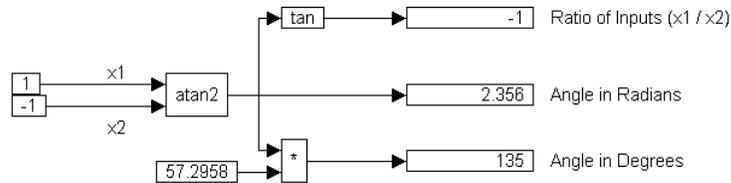

In this case, the `atan2` block uses the relative signs of x_1 and x_2 to determine that the angle lies in the second quadrant, and yields an angle of $180 - 45 = 135^\circ$, or 2.356 radians.


bessel



$$y = \text{bessel}_n x$$

Block Category: Transcendental

The `bessel` block generates the Bessel function of order n .

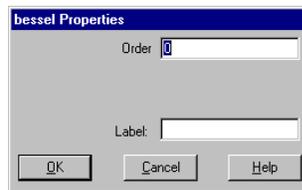

Order: Sets the order of the Bessel function. Specify the order as an integer. The default is 0.

Label: Indicates a user-defined block label.

Examples

1. Approximation of $\sin(a \sin \phi)$

Bessel functions come up frequently in the analysis and solution of nonlinear

differential equations. Consider the following approximation:


$$\sin(a \sin \phi) = 2 \sum_{n=0}^{\infty} J_{2n+1}(a) \sin[(2n+1)\phi]$$

where a and ϕ are parameters, and J_m is a Bessel function of order m . Such approximations are a part of the standard procedure for obtaining approximate analytical solutions to equations of the type:

$$\ddot{u} + 2\varepsilon\mu \sin \dot{u} + u = K \cos \Omega t$$


These equations are used in the harmonic analysis of forced oscillations of single degree of freedom systems.

The above approximation can be realized as:

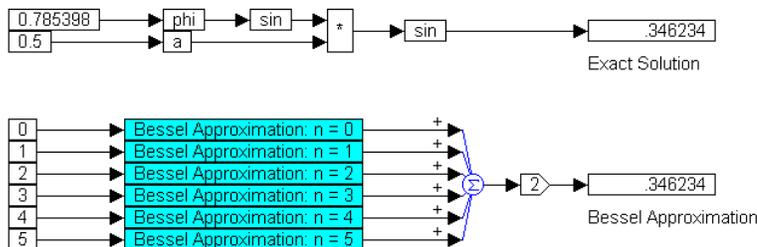

Two `const` blocks produce $\pi/4$ and 0.5 as the values for ϕ and a , respectively. The sine of ϕ is multiplied by a and the result is fed through another `sin` block to compute the exact solution.

Six `const` blocks, set to 0 through 5, generate different terms of the infinite series approximation. In this case, only the first six terms of the series are retained. Each of these `const` blocks is connected to a compound block, which has the following internal structure:

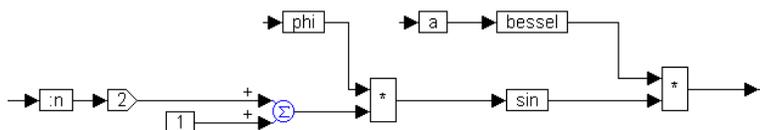


The `const` block feeds a value to a local variable `:n`. The output of `:n` is connected to a `gain` block set to 2. The output of the `gain` block, and the output of a `const` block set to 1, are fed into two inputs of a `summingJunction` block. The output of the `summingJunction` block and the output of variable `phi` are

connected to a * block, to compute the term $(2n+1)\phi$. The variable a is connected to a `bessel` block whose internal order is set to the correct value (0, 3, 5, 7, 9, or 11, depending on the value of n).

At the top level, the outputs of the six compound blocks are summed using a six input `summingJunction` block, and the output of the `summingJunction` block is connected to a `gain` block set to 2. The output of the `gain` block is connected to a `display` block.

From the results obtained, it is proven that by retaining the first six terms in the approximation, very close agreement can be obtained with the actual value of $\sin(a \sin \phi)$.


bezel

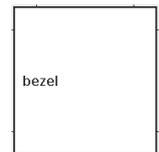

Block Category: Annotation

The `bezel` block is an effective way to add background characteristics, such as operator control panels, to your screen. Designed to be used in display mode, the `bezel` block accepts bitmaps or background color specifications. When display mode is turned on, `bezel` blocks act as background and appear beneath other blocks.

When display mode is turned off, you can resize a `bezel` block by dragging on its borders. If a bitmap is associated with the `bezel` block, it initially assumes the size of the bitmap. For solid color backgrounds, the chosen color fills in the bezel area and can also be resized. When you turn on display mode, the sizing border goes away.

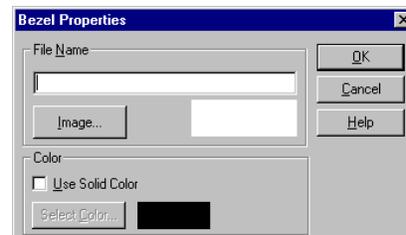

File Name: Indicates the name of the .BMP file used as the background bezel. You can type the file name directly into this box or select one using the Image button.


Color: Lets you use a solid color as the background for the bezel. To select a color, activate Use Solid Color and click on the Select Color button to choose a color. When Use Solid Color is not activated, the bezel block defaults to the name of the .BMP file specified in the File Name box.

buffer



Block Category: Matrix Operations

The buffer block places a sequence of values in a buffer based on the buffer length, the time between successive samples, and the duration of the simulation. The buffer block accepts a single scalar input and produces a single vector output. It is useful for performing basic digital signal processing operations.

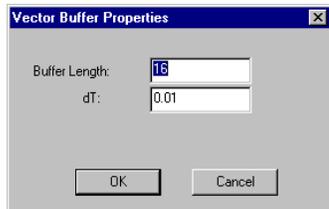


Buffer Length: Determines the number of samples; that is, the size of the buffer.

dT: Determines the time between successive samples; that is, the rate at which samples of the incoming signal are collected and placed in the buffer. The block samples if the current time is greater than or equal to the last sample time plus the dT.

Examples


1. Basic buffer operation

Consider the following buffer block, with a buffer length of 4 and time between successive samples of 0.01.

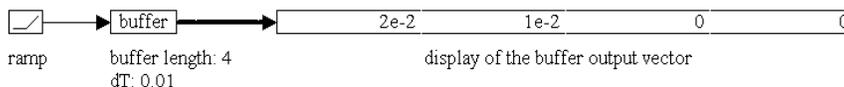

For simplicity, let the simulation step size be equal to 0.01. If the input to the buffer is an arbitrary non-zero signal, such as a ramp signal, then after two simulation time steps, the output of buffer is a vector of length 4, with the first two

elements containing non-zero values and the remaining two still at zero. At the very next time step, the simulation appears as:

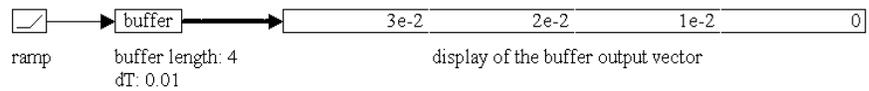


The previous values are pushed down the vector by one cell, and the top cell is occupied by the latest sample. Once the simulation goes beyond four time steps, the output will be a full vector.

Obviously, if the input signal itself is zero for some points, those values will be reflected accurately in the output.

2. Computation of FFT and inverse FFT

Consider a simple example, where a sinusoidal signal is converted to frequency domain via FFT, and then reconstructed using the IFFT.

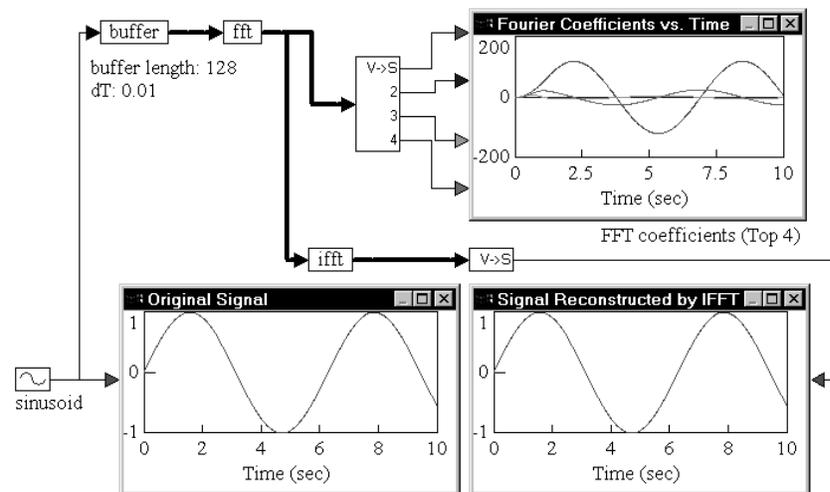

A sinusoid block generates a sinusoid signal with a frequency of 1 rad/sec. The signal is passed through a buffer block of length 128 samples and a time between successive samples of 0.01. The output of the buffer block is connected to an fft block, which computes a 128-sample FFT of the original sinusoid at a sampling rate of 0.01.

The output of the fft block is Fourier coefficients. The individual coefficients are accessed using a vecToScalar block. The first four coefficients are plotted to show their variation with time.

Signal reconstruction is performed by feeding the output of the `fft` block to an `ifft` block to compute the IFFT. The output of the `ifft` block is a vector of length 128 samples. The contents of this vector are just 128 sinusoid reconstructions, with each sinusoid trailing the preceding sinusoid by an amount equal to the sampling rate.

The first element in the `ifft` output vector does not have any delay because zero time has elapsed between the FFT and IFFT phases. In most real-world situations, however, there is a small, non-zero delay between the input signal and its reconstruction that is introduced by the processor performing the numerical computations of FFT and IFFT algorithms.

button




$$y = \text{state} - 1$$

Block Category: Signal Producer

The `button` block lets you dynamically insert signal values during a simulation.

You can set the number of states that a `button` block has, from two to a maximum of 16. You can also associate a bitmap with any of the states. The `button` block toggles between white and red if it is a 2-state button and there are no bitmaps associated with it.

The `button` block also provides cycle through, pie area, push button horizontal, and vertical hit testing.

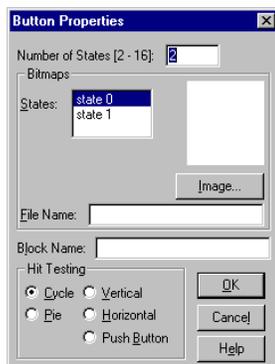

Number Of States [2-16]: Indicates the number of states for the `button` block. The maximum allowable states is 16. The number of listed states in the States box is determined by the value entered in the Number of States box.

Bitmaps: Lets you associate a bitmap file with the selected state. To make an association:


1. From the States box, select a state.
2. In the File Name box, enter the bitmap file name to be associated with the state. If you do not know the name or location of the file, click on the Image button to select one. A picture of the selected bitmap appears to the right of the States box.

Block Name: Indicates a name for the button block. The name appears only when there is no bitmap associated with the block.

Hit Testing: You have the choice of five hit testing methods.

- **Cycle Through:** Causes the state to increase by 1 each time you click the right mouse button over the block. When the maximum state value is reached, the next mouse click changes the state back to 0.
- **Pie:** Divides the block into a number of pie-shaped wedges equal to the number of states. When you click the right mouse button over a particular wedge or when you drag the mouse over the button block, the state changes. States advance in a clockwise direction with State 0 at the top.
- **Vertical:** Divides the block into a number of vertical wedges equal to the number of states. When you click the right mouse button over a particular wedge or when you drag the mouse over the button block, the state changes. State 0 corresponds to the bottom wedge; state N corresponds to the top wedge.
- **Horizontal:** Divides the block into a number of horizontal wedges equal to the number of states. When you click the right mouse button over a particular wedge or when you drag the mouse over the button block, the state changes. State 0 corresponds to the leftmost wedge; state N corresponds to the rightmost wedge.
- **Push Button:** Activates state 1 while you hold down the mouse button. When you release the mouse button, it activates state 0. Push button hit testing only supports a two-state button block.

case

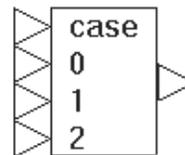

$$y = x_{n+2}$$

Block Category: Nonlinear

The `case` block lets you specify an unlimited number of execution paths based on the value of a single input, called the case input value. The case input value is the top input to the block and is labeled *case*. The remaining inputs are the possible execution paths. They are labeled 0 through n . These inputs operate on alphanumeric text.

The main application of the `case` block is in the construction of large nested if-else decision structures, where regular if-else constructs using Boolean blocks become too cumbersome.

When you want to output a particular element in a matrix, use the `index` block.

Case input value: The following rules apply to values fed into the connector tab labeled *case*:

- The case input value must be scalar. If a non-integer value is fed into it, it is truncated. For example, 0.999 is truncated to 0.
- If the case input value targets an out-of-range input, the `case` block returns an error. For example, an error results if the case input value is 5 for a four-element case block.
- If the case input value targets an unconnected input, the `case` block outputs a 0.

Scalar and matrix output: With the exception of the case input, all other inputs to the `case` block can be scalar, vector, or matrix.

Examples

1. Implementation of five scalar branches

Consider the decision tree:

If $J = 0$, then $Y = A$;

else

If $J = 1$, then $Y = B$;

else

If $J = 2$, then $Y = C$;


else

If $J = 3$, then $Y = D$;

else

If $J = 4$, then $Y = E$;

If A , B , C , D , and E are assumed to be constant values equal to 7, 14, 21, 28, and 35 respectively, the decision tree can be realized as:

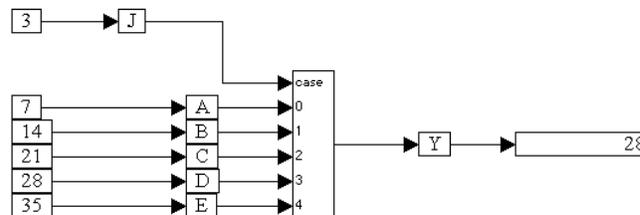

Six `const` blocks produce values for the `variable` blocks named J , A , B , C , D , and E . The outputs of these `variable` blocks are connected to a `case` block, with J connected to the case input, and `variables` A , B , C , D , and E connected to inputs 0, 1, 2, 3, and 4 respectively. The output of the `case` block is fed through a `variable` named Y and into a `display` block.

Since J is set to 3, the `variable` D is presented to the output as expected, and consequently, Y takes on the value of D , namely 28.

2. Implementation of three matrix branches

Consider the following part of the decision tree presented above:

If $J = 0$, then $Y = A$;

else

If $J = 1$, then $Y = B$;


else

If $J = 2$, then $Y = C$;

If you let A , B , and C be:

$$\mathbf{A} = \begin{bmatrix} 0 & 0 \\ 0 & 0 \end{bmatrix}; \mathbf{B} = \begin{bmatrix} 1 & 0 \\ 0 & 1 \end{bmatrix}; \mathbf{C} = \begin{bmatrix} 1 & 1 \\ 1 & 1 \end{bmatrix}$$

the decision tree can be realized as shown on the next page.

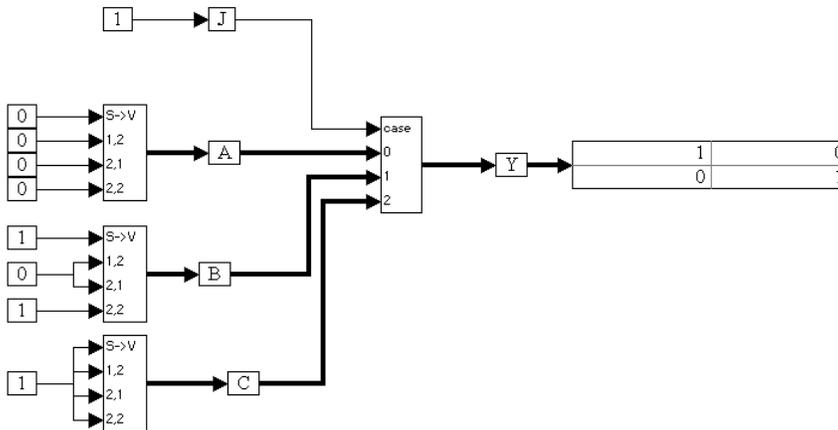

Eight const blocks generate the elements of the three matrices, represented as three scalarToVector blocks. The variable *J* is set to 1 and is fed into the case input of a case block. The outputs of variables *A*, *B*, and *C* are wired to inputs 0, 1, and 2 of the case block. The output of the case block is connected to a variable *Y*, which is wired to a display block.

Since *J* is set to 1, the contents of variable *B* are presented at the output of the case block such that $Y = B$.

comment



Block Category: Annotation

The comment block adds a comment to the diagram. When you position the pointer over the block and click the right mouse button, the pointer changes into a vertical I-beam, indicating that you're in text-entry mode. As you insert text, VisSim automatically scrolls the text if it runs out of room in the viewable region of the block. To correct or remove text, use the DEL and BACKSPACE keys. To exit text-entry mode, click the right mouse button on the comment block a second time.

You can also copy text from an application file into a comment block. For example, to copy text from a WORD document, highlight the text to be copied and press CTRL+V. In the comment block, position the I-beam where you want to insert the text and press CTRL+C.

To retain the format of the copied text, activate the Use Rich Text Format under the Preferences tab in the dialog box for the Edit > Preferences command. If Use Rich

Text Format is not activated, the text will revert to the text format specified with the View > Fonts command.

When reading a comment, use the scroll bar to move text in and out of the viewable region. To resize a comment block, drag on its edges.

const



$y = \text{constant value}$


Block Category: Signal Producer

The const block generates a constant signal.

The const block accepts alphanumeric text strings and matrix data.

Alphanumeric text: You can create alphanumeric text strings that VisSim displays upon the occurrence of a conditional event. The blocks that operate on alphanumeric text strings are `summingJunction`, `case`, `display`, and `merge` blocks.

Matrix data: You can output matrix data from a const block. VisSim indicates that the block contains matrix data by using a vector wire when attaching the const block to another block.

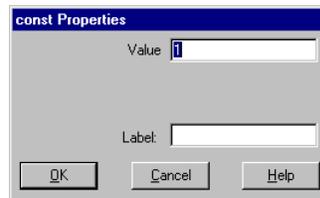


Value: Indicates the value of the output signal. The default is 1.

When entering alphanumeric text strings, enclose them in quotation marks. When entering matrix data, enclose them in square brackets and separate each element with a space. To start a new row, use a semi-colon.

Label: Indicates a user-defined block label.


Examples

1. Conditional alarm using const, merge, and display blocks

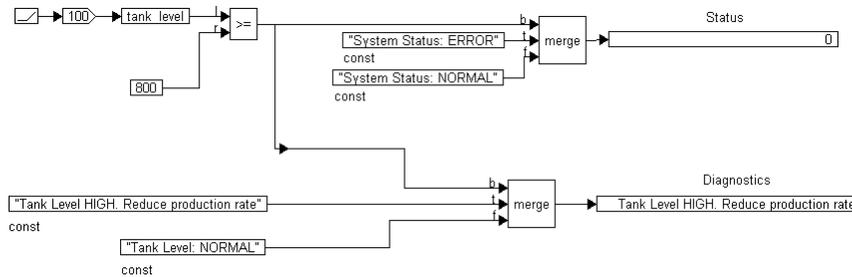

A tank level is monitored using two merge blocks and four const blocks. The top merge block tracks the tank level. The simulation operates normally until the tank level reaches or exceeds 800, at which point an ERROR is displayed. The lower merge block indicates the necessary operator intervention.

2. Creation of a 3 x 3 matrix

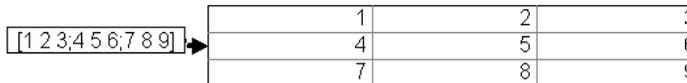

constraint



Block Category: Optimization


The **constraint** block is used to solve an implicit equation. For more information, see [Chapter 8, Performing Global Optimization.](#)

convert



Block Category: Arithmetic


The **convert** block converts the data type of the input signal to one of the following: char, unsigned char, short, unsigned short, int, long, unsigned long, float, double, matrix double, scaled int, or string. To check for overflow errors, activate Warn Numeric Overflow under the Preferences tab in the dialog box for the Simulate > Simulation Properties command.

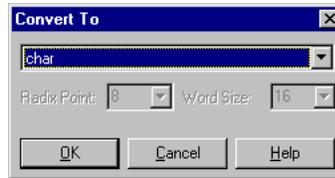

Radix Point: This parameter lights up only when Scaled Int is selected. It represents the number of bits provided for the integral part of the number. The difference between the word size and the radix point represents the mantissa (or fractional part of the number).

Word Size: Specifies the word size in bits.

COS

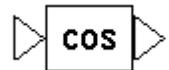

$$y = \cos x$$


Block Category: Transcendental

The `cos` block produces the cosine of the input signal. The input signal must be represented in radians.


Examples

1. Computation of $\cos(2\theta) = 2\cos^2(\theta) - 1$

With θ chosen to be $\pi/3$, the above trigonometric identity can be realized as:

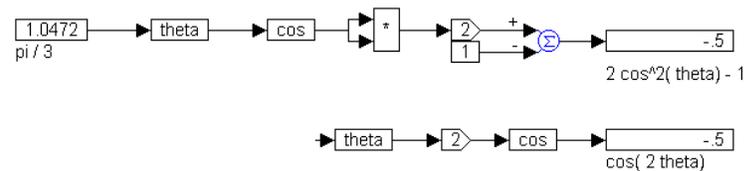

cosh

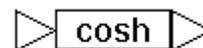

$$y = \frac{e^x + e^{-x}}{2}$$


Block Category: Transcendental

The cosh block produces the hyperbolic cosine of the input signal. The input signal must be represented in radians.


Examples

1. Computation of $\cosh(2\theta) = \cosh^2(\theta) + \sinh^2(\theta)$

With θ chosen to be π , the above trigonometric identity can be realized as shown on the next page.

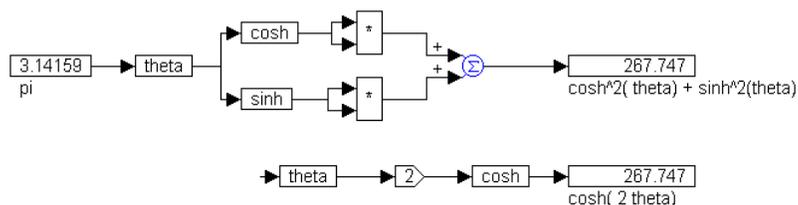

cost

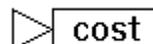

Block Category: Optimization

The cost block measures the cost function for parameter optimization. For more information, see [Chapter 8, Performing Global Optimization.](#)


crossDetect



$$y = \begin{cases} -1 & \text{if } x \text{ crosses crosspoint with neg. slope} \\ 1 & \text{if } x \text{ crosses crosspoint with pos. slope} \\ 0 & \text{otherwise} \end{cases}$$

Block Category: Nonlinear

The `crossDetect` block monitors its input value and compares it with a user-specified crosspoint. When the input value crosses the crosspoint, the `crossDetect` block outputs either +1 or -1, depending on whether the crossover occurred with a positive slope or negative slope, respectively. If a crossover is not detected, the `crossDetect` block outputs 0.

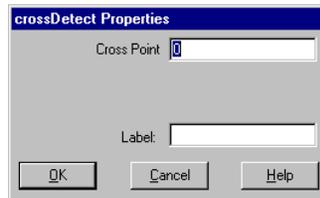

Cross Point: Represents the value that, when x crosses it, causes the output signal to go to 1, -1, or 0. The default is 0.

Label: Indicates a user-defined block label.

Examples


To obtain correct results from the examples described below, increase the point count for the plot blocks to at least 1,000.

1. Detection of zero crossover of a sinusoid

Consider the equation:

$$y = 1 \text{ if } \sin(t) = 0, \text{ else } y = 0$$

This equation can be realized as shown in the diagram on the following page.

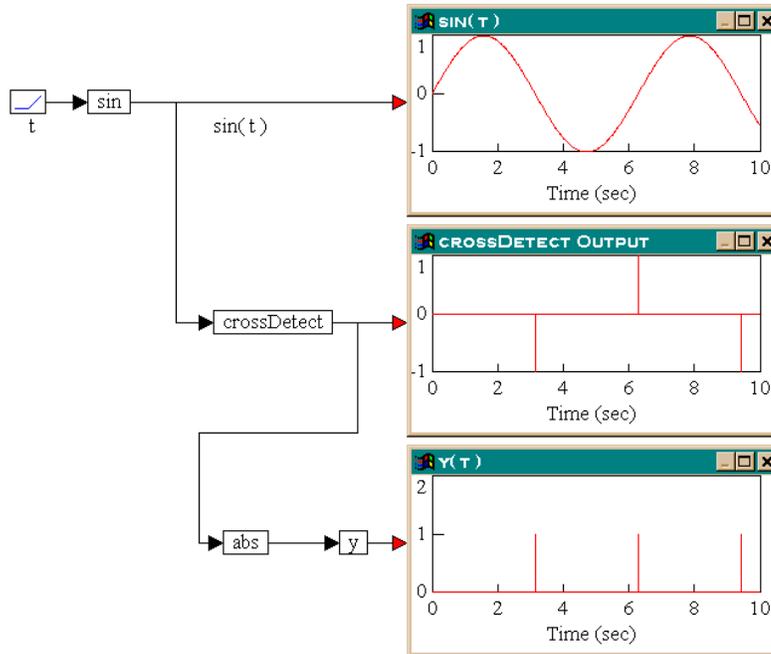

As can be seen from the `crossDetect` block output, three 0 crossings are detected in the simulation. The first and third 0 crossings occur with negative slope (that is, the value of $\sin(t)$ is decreasing, as it approaches zero), while the second 0 crossing occurs with positive slope (that is, the value of $\sin(t)$ is increasing as it approaches zero.) Consequently, the first and third 0 crossing events are -1, and the second 0 crossing event is +1.


However, since y is required to be equal to +1 whenever $\sin(t) = 0$, irrespective of the slope, the output of the `crossDetect` block is passed through an `abs` block to extract the absolute value, and this output is defined as the variable y . The bottom plot block shows that $y = 1$ when $\sin(t) = 0$; otherwise $y = 0$.

2. Detection of non-zero crossover with externally set crosspoint

Consider the equation:

$$y = 1 \text{ if } \sin(t) = 0.5, \text{ else } y = 0$$

This equation can be realized exactly as above by setting the internal crosspoint on the `crossDetect` block to 0.5. Unfortunately, this may not be acceptable in some cases, particularly when the crosspoint itself is to be computed as a part of the simulation. In such cases, the crosspoint must be set externally, as shown in the diagram on the following page.

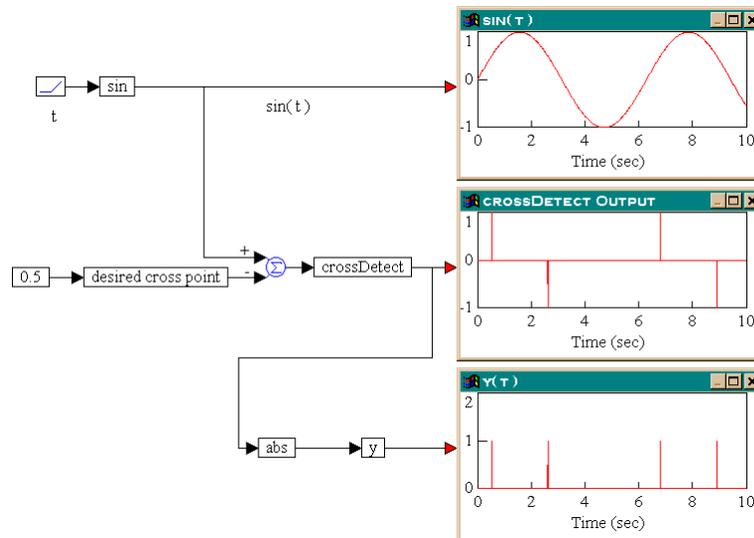

The key difference here is that the output of the `sin` block is connected to a `summingJunction` block, which computes the difference between $\sin(t)$ and a variable called *desired cross point*. This difference is connected to the `crossDetect` block, which has an internal crosspoint of 0.

In effect, a non-zero crossover detection problem is converted to a 0 crossover detection problem. That is, the problem of $y = 1$ when $\sin(t) = 0.5$ is converted to $y = 1$ when $\sin(t) - 0.5 = 0$. The rest of the diagram is identical to the previous one.

date

Fri Sep 29 15:22:38 1995

Block Category: Annotation

The `date` block displays the current date and time. The date and time are updated when you move a block, print the diagram, or repaint the screen. If you need to reset the time or date, use the system Control Panel. For more information, see the *Microsoft Windows User's Guide*.

DDE



Block Category: DDE

The DDE block exchanges information with another Windows application. Use this block when you want to create a link that sends information to and receives information from another application. You can create links between VisSim and other applications that support DDE.

For more information on the DDE block, see page [130](#).

DDEreceive



Block Category: DDE

The DDEreceive block creates a DDE link that passes information from a Windows application (referred to as the source or server) into a block diagram (referred to as the destination or client).

For more information on the DDEreceive block, see page [130](#).

DDEsend




Block Category: DDE

The DDEsend block creates a DDE link that passes information from a block diagram (referred to as the source or server) to another Windows application (referred to as the destination or client).

For more information on the DDEsend block, see page [130](#).

deadband

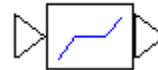

$$y = \begin{cases} 0 & \text{if } |x| \leq \frac{\text{deadband}}{2} \\ x - \left(\text{sign}(x) \frac{\text{deadband}}{2} \right) & \text{otherwise} \end{cases}$$

Block Category: Nonlinear

The deadband block produces an output signal, which is the input signal reduced by a zone of lost motion about the signal's 0 value. Use this block to simulate play in mechanical systems, such as gears or chains.



Dead Band: Indicates the width of the zone of lost motion about the input signal's 0 value. The default is 0.2.

Label: Indicates a user-defined block label.

derivative



Block Category: Toolbar

The `derivative` block appears on the toolbar () when you install VisSim 3.0b+. It calculates the change in function value with respect to time.

The `derivative` block has two inputs: step size and signal. The step size indicates the sampling rate of the derivative. It must be greater than zero. When the step size is large with respect to the function, the signal can become unstable. When you integrate the output of the `derivative` block, you will see degradation in the signal.

dialogConstant



Block Category: Signal Producer

The `dialogConstant` block lets you easily reconfigure the logic encapsulated in a compound block without drilling into the compound block and editing each individual block.

For more information, see page [163](#).

display




display = x_1

Block Category: Signal Consumer

The `display` block displays the current value of the input signal in any number of significant digits. You can select a color for the displayed value, as well as a background color for the block.

The `display` block automatically expands to display vector and matrix elements in individual cells. To display alphanumeric text strings in their entirety, you may have to increase the value in the Display Digits box.

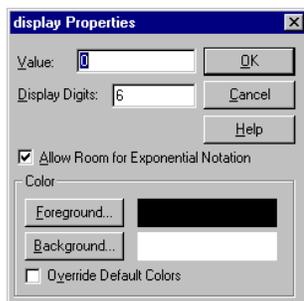

Value: Controls the current value in the display. The default is 1.

Display Digits: Indicates the number of displayed significant digits. The value you enter overrides the setting of the High Precision Display parameter under Preferences in the dialog box for the Edit > Preferences command. The default is 6.

Allow Room For Exponential Notation: Expands the `display` block so there is room for exponential notation. If you wish to have a very small `display` block, perhaps for use in display mode, you should turn off this option.

Color: Applies background and foreground color to the `display` block. Click on the Foreground and Background buttons to select a color. The selected colors are displayed to the right of the buttons. To override the background color selected using the View > Colors command, activate Override Default Color.

dotProduct



$$y = \sum_{K=1}^N x1_K \times x2_K$$

Block Category: Matrix Operations

The `dotProduct` block produces a single value summation of an element-by-element multiply. The `dotProduct` block accepts two vector inputs and produces a scalar output. If the input vectors have an uneven number of elements, an error occurs.

Multiplying scalars and matrices

To multiply two or more scalars, use the `*` block, as described on page [190](#).


To multiply two matrices, use the `multiply` block, as described on page [263](#).

embed



The `embed` block lets you embed a multi-level block diagram in the current block diagram. For more information, see page [173](#).

error

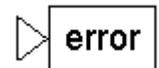

error condition = x_1

Block Category: Signal Consumer

The `error` block flags an error in a simulation. When the input signal becomes non-zero, the `error` block and all compound blocks which contain it are highlighted in red and the simulation is stopped.

You can reset the error condition by clicking the right mouse button on the `error` block.

exp



$$y = e^x$$

Block Category: Transcendental

The exp block performs the inverse operation of the ln block and raises the input as a power of e . The irrational number e is the base of natural logarithms and is approximately equal to 2.7182828.


Examples

1. Computation of the value of e

The value of e can be obtained by providing an input value of 1 to an exp block as:



export

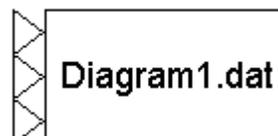

data file column _{n} = x_n

Block Category: Signal Consumer

The export block writes signals to a file in .DAT, .M, .MAT, or .WAV file format. The file can subsequently be used as input to VisSim or to a variety of other programs, such as MatLab and Microsoft Excel. For more information, see page 118.


expression



The expression block allows you to enter a C expression that VisSim parses and acts upon. With expressions, you can significantly reduce the number of blocks in your diagrams. For example, consider the simple equation:

$$x + \sin(y) = z$$

Without the `expression` block, the block diagram representation of this equation is:

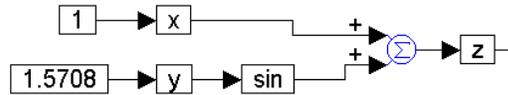

Instead of using the `variable`, `sin`, and `summingJunction` blocks, you can create a single `C` expression that performs the same function:



The elements `$1` and `$2` are VisSim-specific notation that reference the inputs.

What you can do with expression blocks:

- Speed up simulation time

The more blocks in a diagram, the longer it takes to simulate to the diagram. Consequently, as you replace series of blocks with `expression` blocks, the simulation time decreases.


- Reduce development time

Instead of inserting groups of blocks and wiring them together, you can insert a single `expression` block that performs the same function.

- Simplify troubleshooting

You can request that VisSim check the logic of the expression before you simulate the diagram. You simply press a key and VisSim does the rest.

Writing an expression: The Expression Properties dialog box lets you set up your expression.

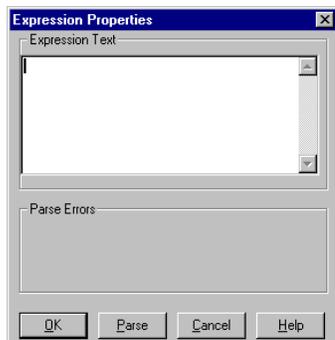

Expression Text: Indicates a C expression. A C expression consists of one or more operands and zeros or more operators linked together to compute a value. You enter expressions according to the syntax rules for the C language. If you're unfamiliar with the language, refer to *C: A Software Engineering Approach*, (Springer-Verlag, 1990).

The following VisSim-specific rules apply to entering C expressions:


- Inputs are referenced using the notation $\$n$, where n represents an connector number. For example, $\$1$ is input 1 (the top input connector), $\$2$ is input 2 (the second from the top input connector), and so on.
- Only one output value is allowed.

Parse Errors: Lists the errors that occur when VisSim parses the C expression. This is a read-only box.


Examples

1. Computation of $\cos^2(\theta) + \sin^2(\theta) = 1$

If θ is chosen to be $\pi/3$, the above expression can be realized as:

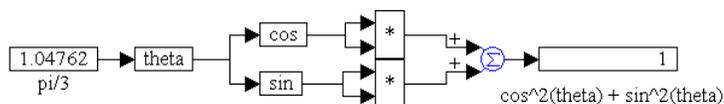

The same equation can be realized using an `expression` block as:

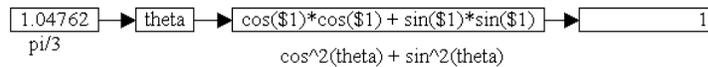

Here, the expression $\cos^2(\theta) + \sin^2(\theta)$ is entered directly into the `expression` block as `cos($1) * cos($1) + sin($1) * sin($1)`, where `$1` corresponds to the only input on the `expression` block. When the simulation runs, VisSim substitutes `$1` in the expression with the top input connected to it and then evaluates the expression.

From the results obtained, both methods yield the correct answer.

fft



Block Category: Matrix Operation

The `fft` block converts data from time domain to frequency domain.


The `fft` block computes an n -sample FFT at every simulation time step, where n is the length of the input vector.

If the input to the `fft` block is not an integral power of 2, automatic zero padding is performed to make the input vector size an integral power of 2. This is a standard procedure in FFT computation. The output of the `fft` block is Fourier coefficients. Individual coefficients can be accessed using a `vecToScalar` block.

Examples

1. Computation of FFT and inverse FFT

Consider a simple example, where a sinusoidal signal is converted to frequency domain via FFT, and then reconstructed using inverse FFT.

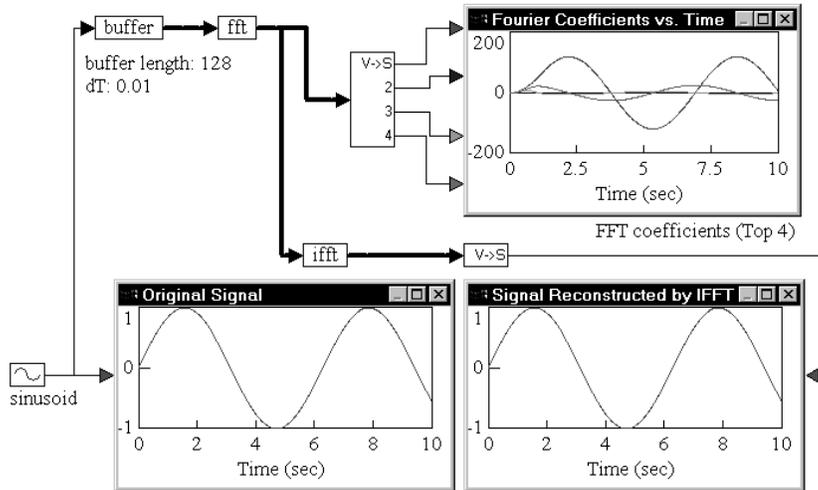


A `sinusoid` block generates a sinusoid signal with a frequency of 1 rad/sec. The signal is passed through a `buffer` block of length 128 samples and a `dT` of 0.01. The output of the `buffer` block is connected to an `fft` block, which computes a 128-sample FFT of the original sinusoid at a sampling rate of 0.01.

The output of the `fft` block is Fourier coefficients. The individual coefficients are accessed using a `vecToScalar` block. The first four coefficients are plotted to show their variation with time.

Signal reconstruction is performed by feeding the output of the `fft` block to an `ifft` block to compute the inverse FFT. The output of the `ifft` block is a vector of length 128 samples. The contents of this vector are just 128 sinusoid reconstructions, with each sinusoid trailing the preceding sinusoid by an amount equal to the sampling rate.

The first element in the `ifft` output vector does not have any delay because zero time has elapsed between the FFT and inverse FFT phases. In most real-world situations, however, there is a small, non-zero delay between the input signal and its reconstruction that is introduced by the processor performing the numerical computations of FFT and inverse FFT algorithms.

gain

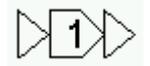


$$y = x \cdot \text{gain}$$

Block Category: Arithmetic

The `gain` block multiplies the input signal, by the gain amount. The input can be a scalar, vector, or matrix.

You can set initial conditions on `gain` blocks by using variable names. During simulation, the gain value is evaluated only once at the start of the simulation.

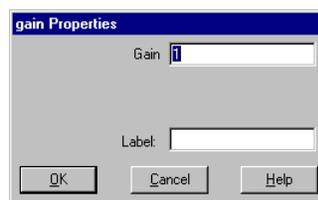


Gain: Indicates the constant multiplier of the input signal. The default is 1.

Label: Indicates a user-defined block label.

Examples

1. Gain of a scalar

Consider the equation $y(t) = 3 \sin(t)$, which can be realized as:

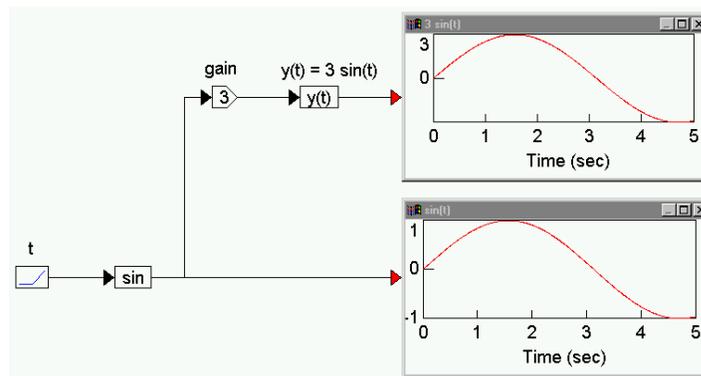


A ramp block is used to access simulation time t , a `sin` block generates $\sin(t)$, a `gain` block amplifies $\sin(t)$ to $3 \sin(t)$. Both $\sin(t)$ and $y(t)$ are shown in `plot` blocks for comparison.

2. Gain of a vector

Consider the equation:

$$\mathbf{z} = 7 \mathbf{x}$$

where $\mathbf{x} = [-1 \ 5.6 \ 4]$. This equation can be realized as:

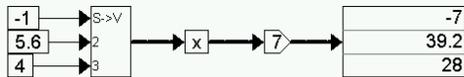

The `gain` block performs an element-by-element gain operation on the incoming vector.


3. Gain of a matrix

Consider the equation:

$$\mathbf{Z} = 4.2 \mathbf{X}$$


$$\text{where } \mathbf{X} = \begin{bmatrix} 2 & -5.6 & 4 \\ -1.2 & 2.1 & -3.6 \\ 1 & -8.7 & 6.4 \end{bmatrix}$$

This equation can be realized as:

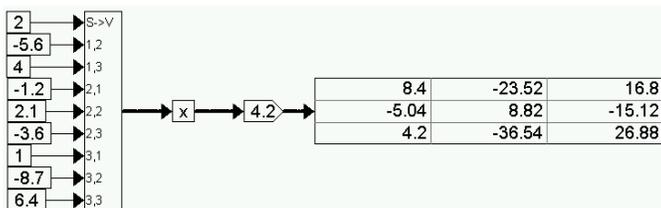


The `gain` block performs an element-by-element gain operation on the incoming matrix.

gaussian

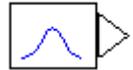

Block Category: Random Generator

The `gaussian` block creates a normally distributed, random noise signal. You specify a random seed value under the Preferences tab in the dialog box for the Simulate > Simulation Properties command.

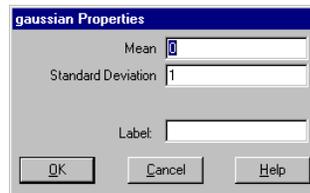

Mean: Indicates the center of the distribution. The default value is 0.

Standard Deviation: Indicates the distance from the mean, which covers one standard deviation. The default value is 1.

Label: Indicates a user-defined block label.


globalConstraint



Block Category: Optimization

The `globalConstraint` block provides side constraint information when writing your own global optimizer. For more information, see [Chapter 8, Performing Global Optimization.](#)

histogram

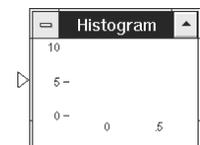

Block Category: Signal Consumer

The `histogram` block shows how data are distributed over the course of a simulation. For more information, see page [79](#).

ifft



Block Category: Matrix Operation


The `ifft` block converts data from frequency domain to time domain. The `ifft` block computes an n -sample inverse FFT at every simulation time step, where n is the length of the input vector.

If the input to the `ifft` block is not an integral power of 2, automatic zero padding is performed to make the input vector size an integral power of 2. This is a standard procedure in inverse FFT computation. The output of the `ifft` block is Fourier coefficients. Individual coefficients can be accessed using a `vecToScalar` block.

Examples

1. Computation of FFT and inverse FFT

Consider a simple example, where a sinusoidal signal is converted to frequency domain via FFT, and then reconstructed using inverse FFT.

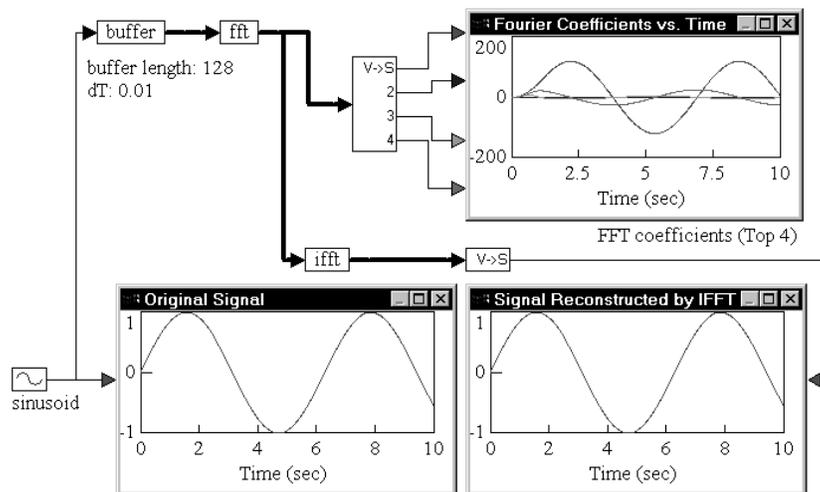

A `sinusoid` block generates a sinusoid signal with a frequency of 1 rad/sec. The signal is passed through a `buffer` block of length 128 samples and a sampling rate of 0.01. The output of the `buffer` block is connected to an `fft` block, which computes a 128-sample FFT of the original sinusoid at a sampling rate of 0.01.

The output of the `fft` block is Fourier coefficients. The individual coefficients are accessed using a `vecToScalar` block. The first four coefficients are plotted to show their variation with time.

Signal reconstruction is performed by feeding the output of the `fft` block to an `ifft` block to compute the inverse FFT. The output of the `ifft` block is a vector of length 128 samples. The contents of this vector are just 128 sinusoid reconstructions, with each sinusoid trailing the preceding sinusoid by an amount equal to the sampling rate.

The first element in the `ifft` output vector does not have any delay because zero time has elapsed between the FFT and inverse FFT phases. In most real-world situations, however, there is a small, non-zero delay between the input signal and its reconstruction that is introduced by the processor performing the numerical computations of FFT and inverse FFT algorithms.

import



$$y_n = \text{data_file_column}_n$$

Block Category: Signal Producer

The `import` block imports data points from a .DAT, .M, .MAT, or .WAV file and translates them into output signals. The data can be either fixed interval or asynchronous. For more information, see page 115.

index



Block Category: Annotation


The `index` block allows you to address a single element within a matrix. The `index` block can have two or three inputs. When there are two input, the top input specifies the matrix row (the matrix column is assumed to be 1), and the bottom input is the matrix. When there are three inputs, the top input specifies the matrix row, the middle input specifies the matrix column, and the bottom input is the matrix.

If you address an element outside the bounds of the matrix, the `index` block displays the following warning message:

Index n too big.

Index n is either 1 or 2, depending on which index exceeds the bounds first.

For example, a 6×1 vector fed into the `index` block yields six possible execution paths, as shown on the next page.

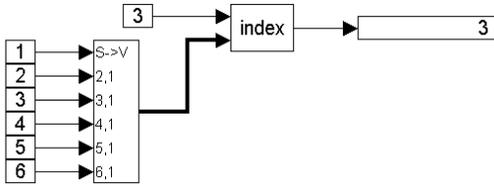

The `index` block outputs 1, 2, 3, 4, 5, or 6 depending on whether the index value is 1, 2, 3, 4, 5, or 6, respectively. In this example, the index value is 3, causing a 3 to be output.

It is important to know how an index value references matrix elements. Index values map to matrix elements in sequential order, starting with the element in *column1-row1*, through *column1-rowN*; then *column2-row1* through *column2-rowN*; and so on. For example, in the following 2×3 matrix, an index value of 3 yields 5:

INDEX VALUE 1: 1	INDEX VALUE 4: 2
INDEX VALUE 2: 3	INDEX VALUE 5: 4
INDEX VALUE 3: 5	INDEX VALUE 6: 6


In a 3×2 matrix, an index value of 3 yields 2:

1	2	3
4	5	6

Index value: The following rules apply to the index value:

- Index values that are non-integers are truncated. For example, 0.999 is truncated to 0.
- If the index value targets an unconnected matrix or vector element, the `index` block outputs a 0.
- If the index value targets an out-of-range matrix or vector element, the `index` block outputs spurious results. For example, if the index value is 5 for a four-element matrix, the output, might look something like this: 1.06983e-306.

int

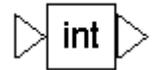

$$y = \text{integer part } x$$


Block Category: Nonlinear

The `int` block accepts a scalar input and outputs only the integer portion of the input. The `int` block does not perform numerical round-off operations. Thus, an input of 2.9999 yields 2. Inputs can be scalar constants or scalar variables.

Examples

1. Integer portions of scalar inputs

Consider three scalar inputs 1.7, 2.9999, and 3.0001. These inputs are applied to the `int` blocks, as shown below:

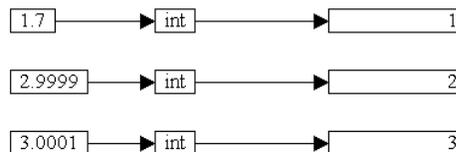

The `int` blocks isolate and output the integer portion of the scalar inputs.

integrator (1/S)




$$y = \int_{t_{\text{start}}}^{t_{\text{end}}} x dt$$

Block Category: Integration

The `integrator` block performs numerical integration on the input signal using the integration algorithm (Euler, trapezoidal, Runge Kutta 2d and 4th orders, adaptive Runge Kutta 5th order, adaptive Bulirsh-Stoer, and backward Euler (Stiff)) established with the Simulate > Simulation Properties command.

The `integrator` block is one of the most fundamental and powerful blocks in VisSim. This block, together with the `limitedIntegrator` and `resetIntegrator` blocks, allow you to solve an unlimited number of simultaneous linear and nonlinear ordinary differential equations.

You can set initial conditions on `integrator` blocks by using variable names. You can also reset the `integrator` block to its initial state using the `Simulate > Reset States` command, as described on page 59.

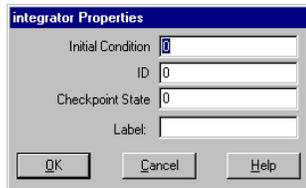

Initial Condition: Indicates the initial value of the integrator. The default value is 0.

ID: Represents an identification number for the block. It keeps track of the state number that VisSim assigns to the integrator. The number of states in any block diagram equals the number of integrators. The default value is 0.

Checkpoint State: Contains the value of the integrator state at the checkpoint. If you have not checkpointed your simulation using the `Simulate > Simulation Properties` command, the value is 0.

Label: Indicates a user-defined block label.

Examples

1. Solving a first order ODE

Consider the simple first order linear differential equation:

$$\dot{y} + y = r(t)$$


where $r(t)$ is an external input. In this case, assume that the external input to the system is a step function. In VisSim, such equations are best solved by numerical integration.

The first step is to isolate the highest derivative term on one side. To understand the procedure better, it is easier to think of isolating the highest derivative term on the right-hand side as:

$$r(t) - y = \dot{y}$$

This equation can be constructed as:


Isolate the highest derivative on the right hand side: $u(t) - y = \dot{y}$

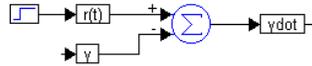

Here, three variable blocks are used for $r(t)$, y , and \dot{y} .

The second step is to integrate the highest derivative term a sufficient number of times to obtain the solution. Since the highest derivative is of first order, \dot{y} must be integrated once to obtain y . This can be realized as:


Integrate the highest derivative term as necessary: $y = \text{integral}(\dot{y})$

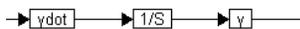

The overall simulation is shown below.

Isolate the highest derivative on the right hand side: $u(t) - y = \dot{y}$


Integrate the highest derivative term as necessary: $y = \text{integral}(\dot{y})$

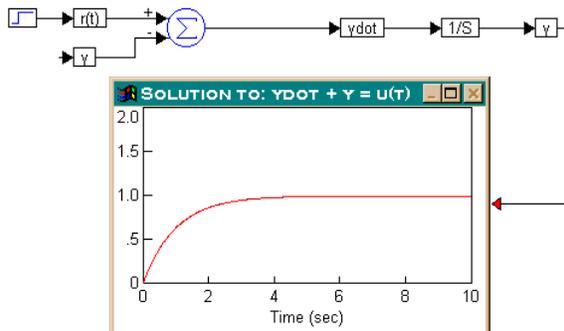

The result shown in the plot block indicates the solution of the differential equation subjected to a step external forcing function.

2. Setting the integrator initial condition internally

Consider the same problem above with the assumption that $y(0) = 3$. In this case, in addition to the external input $r(t)$, the system response also depends on $y(0)$. This initial condition can be set directly in the integrator block. The result for this case is:

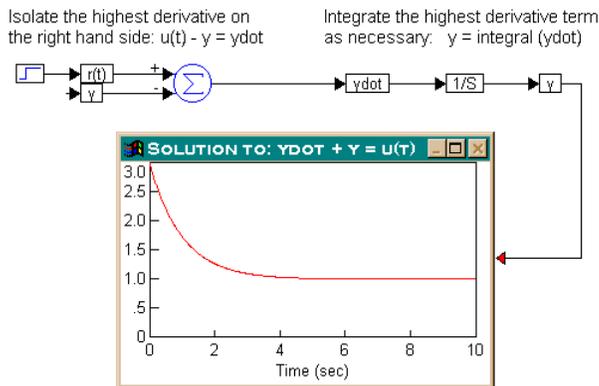

The plot block shows that the response $y(t)$ begins at $y(0) = 3$ and settles down to 1 for $t > 4.5$, as expected.


It is important to note that the initial condition on any state (or variable) must be set on the integrator block that is generating that state. (This concept becomes clearer in Example 4.)

3. Setting the integrator initial condition externally

Consider once again the following ordinary differential equation:

$$\dot{y} + y = r(t)$$

Let $r(t)$ be a step function and assume that $y(0) = -3.2$. The initial condition can be set externally, as shown on the next page.

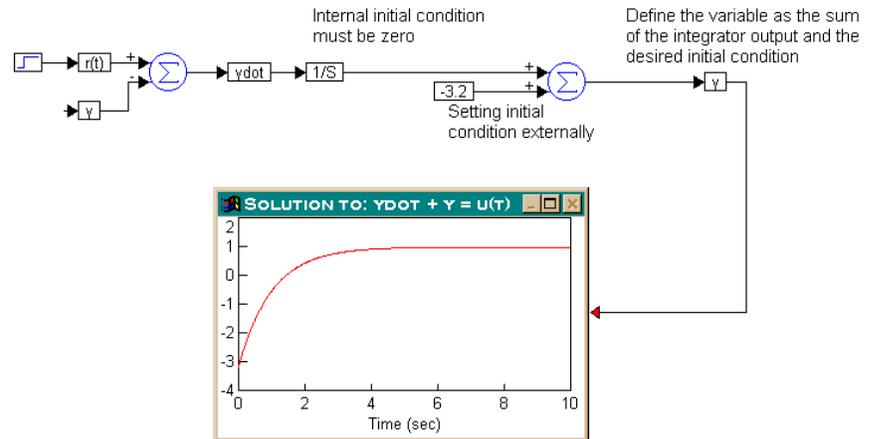

In this configuration, make sure that the internal initial condition of the integrator is set to zero. By default, all integrators have zero initial condition.

The results indicate that the solution of the ordinary differential equation, subject to the external input and the initial conditions, is computed correctly.

4. Second order nonlinear ODE with external initial conditions


Consider a second order nonlinear system given by:

$$\ddot{y} + y\dot{y} + 2y = r(t)$$

Furthermore, assume that $r(t)$ is a unit step function and that the initial conditions are given by:


$$y(0) = 1.0 \quad \text{and} \quad \dot{y}(0) = 1.2$$

The first step is to isolate the highest derivative term on the right-hand side as $r(t) - y\dot{y} - 2y = \ddot{y}$. This segment can be coded in VisSim as shown below:

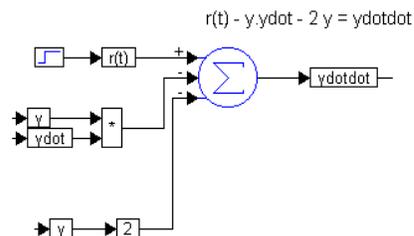


The second step is to integrate $y\dot{d}ot\dot{d}ot$ twice: once to generate $y\dot{d}ot$, and once more to generate y . As can be imagined, it is crucial to maintain consistent variable names

throughout. Furthermore, the initial conditions must be added using the same procedure described in Example 3. This segment can be realized as:

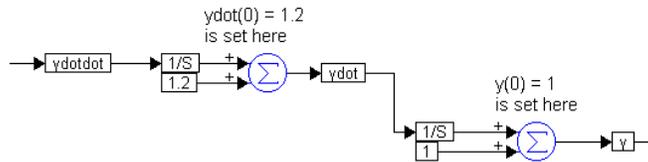


The complete solution for this problem is given by:

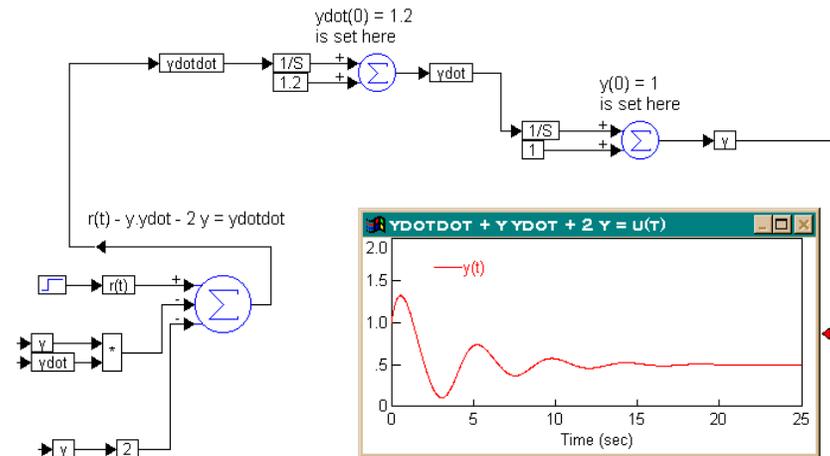

The solution of the equation, $y(t)$ is shown in the plot block.

This example illustrates the real power of numerical integration using VisSim. If you want to use the results of a computational segment in a given VisSim diagram as initial conditions for one or more integrators, replace the `const` blocks with appropriate `variable` blocks when setting the external initial conditions.

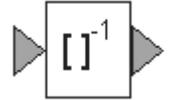


invert

$$[\mathbf{A}]^{-1} = \frac{\text{adj}(\mathbf{A})}{\det(\mathbf{A})}$$

Block Category: Matrix Operation

The `invert` block inverts a square matrix using singular value decomposition. The `invert` block accepts one vector input and produces one vector output.

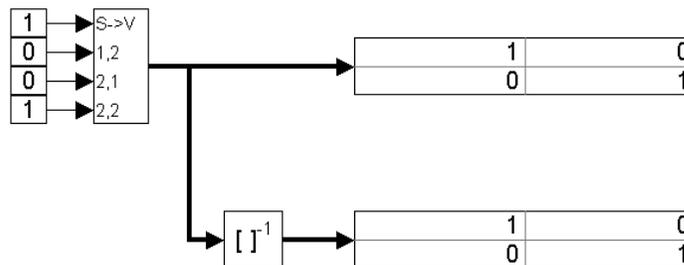


label



Block Category: Annotation

The `label` block lets you insert floating labels in a block diagram. You can choose the text attributes for the label, as well as a colored background. The `label` block is particularly useful for tagging signals.

Most block dialog boxes let you enter a label for the block. To display these labels, turn on the View > Block Labels command.

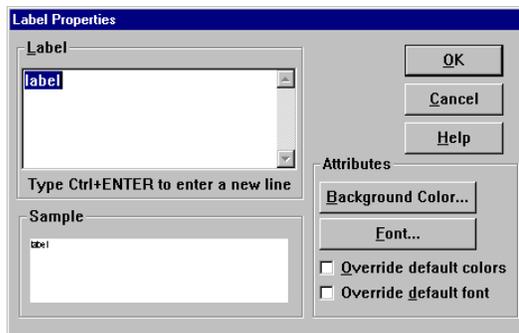

Label: Specifies a label. To continue a label to a new line, hold down the CTRL key while you simultaneously press the ENTER key.

Attributes: Assigns a background color and text attributes to the label. Click on the Background Color button to select a background color for the label. Click on the Fonts button to select a font, font style, point size, color, and special effects for the text. A sample of the text is displayed in the Sample box.

To override the selections in the View > Colors and View > Fonts dialog boxes, activate Override Default Colors and Override Default Font, respectively.

light




$$y = \begin{cases} \text{red} & \text{if } x_1 > \text{ub} \\ \text{green} & \text{if } \text{lb} \leq x_1 \leq \text{ub} \\ \text{blue} & \text{if } x_1 < \text{lb} \end{cases}$$

Block category: Signal Consumer

The `light` block is a tri-state alarm that glows a color, displays a bitmap image, or plays sound when supplied with a signal. By default, the `light` block glows red when the signal is greater than the upper bound; blue when the signal is less than the lower bound; and green when the signal is less than or equal to the upper bound and greater than or equal to the lower bound.

Associating an action with a state: To associate an action — for example, the display of a bitmap image file — with a given state, select the state from the Settings box; then click on the Bitmap button and choose the .BMP file to be associated with the state.

Setting up a light block: The `light` block's Properties dialog box lets you control its audio and visual alarms.

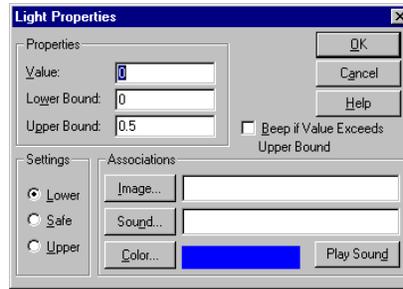

Properties: Establishes the lower and upper bounds for the signal, as well as the initial setting of the signal.

- **Value:** Indicates the initial setting for the signal. The default is 0.
- **Lower Bound:** Indicates the lower bound for the signal. When the signal is less than the specified lower bound, the `light` block performs the action (emits a color, sound, or image) associated with the Lower setting. The default is 0.
- **Upper Bound:** Indicates the upper bound for the signal. When the signal is greater than the specified upper bound, the `light` block performs the action (emits a color, sound, or image) associated with the Upper setting. The default is 0.5.

Settings: Indicates the setting to which color, sound, or an image is to be applied.

- **Lower:** The signal is less than the specified lower bound.
- **Safe:** The signal is less than or equal to the specified upper bound and greater than or equal to the specified lower bound.
- **Upper:** The signal is greater than the specified upper bound.

Associations: Indicates whether an image, sound, or color is to be applied to the specified setting.

- **Image:** Opens the File Select dialog box in which to choose a .BMP file to associate with the selected setting.
- **Sound:** Opens the File Select dialog box in which to choose a .WAV file to associate with the selected setting.
- **Color:** Opens the Color dialog box in which to choose a color to associate with the selected setting.

Play Sound: Plays the sound for the selected setting.

Beep If Value Exceeds Upper Bound: Forces the `light` block to beep when the signal exceeds the specified upper bound.

limit




$$y = \begin{cases} x_1 & \text{if } lb \leq x_1 \leq ub \\ lb & \text{if } x_1 < lb \\ ub & \text{if } x_1 > ub \end{cases}$$

Block Category: Nonlinear

The `limit` block limits the output signal to a specified upper and lower bound. The `limit` block accepts a scalar input. If the input is less than the lower bound, the `limit` block limits the output to the lower bound. Similarly, if the input is greater than the upper bound, the `limit` block limits the output to the upper bound. If the input falls within the specified bounds, the input is transferred to the output unchanged.

The `limit` block is particularly useful for simulating variables or processes that reach saturation.

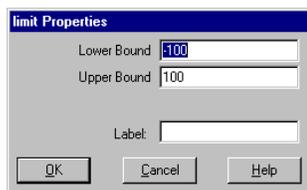

Lower Bound: Indicates the lowest value that the output signal can attain. The default is -100.

Upper Bound: Indicates the highest value that the output signal can attain. The default is 100.

Label: Indicates a user-defined block label.


Examples

1. Simulation of saturation

Consider a variable y such that:


$$y = \sin(t)$$

Furthermore, assume that y reaches saturation at +0.7 and -0.7. This equation can be realized as shown on the next page.

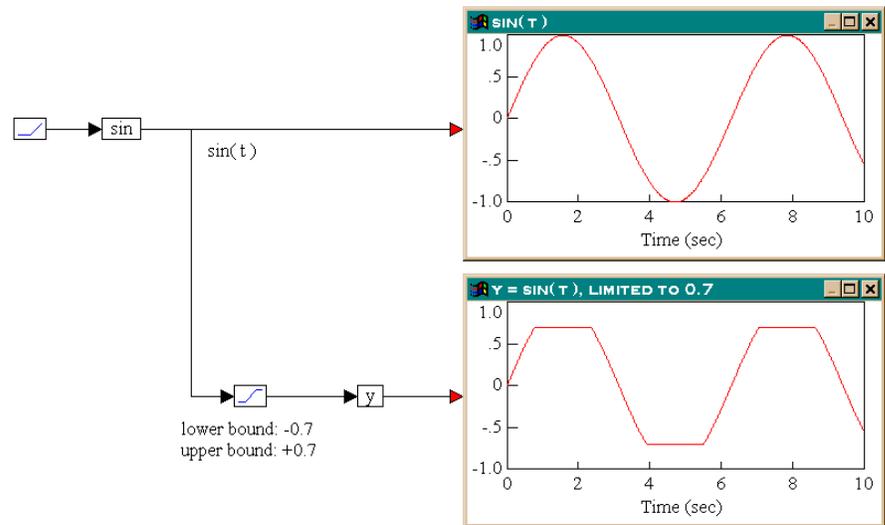

From the results in the two plot blocks, the output of the `Limit` block is identical to the input, when the input is within the bounds (-0.7 to +0.7). When the input is out of these bounds, the output is limited to the upper or lower bound values.

limitedIntegrator (1/S)

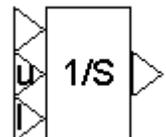

$$y = \begin{cases} \int_{t_{\text{start}}}^{t_{\text{end}}} x_1 dt & \text{if } x_2 \geq \int_{t_{\text{start}}}^{t_{\text{end}}} x_1 dt \geq x_3 \\ x_2 & \text{if } \int_{t_{\text{start}}}^{t_{\text{end}}} x_1 dt > x_2 \\ x_3 & \text{if } \int_{t_{\text{start}}}^{t_{\text{end}}} x_1 dt < x_3 \end{cases}$$

Block Category: Integration


The `limitedIntegrator` block integrates the input value and limits the internal state to specified upper and lower limits. If the integral state reaches its limit, it

backs off the limit as soon as the derivative changes sign. You set the integration algorithm with the Simulate > Simulation Properties command. Available algorithms are Euler, trapezoidal, Runge Kutta 2nd and 4th orders, adaptive Runge Kutta 5th order, adaptive Bulirsh-Stoer, and backward Euler (Stiff).

The inputs to the block are x_1 , the derivative; x_2 (U), the upper limit; and x_3 (L), the lower limit.

You can set initial conditions on `limitedIntegrator` blocks by using variable names. You can also reset the `limitedIntegrator` block to its initial state using the Simulate > Reset States command, as described on page 59.

The `limitedIntegrator` block is used in the prevention of wind-up in PI and PID controllers in control applications. It is also used in kinematics, electrical circuits, process control, and fluid dynamics.

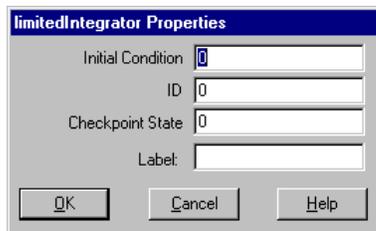

Initial Condition: Indicates the initial value of the integrator. The default is 0.

ID: Represents an identification number for the block, which holds the state number that VisSim assigns to the integrator. The number of states in any block diagram equals the number of integrators. The default is 0.

Checkpoint State: Contains the value of the integrator state at the checkpoint. If you have not checkpointed your simulation using the Simulate > Simulation Properties command, the value is 0.

Label: Indicates a user-defined block label.


Examples

1. Integration with constant limits

Consider a system whose dynamics are given by the differential equation:

$$\dot{x} = \sin(t)$$

Furthermore, assume that x must lie in the limits $5 \leq x \leq 6$ and that $x(0) = 5$. This system can be realized as shown on the next page.

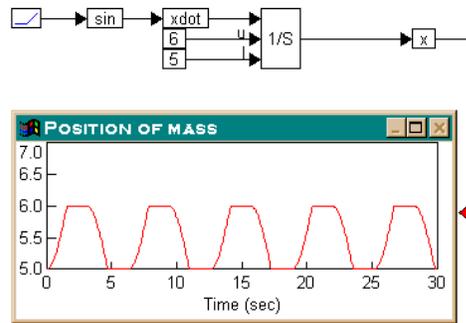


During simulation, the `limitedIntegrator` block limits the output to be within the upper and lower limits, namely 6 and 5, respectively.

2. Integration with time-varying limits

Consider a system whose dynamics are given by the differential equation:

$$\dot{x} = \sin(t)$$

Furthermore, assume that x must lie in the limits $0.2t \leq x \leq 2t$ and that $x(0) = 0$. This system can be realized as:

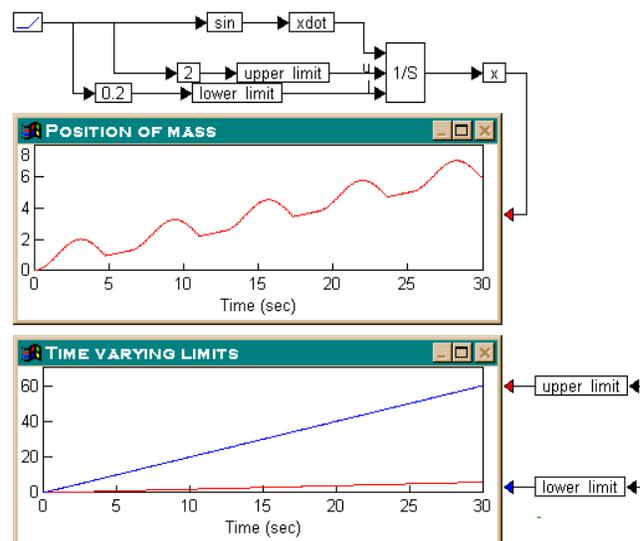

A ramp block is used to access simulation time, t ; simulation time is then used to feed the `sin` block, and two gain blocks, set to 2 and 0.2, to generate the time-

varying upper and lower limits. During simulation, the time-varying limits and the output of the `limitedIntegrator` block are displayed in the `plot` blocks.


lineDraw



Block Category: Animation

The `lineDraw` block lets you animate a line during simulation. You define the line by specifying two sets of x,y coordinate endpoints. You can also set the color, thickness, and style of the line. For more information, see page 83.

log10

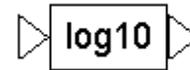

$$y = \log_{10}x$$


Block Category: Transcendental

The `log10` block generates the log base 10 of the input signal. The logarithm of 0 to any base is undefined. The logarithm of any number, when the base is the same number, is 1.

Examples


1. Computation of $\log_{10} y = \log_e y / \log_e 10$

With y chosen to be 100, and e as the base of the natural logarithm, this equation can be realized as:

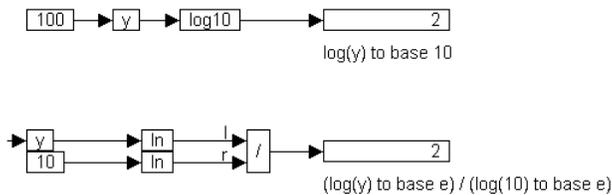

From the results obtained, $\log_{10} y = \log_e y / \log_e 10$ where e is the base of the natural logarithm. It can further be proved that $\log_a y = \log_b y / \log_b a$, where a , b , and y are any positive non-zero numbers.

ln

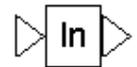

$$y = \log_e x$$


Block Category: Transcendental

The ln block generates the natural (Naperian) log of the input signal.

Examples

1. If $\ln(y) = x$, then $e^x = y$

With y chosen to be 10, and e as the base of the natural logarithm, this equation can be realized as:

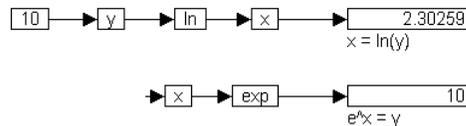

The exp block raises its input as a power of e , the base of natural logarithm. The quantity e is an irrational number, which is approximately equal to 2.718281828. From the results obtained, if $\ln(y) = x$, then $e^x = y$, where e is the base of the natural logarithm.

map



$$y_1(y_2 \dots y_n) = \text{table lookup } x \quad (1-D)$$

$$y = \text{table lookup}(x_1, x_2) \quad (2-D)$$

$$y = \text{table lookup}(x_1, x_2, x_3) \quad (3-D)$$

Block Category: Nonlinear

The map block performs piecewise linear interpolated 1-, 2-, and 3-dimensional table look-ups. For more information, see page [138](#).

MatLab Expression

Block Category: MatLab Interface

The `MatLab Expression` block evaluates a MatLab expression. For more information, see page [121](#).

MatLab Read Variable

Block Category: MatLab Interface

The `MatLab Read Variable` block reads a variable from the MatLab workspace into VisSim. For more information, see page [121](#).

MatLab Write Variable

Block Category: MatLab Interface

The `MatLab Write Variable` block writes a variable from the VisSim workspace into the MatLab workspace. For more information, see page [121](#).

max



$$y = \begin{cases} x_1 & \text{if } x_1 > x_2 \\ x_2 & \text{if } x_1 < x_2 \end{cases}$$

Block Category: Nonlinear

The `max` block compares scalar inputs for a higher value and generates an output signal with the higher value.


Examples

1. Comparison of two values

Consider the equation:

$$z = \max(x, y)$$

If x is a sinusoid that varies between -1 and +1, and y is a uniform random variable that varies between -1 and +1, this equation can be realized as shown on the next page.

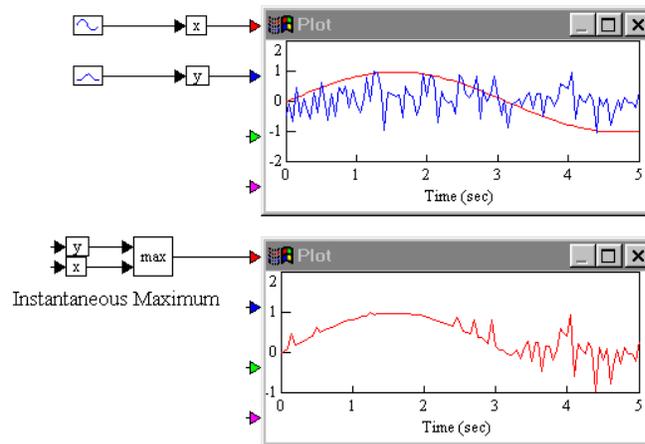


2. Computation of the maximum value of a given time-varying signal

Consider the equation:


$$z = \max(y)$$

where y is a uniform random variable that varies between -1 and +1. To find the maximum value that z attains, create the following diagram:

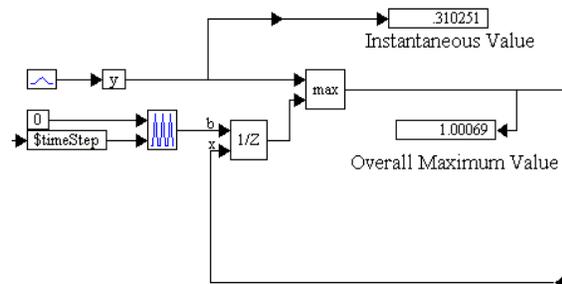

A `unitDelay` block stores the previous value of y . The `max` block compares the current and previous values of y . The larger of the current and previous values is fed back into the `unitDelay` block for the next round of comparisons. This way, the output of the `max` block is always the largest encountered value of y . The working details of this procedure are best examined by single-stepping through the simulation.

merge

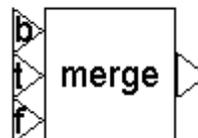

$$y = \begin{cases} x_2 & \text{if } |x_1| \geq 1 \\ x_3 & \text{if } |x_1| < 1 \end{cases}$$

Block Category: Nonlinear

The `merge` block examines x_1 (Boolean signal) to determine the output signal. The letters b, t, and f on the input connector tabs stand for Boolean, True, and False. The `merge` block accepts scalar, vector, and matrix input.

The `merge` block is particularly well-suited for performing if-then-else decisions.


Examples

1. Simple merge

Consider the equation:

If $y = 2$, then $z = 5$, else $z = 2.5$

This equation can be realized as:

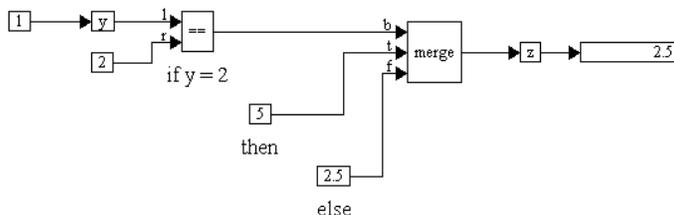


2. Cascade merge


Consider the equation:

If $x = 1$ and $y = 2$, then $q = z$, else $q = 0$

where (if $y = 2$, then $z = 5$, else $z = 2.5$). This logical relation can be realized as shown on the next page.

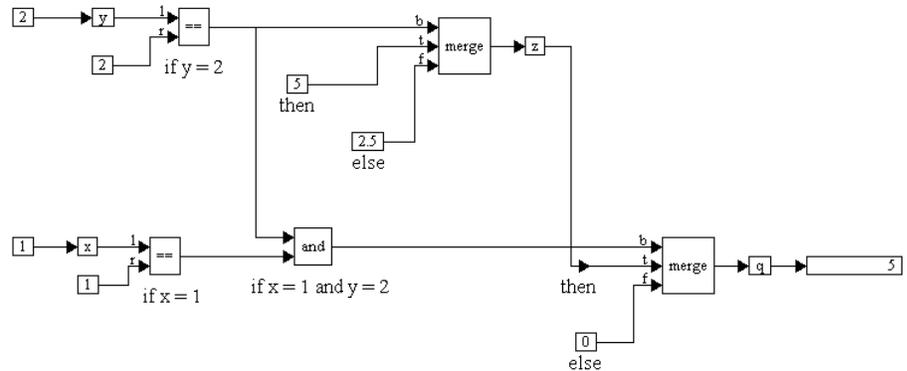

meter

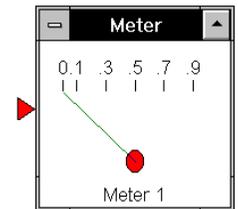

display = x_1

Block Category: Signal Consumer

The meter block displays signals in either a gauge- or bar-style display. Initially, the meter block appears as a gauge-style display with one input connector tab. For more information, see page 81.

min

$$y = \begin{cases} x_1 & \text{if } x_1 < x_2 \\ x_2 & \text{if } x_1 > x_2 \end{cases}$$

Block Category: Nonlinear

The min block compares two scalar inputs for a lower value and generates an output signal with the lower value.




Examples

1. Comparison of two values

Consider the equation:

$$z = \min(x,y)$$

If x is a sinusoid that varies between -1 and +1, and y is a uniform random variable that varies between -1 and +1, this equation can be realized as:

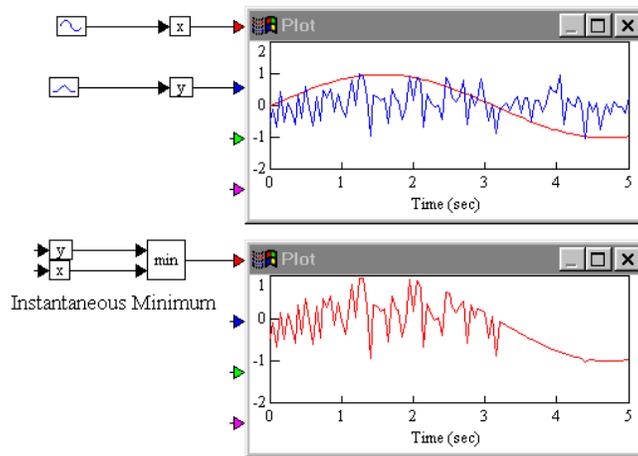


2. Computation of the minimum value of a given time-varying signal

Consider the equation:


$$z = \min(y)$$

where y is a uniform random variable that varies between -1 and +1. To find the minimum value that z attains, create the following diagram:

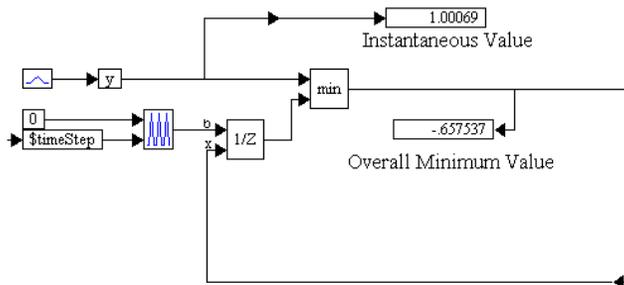

A `unitDelay` block stores the previous value of y . The `min` block compares the current and previous values of y . The smaller of the current and previous values is fed back into the `unitDelay` block for the next round of comparisons. This way, the output of the `min` block is always the smallest encountered value of y . The working details of this procedure are best examined by single-stepping through the simulation.

multiply

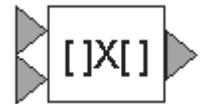

Block Category: Matrix Operation

The `multiply` block performs a matrix multiplication. The `multiply` block accepts two vector inputs and produces one vector output.


Multiplying scalars and vectors

To multiply two or more scalars, use the `*` block, as described on page 190.

To perform a single value summation of an element-by-element multiply of two vectors, use the `dotProduct` block, as described on page 231.

Examples

1. Simple matrix multiply

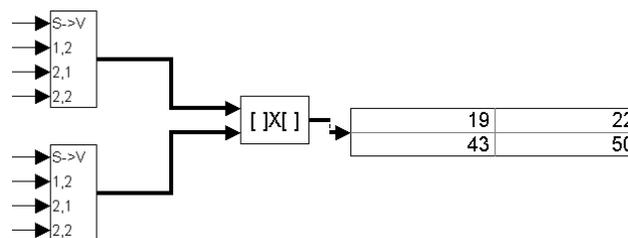


Here

$$\mathbf{A} = \begin{bmatrix} 1 & 2 \\ 3 & 4 \end{bmatrix}, \mathbf{B} = \begin{bmatrix} 5 & 6 \\ 7 & 8 \end{bmatrix}$$

Then

$$\mathbf{AB} = \begin{bmatrix} 1(5) + 2(7) & 1(6) + 2(8) \\ 3(5) + 4(7) & 3(6) + 4(8) \end{bmatrix} = \begin{bmatrix} 19 & 22 \\ 43 & 50 \end{bmatrix}$$


neuralNet

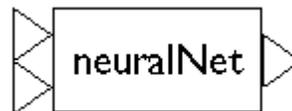

The neuralNet block excels at nonlinear system identification, problem diagnosis, decision-making, prediction, and other problems where pattern recognition is important and precise computational answers are not readily available. Typical uses of the neuralNet block include the identification of a chemical plant and the training of a moving cart to balance a vertical pole.

To use the neuralNet block, you must install the VisSim/Neural-Net software on your computer. For more information on the neuralNet block, see the *VisSim/Neural-Net User's Guide*.

not

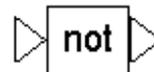

$$y = \begin{cases} 1 & \text{if } x_1 = 0 \\ 0 & \text{otherwise} \end{cases}$$

Block Category: Boolean

The not block produces the Boolean NOT of the input signal. The output is true when the input is false; and the output is false when the input is true.

If you click the right mouse button over the not block, the Boolean block menu appears allowing you to assign a different function to the block.


Examples

1. Using a not block

Consider a variable c such that:

$$c = \bar{b}$$

or in other words, $c = \text{not}(b)$. Furthermore, assume that b is true if $t > 2.2$; else b is false, where t is the simulation time. This system can be realized as shown below.

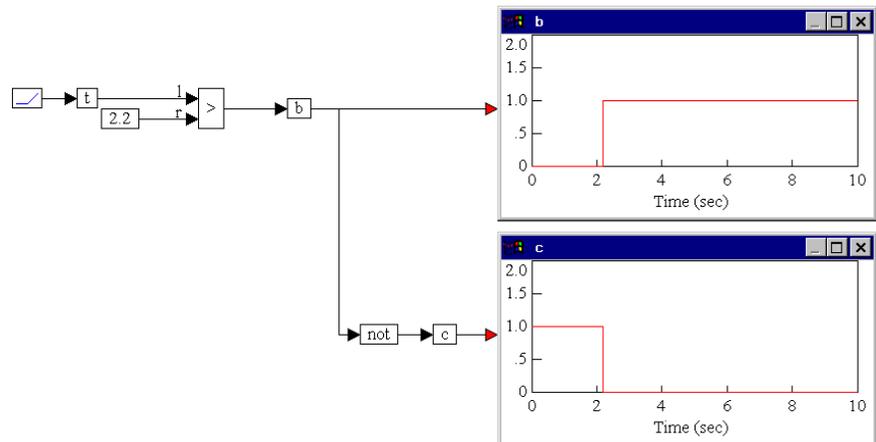

From the outputs obtained in the two plot blocks, b , given by the output of the $>$ block is true only when t is > 2.2 . This requires that c , which is defined to be $\text{not}(b)$, be true only the range $t < 2.2$, as obtained in the bottom plot block.

OLEObject

The `OLEObject` block lets you embed existing objects from files or insert new blank objects and create the information right in your diagram.


By embedding information in a VisSim diagram, you gain fast access to the functionality of another application without having to return to that application each time you want to make a change.

The technique of embedding is simple: just insert a file into your diagram. The inserted file is called an *object*, and appears as an `OLEObject` block in your diagram. When you embed an object, all of the instructions used to create the object are encapsulated and inserted in the `OLEObject` block along with it. The instructions include the object's file format, the application used to create the object, and all of the information about how to display it. You don't see this information, but the application uses it to display and edit the object.

Embedding makes editing and updating the object quick and easy. You can just double-click on the `OLEObject` block in the VisSim diagram to open the object in its source application. Then you make your changes and close the file, and the object you embedded is updated automatically.

► **To embed existing objects**


1. Choose **Blocks > OLEObject** and click the mouse in the VisSim workarea.
The Insert Object dialog appears.

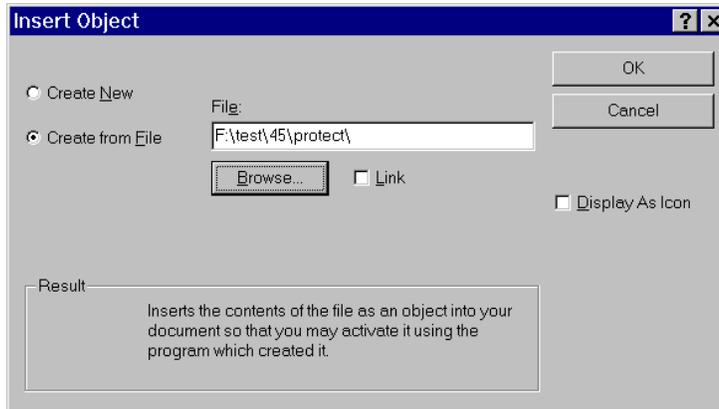

2. Activate the **Create from File** option.
3. Click on the **Browse** button to find the object to be embedded in your VisSim diagram.
4. Click on the **OK** button, or press **ENTER**.

► **To embed a new object**

1. Choose **Blocks > OLEObject** and click the mouse in the VisSim workarea.
The Insert Object dialog appears.

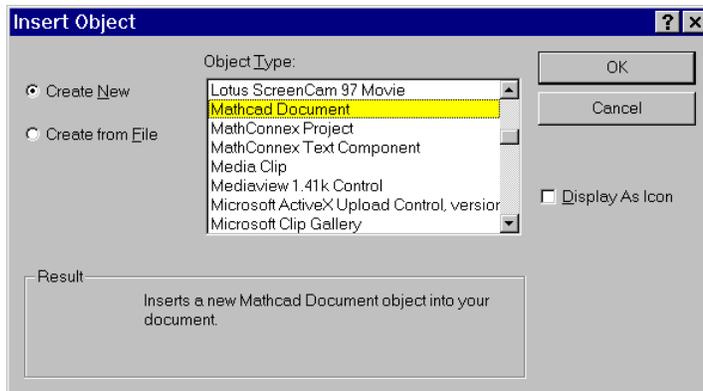

2. Activate the Create New option.
3. In the Object Type list box, select the type of object you want to insert. For Mathcad 2000 documents, click on Mathcad Document
4. Choose the OK button, or press ENTER.

Editing and updating objects

You can edit an embedded objects directly from VisSim, or you can invoke the application as a separate, stand-alone program. To update the embedded object and return to the VisSim environment, simply click outside the OLEobject block.

► To edit an embedded object directly from VisSim

1. Do one of the following:
 - Double-click on the embedded object.
 - Or-
 - Click the right mouse button on the embedded object.
 - From the drop-down menu, choose Object > Edit.VisSim opens a window with the application file.
2. Make the changes you want.
3. Click outside the embedded object to update the object and return to VisSim.

► To invoke the object as a stand-alone application

1. Click the right mouse button on the embedded object.
2. From the drop-down menu, choose Object > Open.
A stand-alone window is opened with the application file.
3. Make the changes you want.
4. To update the object and return to VisSim, do the following:
 - Choose File > Update
 - Choose File > Exit and Return to.

Examining the properties of an embedded object

The Properties dialog box lists the size of your embedded object, and allows you to control the general appearance of the document in your VisSim diagram. You can

also use the Properties dialog box to scale the corresponding embedded object. This feature is described in the next section.

► **To access general information about an embedded object**

You can display the size and location of the embedded object.

1. Click right mouse button over the embedded object.
2. In the drop-down menu, choose Properties.
3. The Properties dialog box appears.
4. Click on the General tab.

► **To control the appearance of an embedded object**

You can display the size and location of the embedded object.

1. Click right mouse button over the embedded object.
2. In the drop-down menu, choose Properties.
3. The Properties dialog box appears.
4. Click on the View tab.
5. Do the following:

To	Do this
Display the contents of the embedded object	Activate the Display As Editable Information option.
Display an icon	Activate the Display As Icon option. Click on the Change Icon button to select the type of icon to be displayed.

6. Click on the OK button.

Scaling and cropping OLEobject blocks

You can resize an OLEobject block by scaling or cropping it. When you scale an OLEobject block, the text within the block is also scaled. When the dimensions of the OLEobject block are much larger than the text, you can adjust the size of the block by cropping its sides. The size of the text within the block is not affected by this action.

► **To scale an OLEobject block manually**

1. Click on the OLEobject block.
2. Position the pointer over one of the handles on the block.

3. Hold down the mouse button and drag until the block is the size you want.
4. Click outside the OLEObject block to return to VisSim.

► **To scale an OLEObject block using the Properties dialog box**

1. Click right mouse button over the OLEObject block.
2. In the drop-down menu, choose Properties.
3. The Properties dialog box appears.
4. Click on the View tab.
5. To scale the block with respect to its original size, activate the Relative To Original Size option.
6. In the Scale box, select the scaling factor.
7. Click on the Apply button to preview the new size.
8. Click on the OK button to make the change permanent.

► **To crop an OLEObject block manually**

1. Double-click on OLEObject block.
2. Position the pointer over one of the handles on the block.
3. Hold down the mouse button and drag until the block is the size you want.
4. Click outside the OLEObject block to return to VisSim.

► **To reset the size of an OLEObject block**

You can use this method when you cropped the OLEObject block or when you scaled in manually.

1. Click the right mouse button on the OLEObject block.
2. From the drop-down menu, choose Reset Size.


Examples

1. Embedding an existing PowerPoint file

To embed an existing Powerpoint file:

1. In VisSim, insert an OLEObject block.
2. In the Insert Object dialog box, do the following:
 - Activate the Create From File option.

- Click on the Browse button, and select the PPT file to be embedded in your diagram.
- Click on the OK button, or press ENTER.

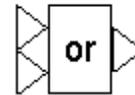

or

$$y = x_1 \text{ bitwise OR } x_2$$

Block Category: Boolean

The or block produces the bitwise OR of two to 256 scalar input signals. The output of the or block is true when at least one of the inputs is true. When all the inputs are false, the output is false.

If you click the right mouse button over the or block, the Boolean block menu appears allowing you to assign a different function to the block.


Examples

1. Computation of three inputs

Consider a variable y such that:


If $a \geq 8$ or $b = 6$ or $c \leq 3$, then $y = \cos(t)$; else $y = 0$

where t is simulation time. Furthermore, let t be the input to all three parameters a , b , and c . This system can be realized as shown on the next page.

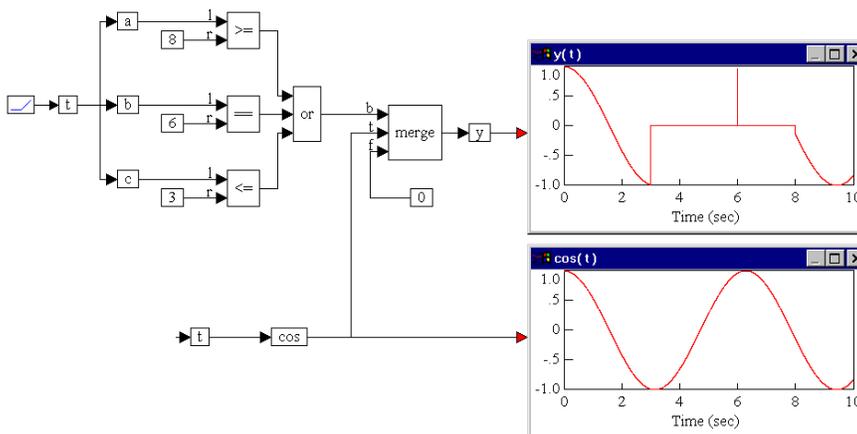

During simulation, the `or` block evaluates to false in the interval $t = (3,8)$, except for the instant $t = 6$. In this case, the variable y takes on the value of 0. The output of `or` evaluates to true in the remaining parts of the simulation, and as a result, y takes on the value of $\cos(t)$ in these periods, including the instant $t = 6$.


parabola

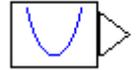

$$y = \text{slope} \cdot (t - t_{\text{delay}})^2$$

Block Category: Signal Producer

The `parabola` block creates a parabolic signal.

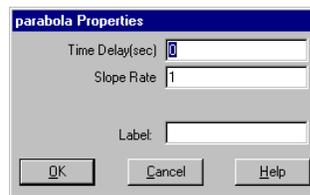

Time Delay: Indicates an offset that is used in the calculation of a signal. For a constant-valued delay, wire the block into a `unitDelay` or `timeDelay` block with an initial condition of the desired constant value.

Specify the offset in seconds. The default value is 0.

Slope Rate: Scales the curvature of the parabola. The default value is 1.

Label: Indicates a user-defined block label.

parameterUnknown



Block Category: Optimization


The `parameterUnknown` block works with the `cost` block to find globally optimal values that minimize a scalar cost function. For more information, see [Chapter 8, Performing Global Optimization.](#)

plot

$$\text{plot} = x_1 \dots x_4$$


Block Category: Signal Consumer

The `plot` block displays simulation data graphically in a customizable plots. For more information, see page 63.

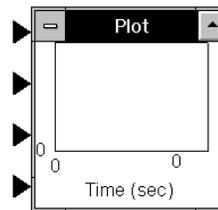

pow

$$y = \begin{cases} x^{\text{exponent}} \\ \text{or} \\ x_1^{x_2} \end{cases}$$

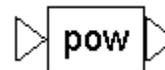


Block Category: Arithmetic


The `pow` block creates an output signal based on the value of the input signal raised to the power of a specified exponent. Inputs can be scalars, vectors, or matrices. When the input is a vector or matrix, the `pow` block computes the output on an element-by-element basis.

The `pow` block is useful for solving equations of the type $y = x^x$. Do not use the `pow` block to compute matrix dot products, such as $\mathbf{Y} = \mathbf{A}^2$, where the dot product is implied. Instead use the `dotProduct` block, as described on page 231.

By adding an input connector tab to the `pow` block, you can specify an external exponent parameter to override the block's exponent parameter. For example:

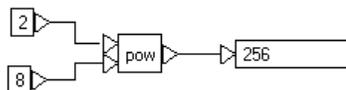

This diagram raises two to the eighth power. The `display` block verifies the results. The main advantage of setting the exponent externally is that the value of the exponent can be varied dynamically as the simulation progresses.

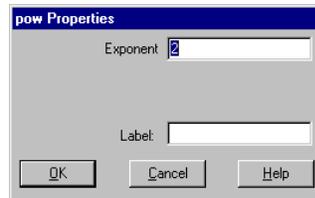

Exponent: Specifies the power to which the input signal is raised. The default is 2.

Label: Indicates a user-defined block label.


Examples

1. Raising a matrix input to a power

Consider the equation:

$$\mathbf{Y} = \mathbf{X}^z$$

where $\mathbf{X} = \begin{bmatrix} 1 & 2 \\ 4 & 8 \end{bmatrix}$ and $z = 3$. This equation can be realized as shown below:

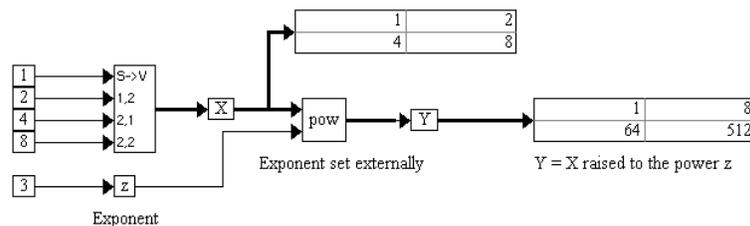

The pow block raises each element of the incoming matrix to power 3.


PRBS



Block Category: Random Generator

The PRBS block produces a pseudo-random sequence of unit amplitude pulses. You can control the frequency of oscillation and the register length.

The PRBS block can be used to see how random perturbations affect a system. System Identification software can use the output of a PRBS block to create a mathematical model of the system.

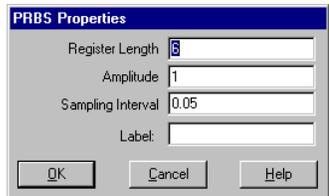


Register Length: Controls when the sequence of pulses repeats. The default is 6

Amplitude: Specifies the maximum strength of the output signal. The default is 1.

Sample Interval: Indicates the frequency of oscillation. The default is 0.05.

Label: Indicates a user-defined block label.

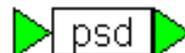


psd

Block Category: Matrix Operations


The psd block accepts a vector of signal values and produces a vector of power spectrum values. The psd block performs an FFT on the input vector then transforms the FFT to represent power versus frequency. To capture all the power spectrum information, plot the output on a Log Y plot.

The change in frequency of the psd output vector equals $\frac{1}{2} \frac{\text{sim frequency}}{\text{output vector}}$.

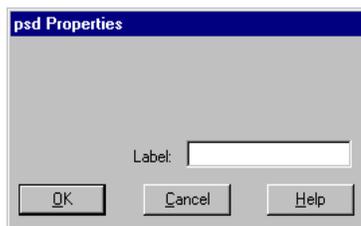

Label: Indicates a user-defined block label.

pulseTrain

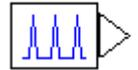


$$y = \begin{cases} 1 & \text{if } t \bmod_{\text{time pulse}} = 0 \\ 0 & \text{otherwise} \end{cases}$$

Block Category: Signal Producer

The `pulseTrain` block produces a sequence of unit amplitude pulses separated by zeros. You cannot control the duration of the pulse; you can only control the time between pulses.

You can add two input connector tabs to the `pulseTrain` block. The top input connector tab lets you specify an external time delay; the bottom one lets you specify an external time between pulses. These additional inputs override the existing parameters. If you add only one input connector tab, it corresponds to the external delay.

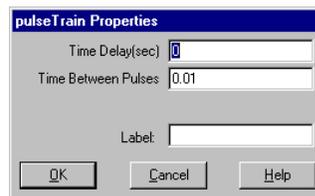


Time Delay (sec): Specifies, in seconds, how long to delay before calculating the value of the output signal. The default is 0.

Time Between Pulses: Specifies the time between pulses. This is useful for clocking delays and sample holds. The default is 0.01.

Label: Indicates a user-defined block label.

quantize

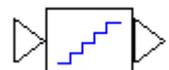

$$y = \left[\text{integer part} \left(\frac{x}{\text{resolution}} \right) \right] \text{resolution}$$

Block Category: Nonlinear

The `quantize` block is useful for simulating approximations of a continuously varying signal that possibly requires the use of an infinite number of values or levels by a discontinuous signal with a finite number of values.

The `quantize` block rounds the precision of input signal based on the signs of the input and the resolution. When the resolution is positive, the signal is rounded down to $-\infty$. For example, 1.9 quantized to a resolution of 1 becomes 1, and -1.9 quantized to a resolution of 1 becomes 2. When the resolution is negative, the signal is rounded to $+\infty$. For example, 1.1 quantized to a resolution of -1 becomes 2, and -1.1 quantized to a resolution of -1 becomes -1.

The `quantize` block is applicable to simulations that involve the conversion of analog signals to digital signals.



Resolution: Specifies the value to which the input signal is rounded or truncated. The default is 0.05.

Label: Indicates a user-defined label.


Examples

1. Quantization of a sinusoid: positive resolution

Consider a variable y such that:

$$y = \sin(t)$$

quantized with a resolution of +0.5. This equation can be realized as:

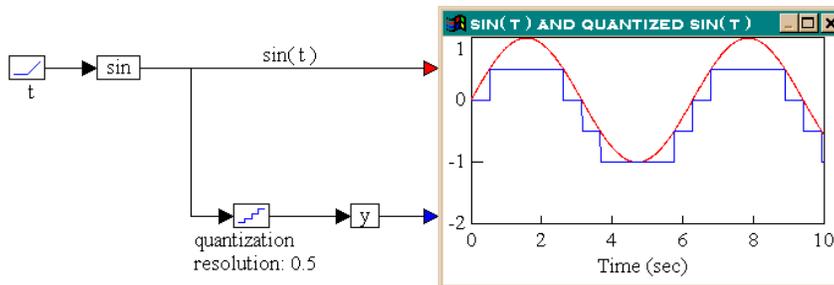


The `quantize` block approximates the sinusoid input using four values (0, +0.5, -0.5, and -1).

2. Quantization of a sinusoid: negative resolution

Consider a variable y such that:


$$y = \sin(t)$$

quantized with a resolution of -0.5. This equation can be realized as:

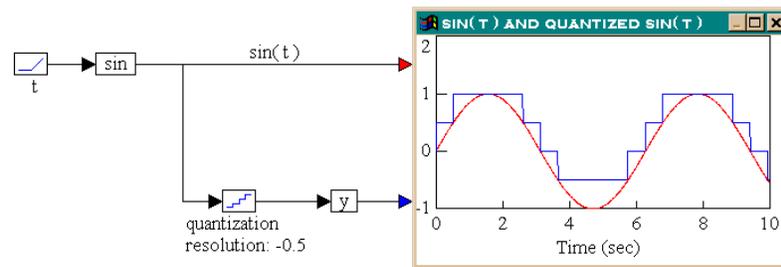

The `quantize` block approximates the sinusoid input using four values (0, +0.5, +1, and -0.5). By comparing these results with those in Example 1, the effects of using positive and negative resolutions in a `quantize` block becomes clear.


ramp

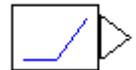

$$y = \text{slope} \cdot (t - t_{\text{delay}})$$

Block Category: Signal Producer

The `ramp` block creates a unit ramp signal based on simulation time.

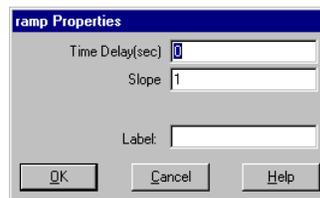

Time Delay(sec): Indicates an offset that is used in the calculation of a signal. For a constant-valued delay, wire the `ramp` block into a `unitDelay` or `timeDelay` block with an initial condition of the desired constant value. Specify the offset in seconds. The default is 0.

Slope: Specifies the ramp slope. The default is 1.

Label: Indicates a user-defined block label.

realTime




$$y = t$$

Block Category: Signal Producer

The `realTime` block provides the current time in milliseconds since the start of your VisSim session. Note that this is not simulation time.

relay

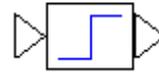

$$y = \begin{cases} -1 & \text{if } x < \frac{-\text{deadband}}{2} \\ 1 & \text{if } x > \frac{\text{deadband}}{2} \\ 0 & \text{otherwise} \end{cases}$$

Block Category: Nonlinear

The `relay` block simulates a tri-state relay operator. This block is useful for simulation switches or switching operators.



Dead Band: Indicates the width of the zone of lost motion about the input signal's 0 value, thereby creating a tri-state relay operator (-1, 0, 1). When input is less than half the negative Dead Band value, the `relay` block outputs -1. When input is greater than half the positive Dead Band value, the `relay` block outputs +1. When input lies within the range (-Dead Band/2, +Dead Band/2), the `relay` block outputs 0. You cannot specify a negative value for this parameter. The default is 0.

Label: Indicates a user-defined block label.


Examples

1. Constructing a tri-state switch

Consider a tri-state variable y such that:


$$y = \begin{cases} +1 & \text{if } x(t) > 0.5 \\ -1 & \text{if } x(t) < -0.5 \\ 0 & \text{otherwise} \end{cases}$$

Assuming that $x(t) = \sin(t)$, this equation can be realized as shown below.

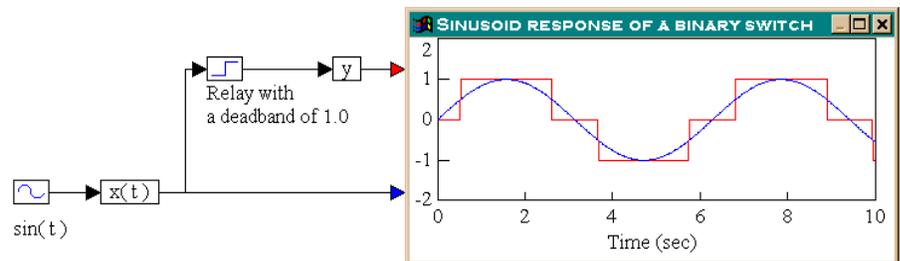

The Dead Band of the relay block is set to 1.0. During simulation, the relay block changes its output state based on whether the input signal is greater than or less than Dead Band/2.

resetIntegrator (1/S)

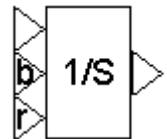


$$y = \begin{cases} \int_{t_{\text{start}}}^{t_{\text{end}}} x_1 dt & \text{if } |x_2| < 1 \\ x_3 & \text{if } |x_2| \geq 1 \end{cases}$$

Block Category: Integration

The resetIntegrator block integrates the input signal with an optional reset capability. When the Boolean input (b) is 0, the resetIntegrator behaves like a normal integrator. When the Boolean input goes to 1, the resetIntegrator takes the value of the reset input (r) for as long as the Boolean value stays high.

The `resetIntegrator` block integrates the input signal using the integration algorithm established in the dialog box for the `Simulate > Simulation Properties` command. The available algorithms are Euler, trapezoidal, Runge Kutta 2d and 4th orders, adaptive Runge Kutta 5th order, adaptive Bulirsh-Stoer, and backward Euler (Stiff). You can reset the `resetIntegrator` block to zeros using the `Simulate > Reset States` command, as described on page 59.

The inputs to the `resetIntegrator` block are x_1 , x_2 (b), and x_3 (r).

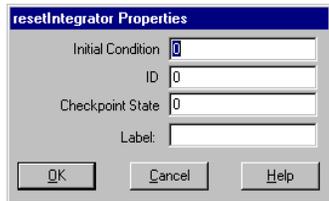

Initial Condition: Indicates the initial value of the integrator upon simulation start-up. This parameter can be overridden if x_2 is non-zero on the first step of the simulation. The default is 0.

ID: Represents an identification number for the block. This number keeps track of the state number that VisSim assigns to the integrator. The number of states in any VisSim diagram equals the number of integrators. The default is 0.

Checkpoint State: Contains the value of the integrator state at the checkpoint. If you have not checkpointed your simulation via the `Simulate > Simulation Setup` command, the default is 0.

Label: Indicates a user-defined block label.

Examples

1. Instantaneous momentary reset


Consider a system whose dynamics are given by the differential equation:

$$\dot{x} = \sin|x|$$

When a particular variable z equals 1, x must be reset to $-x$. To make matters simple, assume that z becomes momentarily equal to 1, every three seconds, and that $x(0) = 5$.

Equations of this type are frequently used in kinematic systems that undergo collisions, electrical circuits that involve switching phenomena, chemical processes, and fluid dynamics.

This system can be realized as shown on the next page.

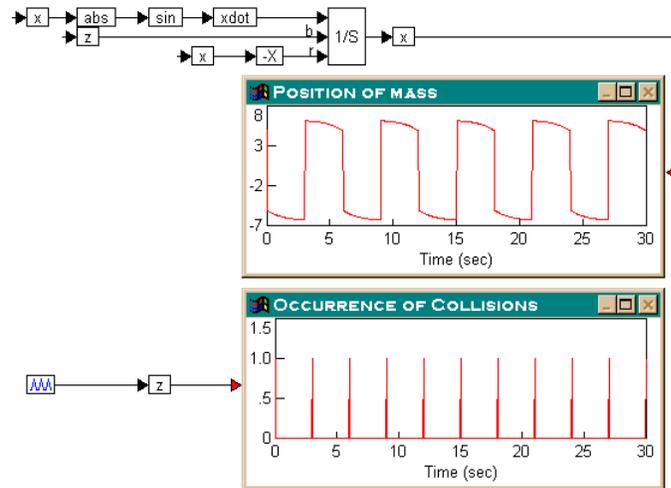

As with any differential equation, the right-hand side of the equation is realized first by creating a variable x , and then connecting it successively to an `abs` block, a `sin` block, and another variable $xdot$.

At this point, only $xdot$ is defined in terms of x . To define the relationship between $xdot$ and x , $xdot$ is fed into the top input tab of the `resetIntegrator` block, which is fed into the variable x .

The Boolean input tab of the `resetIntegrator` is fed by variable z , which generates pulses that are three seconds apart. The negative value of a given signal can be directly generated using the `-X` block, and then fed into the reset input tab of the `resetIntegrator`.


From the results of simulation shown in the two plot blocks, z becomes high every three seconds, and at each of these instances, the output of the `resetIntegrator` is reset to $-x$.

2. State reset for a duration

As mentioned above, the `resetIntegrator` output is held at the reset value as long as the Boolean input is high. To illustrate this property, consider the differential equation:

$$\dot{x} = \sin|x|$$

When a particular variable z is equal to 1, x must be held at its current value. Assume that $z = 1$ when $1 \leq t \leq 6$ and that $x(0) = 5$. This case can be realized as shown on the next page.

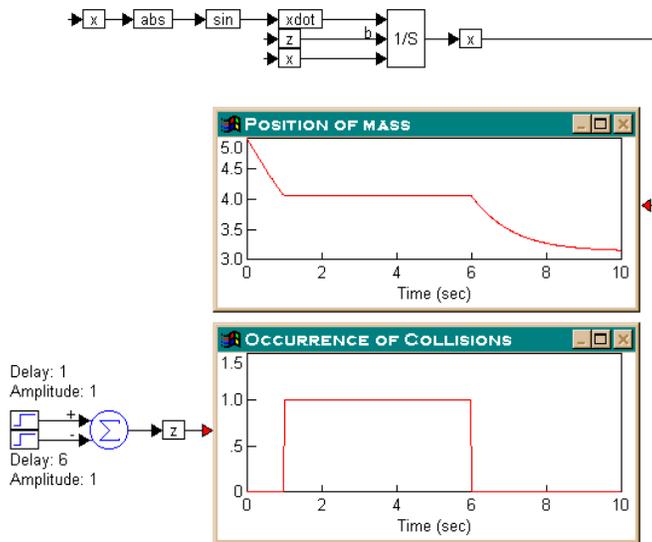

To construct z , two `step` blocks and a `summingJunction` block are used. The delay and amplitude of the top `step` block are both set to 1; for the bottom `step` block, they are set to 6 and 1, respectively. By subtracting the outputs of the two `step` blocks and defining the output of the `summingJunction` block as z , $z = 1$ when $1 \leq t \leq 6$.

By coding z in this manner, z is redefined as $z(t) = u(t - 1) - u(t - 6)$ where $u(t)$ represents a unit step. Consequently, $u(t - 1)$ is a unit step delayed by 1 sec, and $u(t - 6)$ is a unit step delayed by 6 sec.

During simulation, the output of the `resetIntegrator` holds constant at $x(1)$ for the duration $1 \leq t \leq 6$.


rt-DataIn



Block Category: Real Time

The `rt-DataIn` block, in conjunction with the `File > Real Time Config` command, lets you connect to an I/O real-time data card. To use this block and menu command, you must install the `VisSim/Real-TimePRO` or `VisSim DACQ` software on your computer. For information, see the *VisSim/Real-TimePRO User's Guide*.


rt-DataOut

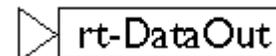

Block Category: Real Time

The `rt-DataOut` block, in conjunction with the File > Real Time Config command, lets you to connect to an I/O real-time data card. To use this block and menu command, you must install the VisSim/Real-TimePRO or VisSim DACQ software on your computer. For information, see the *VisSim/Real-TimePRO User's Guide*.


sampleHold

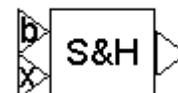

$$y = \begin{cases} x_2 & \text{if } |x_1| \geq 1 \\ y_{\text{previous}} & \text{otherwise} \end{cases}$$

Block Category: Nonlinear

The `sampleHold` block latches an input value under the control of a clock signal, x_1 , which is represented as Boolean input (b). When b is true, input signal x_2 , which is represented as input (x) is sampled and held until b is true again. Boolean inputs can be regularly or irregularly spaced.

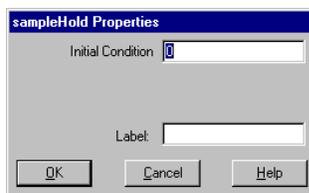

Initial Condition: Indicates the initial condition for the `sampleHold`. The default is 0.

Label: Indicates a user-defined block label.


Examples

1. Sample and hold with regularly-spaced clock

Consider the equation:

$$y(n) = x(t)$$

sampled every 0.5 sec. Furthermore, let $x(t)$ be a ramp signal. This system can be realized as shown below.

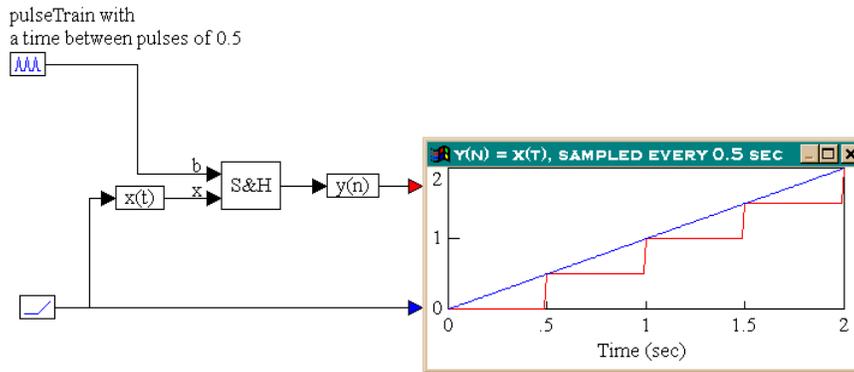


As seen in the plot block, the first clock pulse occurs at 0.5 sec. Until this time, the output of the sample&hold block is zero. At 0.5 sec, the input signal is sampled and the value is used as output for the sample&hold block. The output of the sample&hold block is held at this value until the occurrence of the next clock pulse at 1.0 sec. At this time, the input signal is again sampled and the new value is presented to the output of the sample&hold block, and the process repeats itself.

2. Sample and hold with irregularly-spaced clock

Consider the equation:


$$y(n) = x(t)$$

sampled randomly. Furthermore, let $x(t)$ be a sinusoid signal with a frequency of 2.5 rad/sec. This system can be realized as shown below.

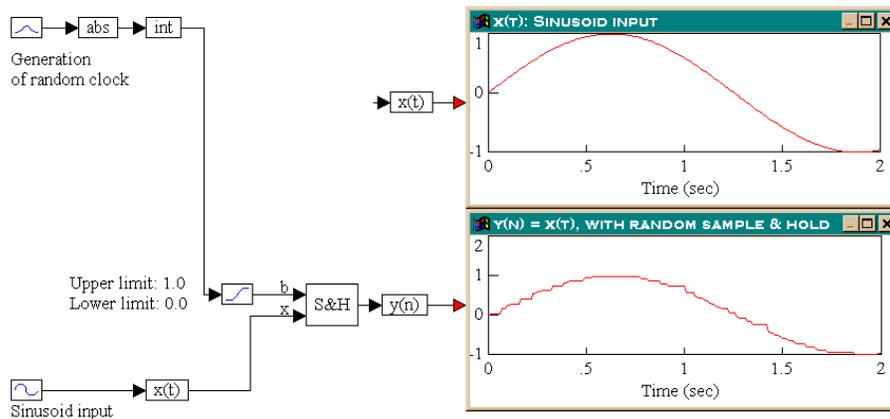

A `sinusoid` block with a frequency of 2.5 rad/sec generates the sinusoid signal and a `gaussian` block produces a randomly varying signal. The randomly varying signal is converted to a random clock by taking the absolute value of the random signal and then using only the integer portion of it. The output of the `int` block is passed through a `limit` block to restrict the signal to the range (0, 1). The output of the `limit` block is connected to the top input of the `sampleHold` block. The output of the `sampleHold` block is connected to the variable $y(n)$, which is connected to a `plot` block. The actual input, $x(t)$ is monitored separately in another `plot` block.

By comparing the outputs in the two `plot` blocks, the output of the `sampleHold` block is a randomly sampled and held version of the input sinusoid.

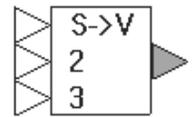

scalarToVec

Block Category: Annotation

The `scalarToVec` block reduces wiring clutter by letting you combine input signals into a single vector wire. This is usually a prerequisite for performing vector and matrix algebra. Use the `vecToScalar` block to unbundle vector wires.

Examples


1. Creation of a vector

Consider the equation:

$$\mathbf{Z} = 3.3 \mathbf{Y}$$

where \mathbf{Z} and \mathbf{Y} are vectors. Further, assume that $\mathbf{Y} = [1 \ 2 \ 3]^T$.

This equation can be realized as:

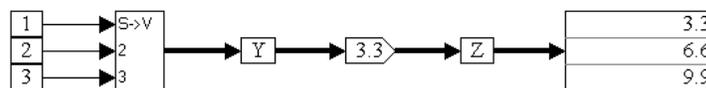

Creation of a Vector

Vector Algebra: $\mathbf{Z} = 3.3 \mathbf{Y}$


The `display` block displays all the elements of the incoming vector line. The results indicate that the vector operation is performed correctly.

2. Creation of a matrix

Consider the equation $B = A^{-1}$, where

$$A = \begin{bmatrix} 1 & -2 & 3 \\ 4 & 5 & 6 \\ 7 & 8 & 9 \end{bmatrix}$$

The above equation can be realized as:

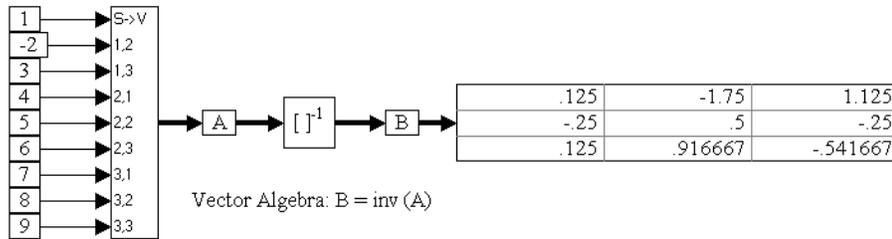

Creation of a Matrix

The `display` block displays all the elements of the incoming matrix line. The results indicate that the matrix operation is performed correctly.

sign



$$y = \begin{cases} 1 & \text{if } x > 0 \\ 0 & \text{if } x = 0 \\ -1 & \text{if } x < 0 \end{cases}$$


Block Category: Arithmetic

The `sign` block determines the sign of the scalar input signal. The `sign` block outputs +1 when the input is greater than zero; -1 when the input is less than zero; and 0 when the input is zero.

Examples

1. Computation of the sign of $\sin(t)$

This equation can be realized as shown on the next page.

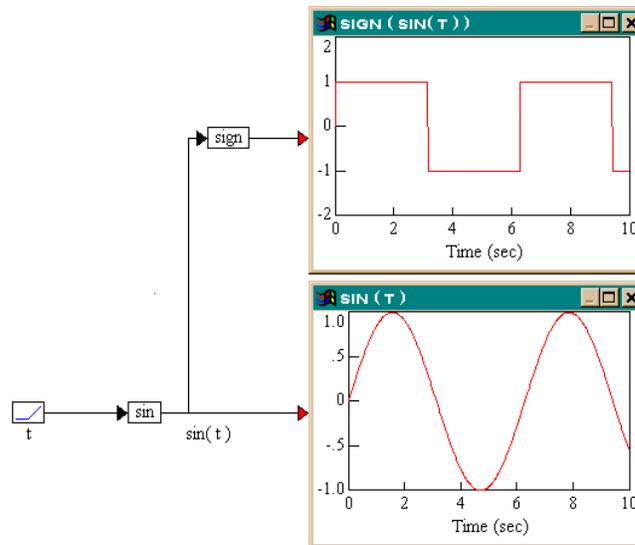

The results obtained indicate that when the input is greater than zero, the `sign` block outputs +1, when the input is less than zero the output is -1, and when the input is zero, the output is 0.

sin



$$y = \sin x$$


Block Category: Transcendental

The `sin` block produces the sine function of the input signal. The input signal is represented in radians.

Examples

1. Computation of $\sin(2\theta) = (\cos(\theta) + \sin(\theta))^2 - 1$

With θ chosen to be $\pi/4$, the above trigonometric identity can be realized as:

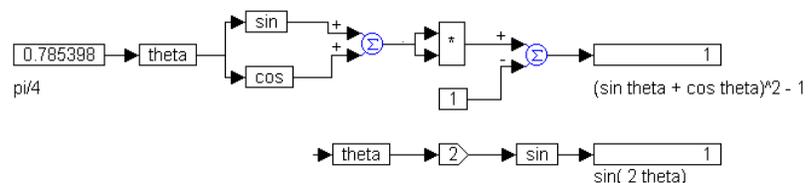

sinh



$$y = \frac{e^x - e^{-x}}{2}$$


Block Category: Transcendental

The `sinh` block produces the hyperbolic sine function of the input signal. The input signal is represented in radians.

Examples

1. Computation of $\sinh(2\theta) = 2 \sinh(\theta) \cosh(\theta)$

With θ chosen to be $\pi/2$, the above trigonometric identity can be realized as:

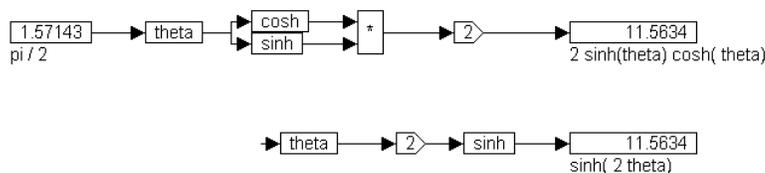


sinusoid



$$y = A \cdot \sin(\omega \cdot (t - t_{delay}))$$

Block Category: Signal Producer

The `sinusoid` block creates a unit sine wave signal.

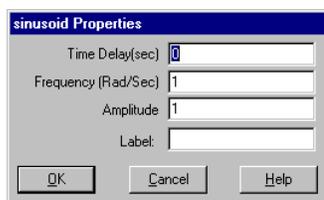

Time Delay (sec): Indicates an offset that is used in the calculation of a signal. For a constant-valued delay, wire the `sinusoid` block into a `unitDelay` or `timeDelay` block with an initial condition of the desired constant value. Specify the offset in seconds. The default is 0.

Frequency (rad/sec): Controls the frequency of oscillation of the output signal. Specify the frequency in radians per second. For example, if you specify a frequency of 1, one oscillation completes in 2π seconds. If you specify a frequency of π , one oscillation completes in 0.5 seconds. The default is 1.

Amplitude: Specifies the maximum strength of the output signal. The default is 1.

Label: Indicates a user-defined block label.


slider



Block Category: Signal Producer

The slider block allows mouse input to dynamically modify a signal value during a simulation, between a lower and upper bound in 1% and 10% increments. The slider block displays the current value applied to the signal. Use the scroll bar to adjust the signal value.

Slider precision is affected by the High Precision Display parameter under Preferences in the dialog box for the Edit > Preferences command. When activated, slider precision is shown at up to 15 significant digits; when de-activated, slider precision is shown at up to 6 significant digits.

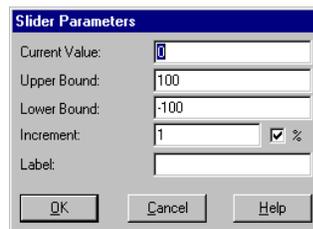

Current Value: Specifies the initial value of the output signal. The default is 0.


Upper Bound: Specifies the largest value the output signal can attain. The default is 100.

Lower Bound: Specifies the smallest value the output signal can attain. The default is -100.

Increment: Indicates the amount by which the slider changes when you click on the slider bar. If you activate the % box, the amount you specify indicates a percentage change. If you do not activate the % box, the amount you specify indicates an absolute value.

Label: Indicates a user-defined block label.

sqrt

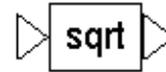

$$y = \sqrt{x}$$


Block Category: Transcendental

The sqrt block produces an output signal that is the square root of a positive input signal. The sqrt block does not accept negative inputs. And, there is no square root of 0.

Examples

1. Computation of the $\text{sqrt}(a^2 + b^2 - 2ab) = (a - b)$

With a and b chosen to be 7 and 4 respectively, the above equation can be realized as:

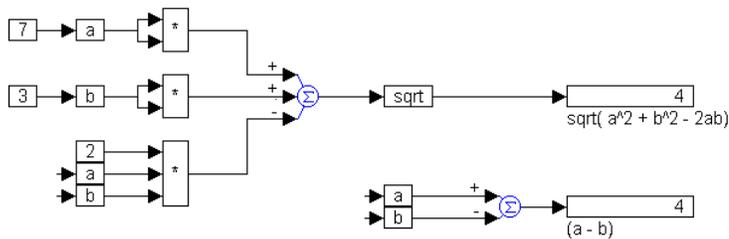

stateSpace



Block Category: Linear system

The stateSpace block is used to represent a multi-input multi-output linear system in state-space form. The state-space matrices can be specified in the following ways:

- **As an .M file created with VisSim:** The Analyze > Linearize command generates ABCD state-space matrices from a nonlinear system by numerically evaluating the matrix perturbation equations at the time the simulation was halted. For more information, see the *VisSim/Analyze User's Guide*.
- **As an .M file created with a text editor:** When you create a .M file with a text editor, follow these rules: start each matrix on a new line; enclose matrix elements in square brackets and terminate with a semi-colon; separate matrix elements with spaces; separate matrix rows with semi-colons.

The following is an example of a user-written .M file:


```
function [a,b,c,d] =vabcd
a = [-.396175 -1.17336 ; 5.39707 .145023 ];
b = [-.331182 ; -1.08363 ];
c = [0 1 ];
d = [0 ];
```

Note that MatLab commands other than array initialization are not allowed.

- **As a .MAT file created with MatLab:** Generating .MAT files is described in the MatLab documentation. Note that when you save the ABCD matrices to a file, the names of the matrices are not important; however, the order in which they appear is.

When you simulate the block diagram, VisSim numerically solves the `stateSpace` block. You can reset `stateSpace` blocks to zeros using the Simulate > Reset States command, as described on page 59.

VisSim supports state-space systems up to the 90th order.

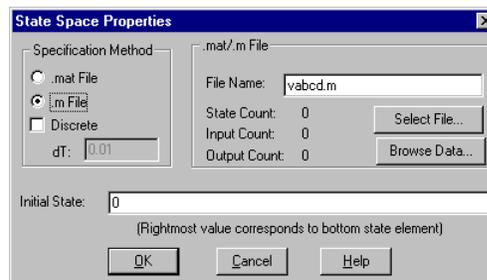

Specification Method: You have the choice of three specification methods:

- **Discrete:** Indicates a discrete Z-domain system. Enter the time step for the discrete transfer function in the dT box. By default, this parameter is deactivated, which indicates a continuous transfer function.
- **.mat File:** Indicates that the system is to be specified as a MatLab .MAT file. Specify the name of the .MAT file in the .mat/.m File group box.
- **.m File:** Indicates that the system is to be specified as an .M file. Specify the name of the .M file in the .mat/.m File group box.

dT: Specifies the time step for the discrete system. By default, VisSim uses step size parameter from the Simulate menu's Simulation Setup command.


Initial State: Specifies initial values for the states in the block. The values are right-adjusted. The right-most value corresponds to the lowest order state. Unspecified states are set to 0.

File Name: Indicates the name of the .M or .MAT file to be used as input to the stateSpace block. You can type the file name directly into this box or select one using the Select File button. To open the specified file with the default text editor, click on the Browse Data button.

Input Count, Output Count, and State Count: Indicate the number of inputs to the block, the number of outputs from the block, and the number of system states. The number of system states is determined by the size of the A matrix. These options are read-only.


step

$$y = \begin{cases} 0 & \text{if } t < t_{\text{delay}} \\ A & \text{otherwise} \end{cases}$$

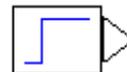

Block Category: Signal Producer

The step block creates a unit step signal.

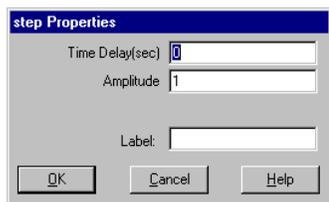


Time Delay(sec): Specifies, in seconds, how long to delay before calculating the value of the output signal. The delay is relative to the start of the simulation, and not absolute time. The default is 0.

Amplitude: Indicates the maximum strength of the output signal. The default is 1.

Label: Indicates a user-defined block label.

stop

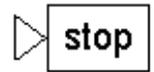


If x $\left\{ \begin{array}{l} > 2 \text{ halt simulation unconditionally} \\ > 1 \text{ halt current run; start next run} \end{array} \right.$
 Else normal

Block Category: Signal Consumer

The `stop` block conditionally halts a simulation when the input signal is non-zero. For a multi-run simulation, when the input value is 1, VisSim halts the current run, increments `$runCount`, and starts the next run if the Auto Restart parameter in the dialog box for the Simulate > Simulation Properties command has been activated. When the input value is 2, VisSim stops the multi-run sequence altogether.

stripChart

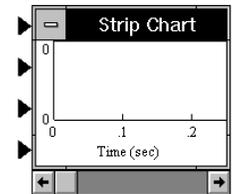

strip chart = $x_1 \dots x_4$

Block Category: Signal Consumers

The `stripChart` block displays up to four signals in a customizable scrolling window. For more information, see page 73.

summingJunction



$y = x_1 + x_2 + \dots x_n$

Block Category: Arithmetic

The `summingJunction` block produces the sum of two signed input signals. You can toggle the sign of the input signals (switch from positive to negative and vice versa) by holding down the CTRL key and clicking the right mouse button over the connector tab.


Inputs can be scalars, vectors, and matrices. When vector and matrix inputs are of unequal lengths, the `summingJunction` block defines the output vector or matrix to be the maximum composite size of all the incoming vectors or matrices and extends

all other incoming vectors and matrices to match the length of the longest incoming vector or matrix, by padding each of them with the requisite number of zeros.

Examples


1. Addition of two scalar quantities

Consider the equation $y(t) = t + \sin(t)$. This can be realized as:

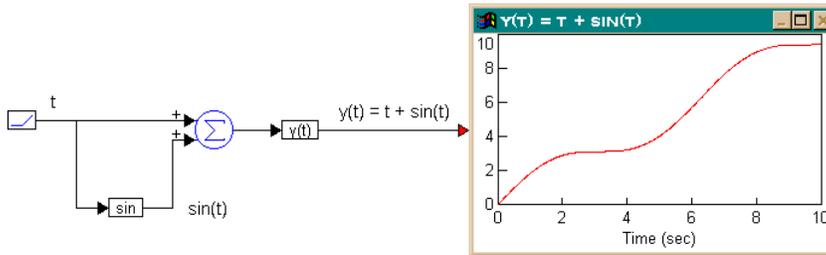

2. Subtraction of two vectors

Consider a vector $\mathbf{x} = [1 \ 1.2 \ -2.3]$, and another vector $\mathbf{y} = [1 \ 1 \ 1]$. The vector difference $\mathbf{z} = \mathbf{x} - \mathbf{y}$ can be computed directly by using a summing junction block as:

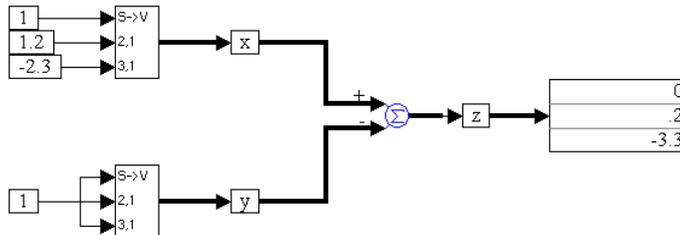

The vector display shows that the result of the simulation is a direct element-by-element subtraction of vector \mathbf{y} from vector \mathbf{x} .

3. Matrix addition and subtraction


Consider the matrix equation:

$$\mathbf{Z} = \mathbf{A} + \mathbf{B} - \mathbf{C}$$

where:

$$A = \begin{bmatrix} 1 & 3 & 5 \\ 2 & 4 & 6 \\ 7 & 9 & 0 \end{bmatrix}; B = \begin{bmatrix} 1 & -2 & 1 \\ 3 & -4 & 3 \\ -5 & 6 & -5 \end{bmatrix}; C = \begin{bmatrix} 1 & 1 & 6 \\ 5 & -1 & 9 \\ 2 & 15 & -6 \end{bmatrix}$$

This equation can be realized as:

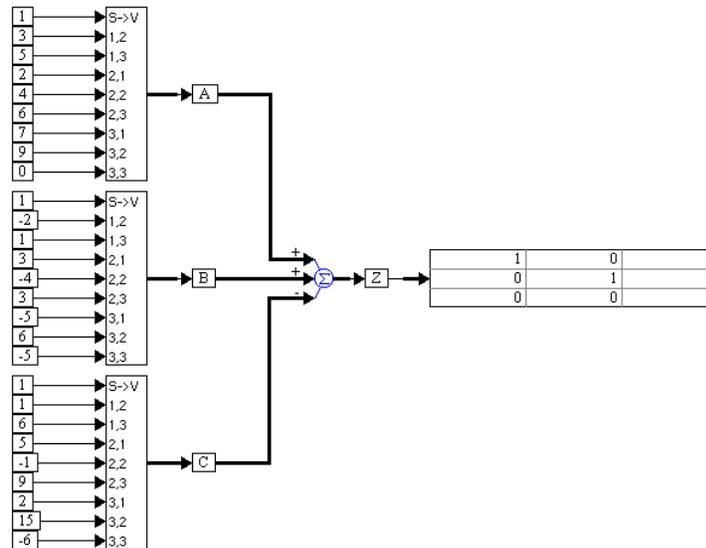

The matrix display shows that the result of the simulation is a direct element-by-element matrix operation of $A + B - C$.

tan



$$y = \tan x$$


Block Category: Transcendental

The **tan** block produces the tangent of the input signal. The input signal must be represented in radians.

Examples

1. Computation of $\tan(2\theta) = 2 \tan(\theta) / (1 - \tan^2(\theta))$

With θ chosen to be $\pi/3$, the above trigonometric identity can be realized as:

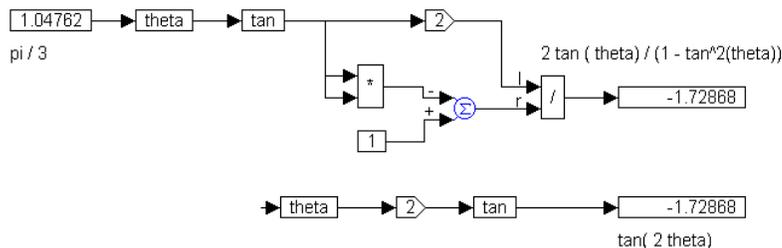

tanh



$$y = \frac{e^x - e^{-x}}{e^x + e^{-x}}$$


Block Category: Transcendental

The \tanh block produces the hyperbolic tangent of the input signal. The input signal must be represented in radians.


Examples

1. Computation of $\tanh(2\theta) = 2 \tanh(\theta) / (1 + \tanh^2(\theta))$

With θ chosen to be $\pi/4$, the above trigonometric identity can be realized as:

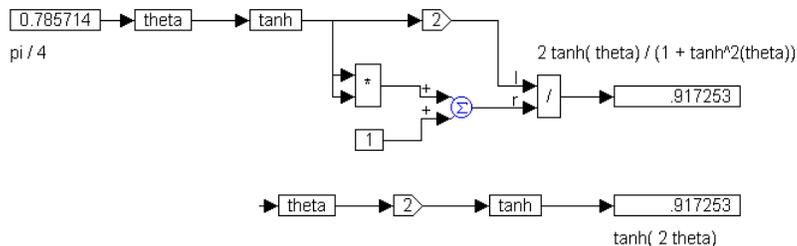


timeDelay

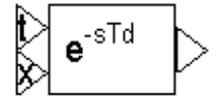

$$y = x(t - T_d)$$

Block Category: Time Delay

The `timeDelay` block delays the input signal for an absolute time. The input connector tabs are marked `t` (for the time delay) and `x` (for the main signal). This block is intended to model a continuous delay in a continuous simulation. Use the `uniTDelay` block to model a digital delay.

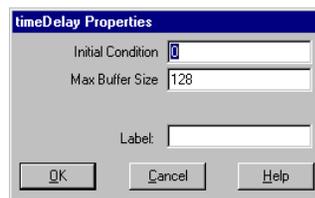

Initial Condition: Sets an initial condition for the delay. The default is 0.

Max Buffer Size: Controls the granularity of the resulting `timeDelay` signal. If the signal is too granular, increase the value. The default is 128.


The `timeDelay` block requires a buffer element for each time step in the requested delay amount. The buffer size should be set to the maximum delay time you need divided by the simulation time step.

Label: Indicates a user-defined block label.

Examples

1. Introduction of a constant delay

For a given signal, a constant delay can be introduced as shown on the next page.

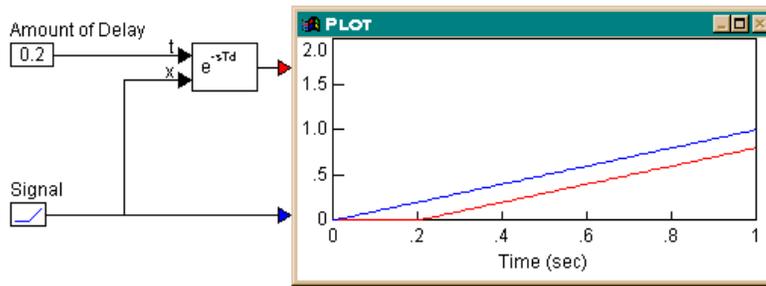

Here, a `ramp` block is used to produce a test signal and a `const` block is used to produce a time delay of 0.2. For this example, the simulation step size is set to 0.01.


The amount of delay connected to the `t` input tab must be an integral multiple of the simulation step size. If you had entered 0.027 as the amount of delay and re-run the simulation, VisSim would have issued an error message. This error occurs because VisSim starts the simulation at $t = 0$, and steps through at intervals of 0.01. The time intervals that are hit are 0, 0.01, 0.02, 0.03, and so on. The time delay 0.027 is not honored.

If you choose to ignore the error (by clicking on the `Retry` or `Ignore` buttons in the message box), VisSim rounds off the delay to the next nearest time step, which in this case happens to be 0.03, as shown below:



2. Introduction of an integral-multiple delay

One way to achieve multi-step delays is by using the `timeDelay`, `$timeStep`, and `gain` blocks, as shown on the next page.

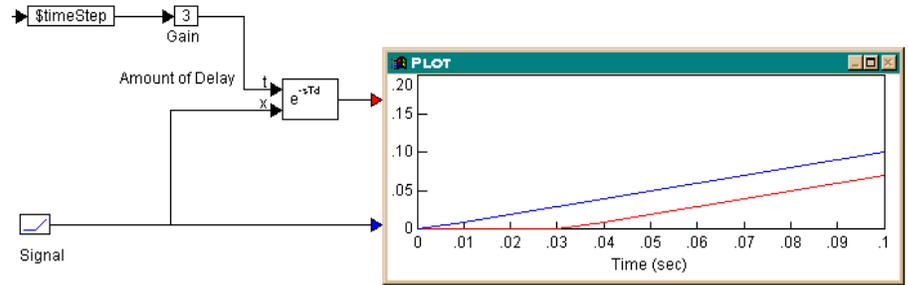


During simulation, the value sent to the `t` input of the `timeDelay` block is $3 * \$timeStep$, and as a result, the output of the `timeDelay` block is three steps behind the input signal.

3. Introduction of a time-varying delay

The real power of the `timeDelay` block becomes apparent when you implement time delays that are themselves time-varying. As an example, consider the following equation:


$$y = \sin(t - |\sin(t)|)$$

Here, the intent is to delay (or shift right) a sinusoid of frequency $\omega = 1$ rad/sec, by a time-varying amount given by the absolute value $|\sin(t)|$. This can be realized as:

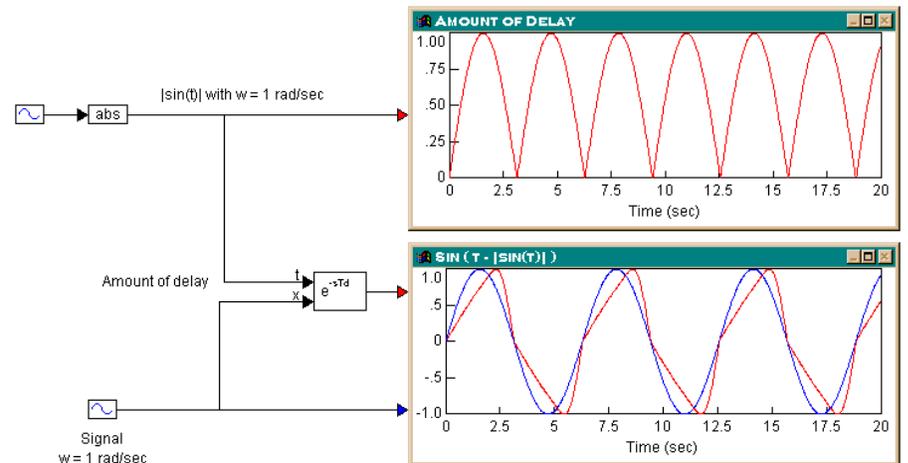

An `abs` block computes the absolute value of $\sin(t)$, generated by a `sin` block. The output of the `abs` block is fed to the `t` input of the `timeDelay` block. Another `sin` block generates the actual signal to be delayed. The top `plot` block shows the time-

varying delay being implemented. The bottom plot block shows the actual and delayed signals.

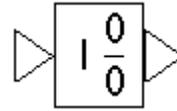

transferFunction

$$y = \frac{a_n s^n + a_{n-1} s^{n-1} \dots a_1 s + a_0}{b_n s^n + b_{n-1} s^{n-1} \dots b_1 s + b_0} x$$

Block Category: Linear System

The `transferFunction` block executes a single-input single-output linear transfer function specified in the following ways:

- **As an .M file created with VisSim:** The `Linearize` command in the Analyze menu generates ABCD state-space matrices from the nonlinear system by numerically evaluating the matrix perturbation equations at the time the simulation was halted. For more information, see the *VisSim/Analyze User's Guide*.
- **As an .M file created with a text editor:** The following is an example of a user-written .M file:

```
function [a,b,c,d] =vabcd
a = [-.396175 -1.17336 ; 5.39707 .145023 ];
b = [-.331182 ; -1.08363 ];
c = [0 1 ];
d = [0 ];
```


- **As a .MAT file created with MATLAB:** Generating .MAT files is described in the MatLab documentation. Note that when you save the ABCD matrices to file, the names of the matrices are not important; however, the order in which they appear is.

When you simulate the block diagram, VisSim numerically solves the `transferFunction` block.

You can set initial conditions for `transferFunction` blocks using variables. You can also reset `transferFunction` blocks to zeros using the Simulate > Reset States command, as described on page 59.

Digital filter design: The `transferFunction` block supports IIR and FIR digital filter design. For more information, see [Chapter 9, Designing Digital Filters.](#)

Setting up a transfer function: The `transferFunction` block's Properties dialog box allows you to control how the numerator and denominator polynomials are entered.

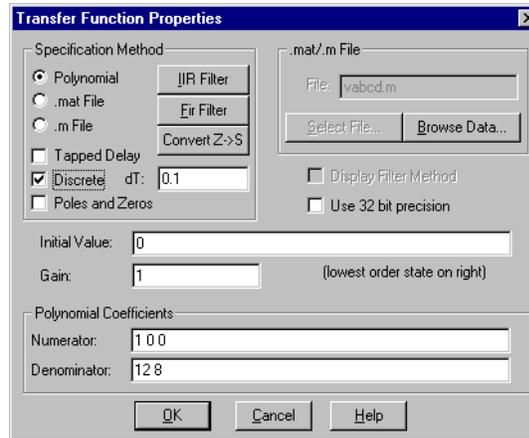

Specification Method: You have three choices of specification method:

- **Polynomial Coefficient:** Indicates that the transfer function is to be specified as numerator and denominator polynomials. Supply the numerator and denominator polynomials and gain under the Polynomial Coefficients group box.
- **.mat File:** Indicates that the transfer function is to be specified as a .MAT file. Specify the name of the .MAT file in the .mat/.m File group box.
- **.m File:** Indicates that the transfer function is to be specified as an .M file. Specify the name of the .M file in the .mat/.m File group box.

Discrete: Indicates a discrete Z-Domain transfer function. Enter the time step for the discrete transfer function in the dT box. By default, VisSim uses the step size established with the Simulate > Simulation Properties command.

When Discrete is de-activated, a continuous transfer function is created.

Tapped Delay: Provides tapped delay implementation for high order FIR filters. For more information, see [Chapter 9, Designing Digital Filters.](#)

dT: Specifies the time step for the discrete transfer function. By default, VisSim uses step size parameter from the Simulate > Simulation Properties command.

Poles and Zeros: Lets you enter a transfer function via zeros and poles in the Numerator and Denominator boxes, respectively. Enter each root in the following format:

(real-part, imaginary-part)

For large order systems, poles and zeros is more numerically accurate.

Display Filter Method: Displays the filter specification on the block. When Display Filter Method is not activated, VisSim displays the polynomial coefficients.

32 Bit Precision: Simulates the behavior of the transfer function at 32-bit precision. Normally, all VisSim blocks are 64-bit precision. This parameter allows you to simulate the effect of code running on a floating point 32-bit target.

IIR Filter: Opens the IIR Filters Setup dialog box to design a suitable filter using analog prototypes. For more information, see [Chapter 9, Designing Digital Filters.](#) ”

FIR Filter: Opens the FIR Filter Setup dialog box to construct Regular Finite Impulse Response filters, differentiators, and Hilbert Transformers. For more information, see [Chapter 9 Designing Digital Filters.](#)”

Convert S ->Z: Uses bilinear transformation to convert a continuous transfer function to an equivalent discrete transfer function with a sampling interval of dT . VisSim requests a discrete sampling rate prior to performing the conversion.

An example of the conversion is shown below.

$$H(s) = \frac{a}{s+a}$$

The bilinear transformation can be implemented by the substitution:

$$\frac{2}{dT} \frac{z-1}{z+1} \rightarrow s$$

The above transfer function becomes:

$$H_{dT}(z) = \frac{a}{\left(\frac{2}{T}\right) \left\{ \frac{z-1}{z+1} \right\} + a}$$

VisSim automatically simplifies this representation and enters the appropriate coefficients for the numerator and denominator polynomials.

Convert Z ->S: Uses bilinear transformation to convert a discrete transfer function to an equivalent continuous transfer function. For example, consider:

$$H_{dT}(z) = \frac{z}{z+b}$$

The bilinear transformation can be implemented by the substitution:

$$\frac{2+dT.s}{2-dT.s} \rightarrow z$$

The above discrete transfer function becomes:

$$H_{dT}(s) = \frac{2 + dT \cdot s}{(2 + 2b) + (dT - b \cdot dT)s}$$

VisSim automatically simplifies this representation and enters the appropriate coefficients for the numerator and denominator polynomials.

It is important to note that in both transformations, the results obtained are dependent on the sampling interval dT . In other words, for a given continuous or discrete transfer function, an infinite number of equivalent discrete or continuous transfer functions may be obtained by varying the sampling interval dT .

File: Indicates the name of the .M or .MAT file to be used as input to the `transferFunction` block. You can type the file name directly into this box or select one using the Select File button.


Initial Value: Specifies initial values for the states in the block. The values are right-adjusted. The right-most value corresponds to the lowest order state. Unspecified states are set to 0.

Gain: Indicates the transfer function gain. If the leading terms of the numerator and denominator coefficients are not unity, VisSim will adjust the gain to make it so. The default value is 1.

Denominator: Indicates the denominator polynomial for the `transferFunction` block. VisSim determines the order of the transfer function by the number of denominator coefficients you enter. For example, an n th order transfer function will have $n + 1$ coefficients. Separate coefficients with spaces.

Numerator: Indicates the numerator polynomial for the `transferFunction` block. Separate coefficients with spaces.


Examples

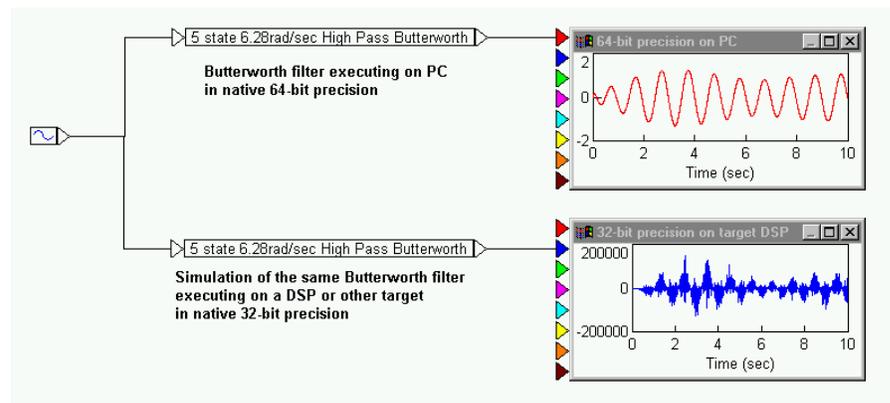

This example demonstrates how VisSim can simulate a Butterworth filter in reduced precision, to simulate the effects of implementing the system on a reduced-precision

32-bit floating point target. To turn on reduced precision, activate the 32-Bit Precision option in the dialog box for the `transferFunction` block.

transpose

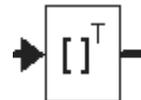


$$\begin{bmatrix} a_{ij} \end{bmatrix}^T = \begin{bmatrix} a_{ji} \end{bmatrix}$$

Block Category: Matrix Operation


The `transpose` block interchanges each row with the column of the same index number. Thus, if $\mathbf{A} = \begin{bmatrix} a_{ij} \end{bmatrix}$, then the transpose of \mathbf{A} is: $\mathbf{A}^T = \begin{bmatrix} a_{ji} \end{bmatrix}$

The `transpose` block accepts one vector input and produces one vector output.

Examples

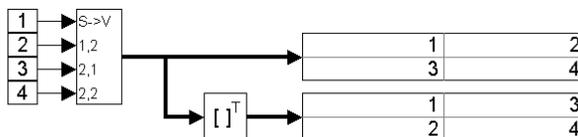

uniform

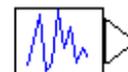

Block Category: Random Generator


The `uniform` block creates a uniformly distributed random noise signal with values between zero and one. The random seed is set under Preferences in the dialog box for the `Simulate > Simulation Properties` command.



Time Delay(sec): Indicates, in seconds, how long to delay before calculating the value of the noise signal. The default is 0.

Label: Indicates a user-defined block label.


unitConversion

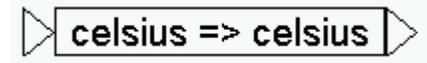

Block Category: Arithmetic

The `unitConversion` block changes the unit of measurement of the data. You can convert the unit of measurement within numerous categories, including: acceleration, area, capacitance, charge, conductivity, current, energy, flow rate, force, inductance, magnetic flux, mass, position, power, pressure, speed, temperature, volume, and more. For example, you can convert from Fahrenheit to Celsius, watts to kilowatts, or joules to BTUs.

Conversions are always displayed on the block.

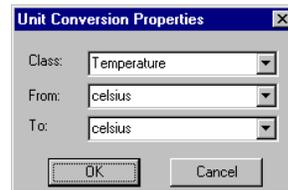


Class: Indicates the category of measurement.

From: Indicates the unit of measurement for the data exiting the block. Click on the DOWN ARROW to select a unit of measurement.

To: Indicates the unit of measurement for the data entering the block. Click on the DOWN ARROW to select a unit of measurement.

unitDelay

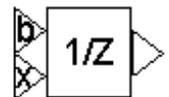

$$y = \begin{cases} y_{\text{buffer}} \cdot y_{\text{buffer}} = x_2 & \text{if } |x_1| \geq 1 \\ y_{\text{previous}} & \text{otherwise} \end{cases}$$


Block Category: Time Delay

The `unitDelay` block specifies a clocked unit delay. The input connector tabs are marked b (for Boolean clock) and x (for main signal). When the Boolean clock does not equal zero, the value contained in the single element buffer is copied to the block

output (where it holds this value until the next non-zero Boolean clock). The current value of the main signal is stored in the unit buffer.

The `unitDelay` block is intended for modeling a digital delay in a continuous simulation. A typical digital delay is modeled by wiring a `pulseTrain` block to the Boolean input connector tab of the `unitDelay` block. Use the `timeDelay` block to model a continuous delay.

You can set the initial conditions for `unitDelay` blocks with variables. You can also reset `unitDelay` blocks to zeros using the `Simulate > Reset States` command, as described on 59.

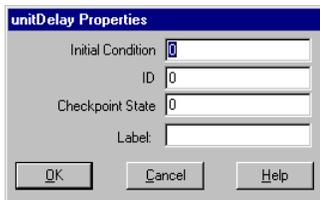

Initial Condition: Sets an initial value for the output signal. The default is 0.

ID: Reserved for future use.


Checkpoint State: Contains the value of the unit delay at the checkpoint. If you have not checkpointed your simulation via the `Simulate > Simulation Properties` command, the value is 0.

Label: Indicates a user-defined block label.

Examples

1. Clocking the `unitDelay` block

If you are working with `unitDelay` blocks, it is good programming practice to create a clock signal that you can use in every simulation. A typical clock signal can be generated as:

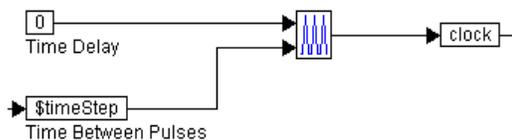


Here, a `pulseTrain` block is assigned two external inputs:

- The top input is the time delay for the `pulseTrain` block. The time delay value for the `pulseTrain` block is the amount of time the `pulseTrain` block waits before producing pulses. This time delay value must not be confused with the amount of time delay generated by the `unitDelay` block.
- The bottom input is the time between pulses.

The output of the `pulseTrain` block is fed to the variable `clock`. This variable can be used anywhere in the simulation to clock `unitDelay` blocks.

2. Introduction of a one-step delay


For a given signal, a one-step delay can be introduced as:

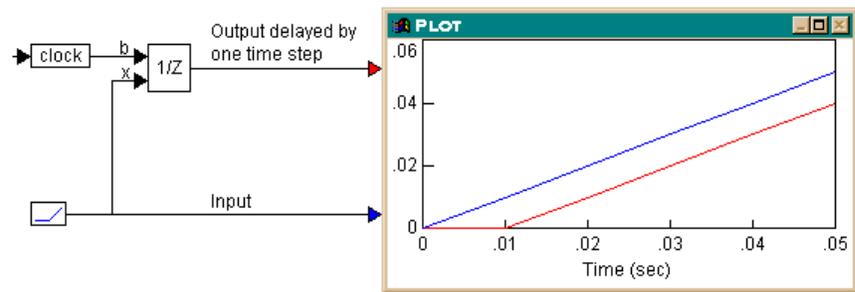

During simulation, the actual and delayed signals are plotted in the `plot` block. The output of the `unitDelay` block is delayed by one step (equal to 0.01 in this case) as compared to the input.

3. Using a multi-step delay with cascaded `unitDelay` blocks

To achieve multi-step delays, `unitDelay` blocks that implement one-step delays, can be cascaded. Consider the example where a three-step delay is introduced:

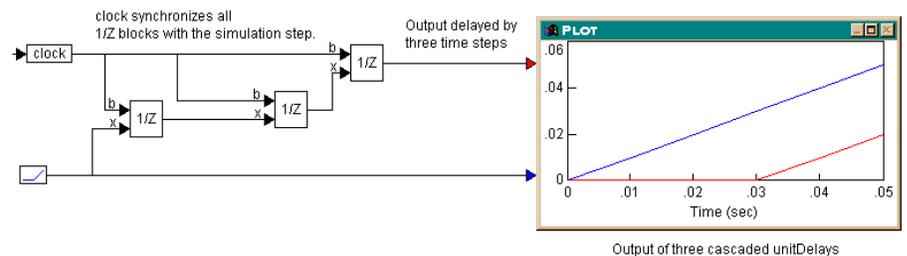

Three `unitDelay` blocks, all clocked at the simulation step, are cascaded. Since each `unitDelay` introduces a one-step delay between its input and output, the output of the third `unitDelay` block is delayed by three steps compared to the input. The `plot` block shows this behavior, with a simulation step size of 0.01.

unknown




Block Category: Optimization

The `unknown` block works in conjunction with `constraint` blocks to solve equations for unknowns using Newton-Raphson iteration. For each `unknown`, there should be a `constraint` block that is fed directly or indirectly by the `unknown`. The maximum iteration count, error tolerance, and perturbation are established under the Implicit Solver tab in the dialog box for the `Simulate > Simulation Properties` command. For more information, see [Chapter 7, Solving Implicit Equations.](#)"

userFunction




The `userFunction` block lets you create blocks bound to Dynamic Link Library (DLL) functions. For more information, see [Appendix B, Extending the Block Set.](#)"

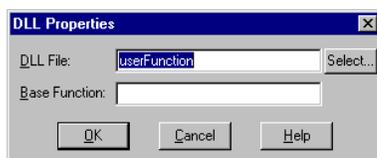

DLL File: Indicates the name of the DLL file containing the user function.

Base Function: Indicates the base name of the function.


variable

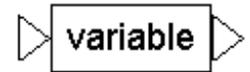

Block Category: Annotation

The `variable` block lets you name a signal and transmit it throughout your diagram without the use of wires. For more information, see page 175.

vecToScalar

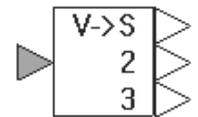

Block Category: Annotation

The `vecToScalar` block separates a single vector wire into individual output signals. Use the `scalarToVec` block to bundle signals into a single vector wire.


vsum



Block Category: Matrix Operation

The `vsum` block produces a single value summation of all the elements in the matrix. The `vsum` block accepts one vector input and produces one scalar output.

Examples

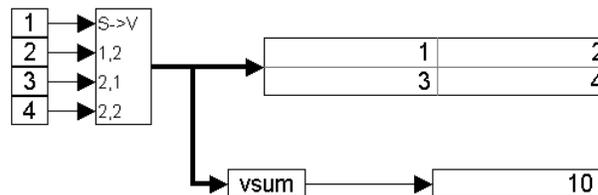

wirePositioner



Block Category: Annotation

The wirePositioner block lets you create a specific wiring path. A wirePositioner block is essentially an input connector tab and an output connector tab that are attached by a flexWire. Since wirePositioner blocks don't take any additional computation time, you won't see a decrease in performance during a simulation.

Input to the wirePositioner block can be scalar or vector.

xor



$$y = x_1 \text{ bitwise XOR } x_2$$

Block Category: Boolean

The xor block produces the bitwise exclusive OR of two to 256 scalar input signals.

If you click the right mouse button over the xor block, the Boolean block menu appears allowing you to assign a different function to the block.


Examples

1. Using the xor block

Consider a variable y such that:

If $a \geq 4$ or $c \leq 5$, then $y = \cos(t)$; else $y = 0$. Also, if $a \geq 4$ and $c \leq 5$, $y = 0$

where t is simulation time. Furthermore, let t be the input to parameters a and c . This system can be realized as shown on the next page.

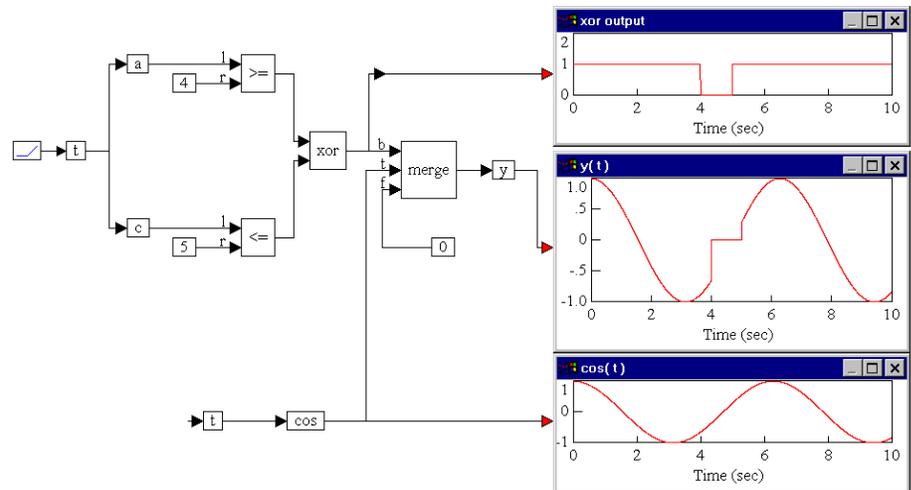

As shown in the two plot blocks, the output of the xor block evaluates to false in the interval $t = (4, 5)$, since both the inputs to the xor block are true in this interval. Consequently, y takes on the value of 0. The output of xor evaluates to true in the remaining parts of the simulation, and as a result, y takes on the value of $\cos(t)$ in these periods.

Customizing VisSim

This chapter covers the following information:

- Customizing VisSim start-up
- Customizing the VisSim window
- Creating custom implicit solvers
- Creating custom global optimizers

Customizing VisSim start-up

By adding arguments to the VisSim start-up command, you can control such things as how VisSim starts up, the block diagram file opened at start-up, and whether VisSim immediately simulates the opened diagram.

► To customize VisSim start-up

1. Refer to your Windows documentation for instructions on displaying the properties of a program.
2. Click on the Shortcuts tab and enter one or more of the following arguments in the Target box.

If you enter more than one argument, separate them with spaces. If a block diagram name is included in the argument list, it must be specified last.

Use this argument	To
<i>block-diagram-name</i>	Start VisSim and open the specified block diagram.
-i [<i>block-diagram-name</i>]	Start VisSim as an icon and optionally open a block diagram.

Use this argument	To
-nb [<i>block-diagram-name</i>]	Start VisSim without the start-up banner and optionally open a block diagram.
-ne	Suppress the simulation completion dialog box.
-r <i>block-diagram-name</i>	Run a simulation read in from the specified block diagram upon start up.
-re <i>block-diagram-name</i>	Run a simulation read in from the specified block diagram and exit VisSim upon completion.

3. Click on the OK button.

Customizing the VisSim window

The VisSim window contains a menu bar, toolbars, scroll bars, a status bar, and a diagram tree. You can display or hide these items at any time during a VisSim session. For example, if you're working on a large a block diagram, you may want to hide the status bar and diagram tree so you can see as much of the diagram as possible. When you simulate the diagram, you may want to display the status bar to keep track of progress of the simulation.

► To hide or display VisSim window elements

- Do one or more of the following:

To display or hide	Do this
Scroll bars	Choose <u>E</u> dit > <u>P</u> references. Select the Preferences tab, and select or clear the Show Horizontal Scroll Bar or Show Vertical Scroll Bar check box.
Status bar	Choose <u>V</u> iew > <u>S</u> tatus Bar.
Toolbar	Choose <u>V</u> iew > <u>T</u> oolbar. Select or clear each toolbar check box.
Diagram tree	Drag the right edge of the diagram tree.


Customizing the toolbar

You can create a custom toolbar that contains buttons for commands and blocks you use most frequently. You can also create your own images for the buttons. The custom toolbar is named User.

► To create a custom toolbar button

1. Choose View > Toolbar.
2. Activate the User option, if it is not already activated, then click on the OK button, or press ENTER.
3. Choose Edit > Toolbar.

The Customize Toolbar dialog box appears.

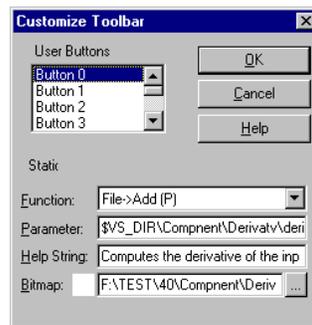

4. Under User Buttons, select a button number.
5. In the Function box, click on the DOWN ARROW and select the command to be assigned a toolbar button. If you select:
 - Blocks → (P), click on the DOWN ARROW in the Parameter box and select a block to be associated with the toolbar button.
 - Edit → Find (P), File → Add (P), or File → Open (P), you can optionally enter a variable block name or file name in the Parameter box. If you do not enter anything, VisSim opens the Find, File Add, or File Open dialog box when you click on the toolbar button.
6. In the Help String box, you can optionally enter text that will appear in the status bar when you point to the toolbar button. If you do not enter anything, VisSim displays the default help string for the toolbar button.
7. Click on the Find button to choose a bitmap for the toolbar button. Pre-made button bitmap images can be found in \VISSIM45\BITMAPS\TOOLBAR.
Custom bitmap should be 16-pixels wide by 15-pixels high for the best display.
8. Click on the OK button, or press ENTER.

► **To remove a custom toolbar button**

1. Choose Edit > Toolbar.
2. From the toolbar button list, select the toolbar number that corresponds to the toolbar button to be removed from the toolbar.
3. In the Functions box, click on the DOWN ARROW and select <none>.
4. Click on the OK button, or press ENTER.

Customizing other screen settings

In addition to changing general VisSim settings, you can also change many other settings to customize how VisSim looks, such as the use of colors and text fonts in your diagrams, the shape and color of connector tabs, and the amount of information displayed with each block in a diagram.

These settings are controlled with the Edit > Preferences command and the commands under the View menu. When you select a setting, it takes effect immediately and remains in effect until you change it.

► To change the display settings in VisSim

- Do one or more of the following:

To	Do this
Hide input connector tabs and shrink the size of output connector tabs	Choose V iew > P resentation Mode.
Hide wires and connector tabs, freeze blocks in place, and with the exception of interactive elements on <code>button</code> and <code>slider</code> blocks, lock block parameter values	Choose V iew > D isplay Mode. Typically this mode is used when there is animation in your simulation or you've constructed an instrumentation panel to monitor and control your simulation. Display mode can be turned on or off for individual block diagram levels.
Magnify the blocks on the screen.	Choose V iew > Z oom In. You can alternatively click on the  button on the toolbar.
Shrink the blocks on the screen.	Choose V iew > Z oom Out. You can alternatively click on the  button on the toolbar.
Color connector tabs according to the type of data entering or exiting the block	Choose V iew > D ata Types. The four types of data and their corresponding connector tab colors are double-floating point (red), signed integer (green), unsigned integer (blue), and vector (magenta).

To	Do this
Display connector labels on compound blocks	Choose V iew > C onnecter Labels.
Change how text is displayed on blocks	Choose V iew > F onts. Select the text attributes. Character format can be selectively applied to T able blocks, as described on page 249. Rich text format can be retained in c omment blocks, as described below.
Retain character format in c omment blocks	Choose E dit > P references. Select the Preferences tab. Activate Use Rich Text Format.
Change the color of the VisSim screen; plotting background on p lot, s tripChart, and h istogram blocks; wires; and diagram text	Choose V iew > C olors. Select the color for the corresponding screen element. When you choose a default color for the plotting background, VisSim uses the specified color on all m eter, p lot, and s tripChart blocks except those whose background colors were explicitly set in their Properties dialog boxes.
Display block names beneath each block	Choose E dit > P references. Select the Preferences tab. Activate Training Mode Labels. Then choose V iew > B lock Labels.
Display parameter values, file names, and block names beneath each block	Choose E dit > P references. Select the Preferences tab. Clear Training Mode Labels. Then choose V iew > B lock Labels.
Color compound blocks light blue	Choose E dit > P references. Select the Preferences tab. Activate Color Compound Blocks.
Display block diagrams in black and white	Choose E dit > P references. Select the Preferences tab. Clear Color Compound Blocks and Color Display.

Creating custom implicit solvers

You can write an implicit static solver as a .DLL file. VisSim recognizes and uses a user-written solver only if:

- It is named VSOLVER.DLL
- It resides in your current directory when you initiate implicit static solving

- It contains an exported function called `userSolver()`
- The User Solver parameter in the dialog box for the Simulate > Optimization Properties command is activated

Source files for building a custom implicit solver

The following table lists the source files for building an implicit static solver. These files are installed in `\VISSIM45\VSOLVER` and `\VISSIM45\VSDK`. They contain code for building a simplified Gauss-Seidel static solver. You may find it easier to edit the files to create your own static solver. To use these files, they must remain in the directories in which they currently reside.

Source file	Description
VSOLVER.FOR or VSOLVER.C	A Fortran or C source file for the implicit static solver. The heart of the solver is the <code>vissimRequest()</code> function that you call to obtain the inputs to the <code>constraint</code> blocks and to supply values to the outputs of the <code>unknown</code> blocks. Using <code>vissimRequest()</code> , you can write a wide variety of solvers. For more information, see the description below.
VSOLVER.DEF	A definition file with linker commands to build a .DLL file from object code. Windows requires that you use a definition file to link the object code.
VSOLVER.MAK	A make file with rules for automatically building a .DLL file.
VSUSER.H	A C language header file with function prototypes and command definitions for the <code>vissimRequest()</code> function.

Using `vissimRequest()` in a custom implicit solver

The `vissimRequest()` function is a general-purpose function for making requests to VisSim. A user-written solver uses `vissimRequest()` to read and write optimization information in a block diagram. The general format of `vissimRequest()` is:

```
long FAR vissimRequest(long req, long arg2, long arg3 )
```

The first argument (`long req`) is a message code describing the action for VisSim to take. The list of message codes is defined in the file named `VSUSER.H`, which is installed in `\VISSIM45\VSOLVER`. The message codes that pertain to writing a local static solver are listed in the table on the next page.

Message code	Description
VR_EXECUTE	Executes the diagram on iteration without moving time.
VR_GET_BLOCK_PARAMS	Returns a pointer to a block's parameters.
VR_GET_CONSTRAINTS	Arg2 returns a vector of local constraint values. Ordering of the elements vector can be determined by the value of the ID parameter for the <code>constraint</code> block. VisSim sorts in sequential order, from low to high.
VR_GET_SOLVER_INFO	Arg2 returns information related to the diagram and the implicit solver dialog settings in the following manner: arg2[0] = number of constraints arg2[1] = number of unknowns arg2[2] = relaxation value arg2[3] = maximum iteration value arg2[4] = error tolerance value
VR_GET_UNKNOWNNS	Arg2 returns a vector of current local unknown output values. Ordering of the elements vector can be determined by the value of the ID parameter for the <code>unknown</code> block. VisSim sorts in sequential order, from low to high.
VR_GET_UNKNOWNNS_INPUT	Arg2 returns a vector of current inputs to the <code>unknown</code> blocks. Ordering of the elements vector can be determined by the value of the ID parameter for the <code>unknown</code> block. VisSim sorts in sequential order, from low to high. (This is useful for initial condition setting.)
VR_GET_VERSION	Returns the current version of VisSim.
VR_GET_VISSIM_STATE	Gets information related to the global state of VisSim. The information provided is a copy of the current internal state; modifying it will not change VisSim's state. Arg2 should contain a pointer to a <code>SIM_INFO</code> structure, defined in <code>VSUSER.H</code> , which will be filled in by the <code>vissimRequest()</code> function. Arg3 should contain the size of this structure (<code>sizeof(SIM_INFO)</code>) to allow for version compatibility checking.
VR_SET_UNKNOWNNS	Sets diagram unknowns based on the vector passed as arg2. Ordering of the elements vector can be determined by the value of the ID parameter for the <code>unknown</code> block. VisSim sorts in sequential order, from low to high.

Building a custom implicit solver


Most languages have a Project Build facility that automates the process of building a .DLL file. The following procedure guides you through the process of building a project in general terms. Refer to the documentation for the application language you're using for specific instructions.

► To build a custom implicit solver

1. Invoke the Compiler environment.
2. Add all the source files listed in on page 318 to the project or make file.
3. Under project options, specify the project type as a Windows Dynamic Link Library (.DLL).
4. Under compiler preprocessor options, specify \VISSIM45\VSDK as the include directory.
5. Build the project.

Using the constraint block with a custom implicit solver

To indicate the number that VisSim uses to sort the block when presented as a vector in a user-written solver, enter it in the ID box of the Constraint Properties dialog box. VisSim does not require the ID to be unique or contiguous; it sorts them in sequential order. The default is 0.

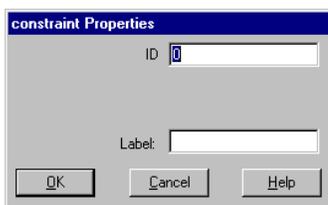

Creating custom global optimizers

You can write a global optimizer as a .DLL file. VisSim recognizes a user-written global optimizer when it is named VOPT.DLL and resides in your current directory. VOPT.DLL should also contain an exported function in the following format:

```
int FAR EXPORT USER_OPT_FUNC(DOUBLE *unknownVec, int
    unknownCount, int costCount, int globalConstraintCount);
```

Optimize has a prototype declared in VSUSER.H.

Before you initiate global optimization, make sure VOPT.DLL is in your current directory and the User Solver parameter in the dialog box for the Simulate menu's Optimization Setup command is activated.

Source files for building a custom global optimizer

The following table lists the source files for building a global optimizer. These files are installed in \VISSIM45\VSOLVER and \VISSIM45\VSDK.

Source file	Description
VOPT.C	A C source file for a sample global optimizer. The heart of the optimizer is the <code>vissimRequest()</code> function that you call to obtain the inputs to the <code>cost</code> blocks and to supply values to the outputs of the <code>parameterUnknown</code> blocks. Using <code>vissimRequest()</code> , you can write a wide variety of optimization algorithms. For more information, see the description below.
VOPT.DEF	A definition file that contains linker commands to build a .DLL file from object code.
VOPT.MAK	A make file that contains rules for automatically building a .DLL file.
VSUSER.H	A C language header file that contains function prototypes and command definitions for the <code>vissimRequest()</code> call.
IMPSIM.LIB	VisSim import library that describes the address of <code>vissimRequest()</code> .

Using `vissimRequest()` in a custom global optimizer

The `vissimRequest()` function is a general-purpose function for making requests to VisSim. A user-written global optimizer uses `vissimRequest()` to read and write global optimization information in a block diagram. The general format of `vissimRequest()` is:

```
long FAR vissimRequest(long req, long arg2, long arg3 )
```

The first argument (`long req`) is a message code describing the action for VisSim to take. The list of message codes is defined in the file named VSUSER.H, which is installed in \VISSIM45\VSOLVER. The message codes that pertain to writing a global optimizer are as follows:

Message code	Description
VR_GET_GLOBAL_COST	Writes a vector of current <code>cost</code> block input values into a vector pointed at by <code>arg2</code> .
VR_GET_GLOBAL_CONSTRAINTS	Writes a vector of current <code>globalConstraint</code> block input values into a vector pointed at by <code>arg2</code> .

Message code	Description
VR_GET_GLOBAL_CONSTRAINT_BOUNDS	Writes a vector of <code>globalConstraint</code> block low bounds into a vector pointed at by <code>arg2</code> , and a vector of <code>globalConstraint</code> block high bounds into a vector pointed at by <code>arg3</code> .
VR_GET_GLOBAL_OPT_INFO	Gets information related to the global optimization settings in the dialog box for the Optimization Setup command. The information provided is a copy of the current optimization state; modifying it will not change VisSim's state. <code>Arg2</code> should contain a pointer to an <code>OPT_INFO</code> structure, defined in <code>VSUSER.H</code> , which will be filled in by the <code>vissimRequest()</code> call. <code>Arg3</code> should contain the size of this structure (<code>sizeof(OPT_INFO)</code>) to allow for version compatibility checking.
VR_GET_GLOBAL_UNKNOWNNS	Writes a vector of current <code>parameterUnknown</code> block output values into the vector pointed at by <code>arg2</code> . Ordering of the elements vector can be determined by the value of the ID parameter for the <code>parameterUnknown</code> block. VisSim sorts in sequential order, from low to high.
VR_GET_GLOBAL_UNKNOWNNS_INPUT	Writes a vector of current <code>parameterUnknown</code> block input values into the vector pointed at by <code>arg2</code> . Ordering of the elements vector can be determined by the value of the ID parameter for the <code>parameterUnknown</code> block. VisSim sorts in sequential order, from low to high.
VR_GET_GLOBAL_UNKNOWN_BOUNDS	Writes a vector of <code>parameterUnknown</code> block low bounds into a vector pointed at by <code>arg2</code> , and a vector of <code>parameterUnknown</code> block high bounds into a vector pointed at by <code>arg3</code> .
VR_GET_VERSION	Returns the current version of VisSim.
VR_GET_VISSIM_STATE	Gets information related to the global state of VisSim. The information provided is a copy of the current internal state; modifying it will not change VisSim's state. <code>Arg2</code> should contain a pointer to a <code>SIM_INFO</code> structure, defined in <code>VSUSER.H</code> , which will be filled in by the <code>vissimRequest()</code> function. <code>Arg3</code> should contain the size of this structure (<code>sizeof(SIM_INFO)</code>) to allow for version compatibility checking.
VR_RESET_XFERS	For internal use only.

Message code	Description
VR_RUN_SIMULATION	Starts a simulation run.
VR_SET_GLOBAL_UNKNOWNNS	Sets current parameterUnknown block output values from arg2.

Building a custom global optimizer

Most languages have a Project Build facility that automates the process of building a .DLL file. The following procedure guides you through the process of building a project in general terms. Refer to the documentation for the application language you're using for specific instructions.

► To build a custom global optimizer

1. Invoke the Compiler environment.
2. Add all the source files listed in on page [321](#) to the project or make file.
3. Under project options, specify the project type as a Windows DLL.
4. Under compiler options, specify the following:
 - Memory Model to be Large.
 - Windows Prolog/Epilog to be Real Mode_far Functions.
5. Build the project.

Extending the Block Set

This appendix covers the following information:

- Writing and building DLLs from scratch and by using the DLL Wizard
- Calling conventions
- Simulation level functions
- Block level functions
- Exported functions
- Debugging DLLs
- Accessing custom blocks


Before you begin...

Before you begin writing DLLs, make sure that VisSim's `..\INCLUDE` directory is part of the list of include directories that your compiler searches. The file specification for VisSim's `\INCLUDE` directory is `C:\VISSIM40\VSDK\INCLUDE`.

The big picture

VisSim provides an Application Programming Interface (API) that allows you to extend the standard block set by creating Dynamic Link Library (DLL) files and binding them to `userFunction` blocks. A DLL file is like a regular executable file with the exception that it cannot start execution on its own. A DLL function can be called just like functions that are part of a normal executable file.

The following diagram shows how files are processed to create VisSim DLLs. This diagram steps you through the process of creating a DLL from a C source file; however, you can also create DLLs in Fortran, Pascal, and C++.

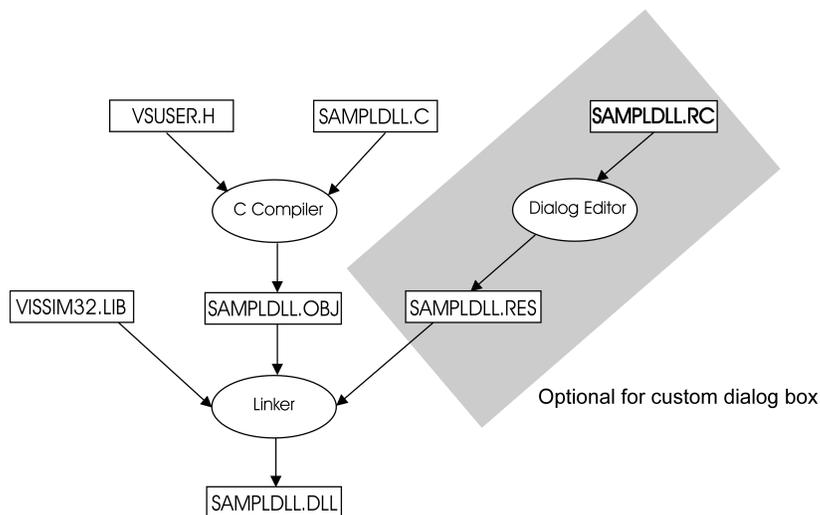

The main steps in the creation of VisSim DLLs are:

1. Create or edit an existing C, Fortran, or Pascal source file.
2. Create a project DLL for your compiler.
3. Execute a build operation, which compiles your source code into an object file.
4. Link the object file with VISSIM32.LIB to produce a DLL.
5. VisSim also provides a DLL Wizard that automatically performs steps 1, 2, and 4. For directions on using the DLL Wizard, see page [337](#).

Criteria for writing DLLs

You can write DLLs in any language, provided the language has the following capabilities:

- 64-bit floating point array parameters
- Pointers to 16-bit integers
- `_stdcall` calling conventions (default for Microsoft Fortran and Delphi Pascal)

Example DLLs written in C, Fortran, and Pascal are distributed with VisSim and reside in subdirectories under the `\VISSIM40\VSDK` directory.

Building a DLL

There are two ways to build a DLL:

- Using the VisSim DLL Wizard, as described on page 337.
- Using a Project Build facility.

Using a Project Build facility: Most languages have a Project Build facility that facilitates the process of building a DLL. The following procedure guides you through the process of building a project in general terms. Refer to the documentation for the application language you're using for specific instructions.

1. Invoke the Compiler environment.
2. Add the following files to the project file:
 - All the source files
 - All the resource files
 - VISSIM32.LIB
3. Under project options, specify the project type as a Windows Dynamic Link Library (.DLL).
4. Under compiler preprocessor options, specify \VISSIM40\VSDK as the include directory.
5. Build the project.

How VisSim talks to a DLL

There are three types of functions used for communication between VisSim and your DLL:

- Simulation level functions
- Block level functions
- VisSim exported functions

Simulation level functions and block level functions are DLL functions VisSim can call via a `userFunction` block. Simulation level functions are called once per simulation-wide event. Block level functions, on the other hand, are called once for each `userFunction` block. If you have no `userFunction` blocks, no calls are made; if you have 100 `userFunction` blocks, they are called 100 times.

Exported functions are VisSim functions that you can call from a DLL. These functions allow a DLL to request information from VisSim, as well as instruct VisSim to perform specific actions.

Calling conventions

The following information pertains to the DLL functions described in the next several sections:

- Functions are shown in C syntax. For Fortran and Pascal syntax, look in the sample source files in subdirectories under \VISSIM40\VSDK.
- All arguments are pointers to data types. Since Fortran passes variables by reference, a normally declared Fortran variable can be passed as an argument.

Simulation level functions

There are two simulation level functions:

- **vsmInit()**. Called at VisSim start-up. You use this function to insert one or more blocks in the Blocks menu.
- **vsmEvent()**. Called at simulation-wide events, such as simulation start, end of time step, and simulation end.

Initialization function - vsmInit()

This DLL function is called by VisSim to allow the DLL to perform initialization, particularly to insert `userFunction` blocks into the Blocks menu.

```
EXPORT32 int EXPORT PASCAL vsmInit()
```

To have `vsmInit()` be called when VisSim starts up, you must tell VisSim the path to your DLL, as described on page 343.

System-wide event function - vsmEvent()

This function is called by VisSim to notify the DLL of interesting simulation-wide events.

```
LPSTR PASCAL vsmEvent(int msg, int wParam, long *arg);
```

Message	Function
VSE_POST_SIM_END	VisSim has stopped, either from user stop or time expiration.
VSE_POST_SIM_START	VisSim has initialized all blocks and is about to start.
VSE_PRE_SIM_START	VisSim is about to start a simulation but has not initialized any blocks.
VSE_SIM_RESTART	VisSim is restarting due to auto-restart.
VSE_TIME_STEP	Simulation has completed a time step.
WM_COMMNOTIFY	Comm port data is ready.

Message	Function
WM_DESTROY	VisSim is exiting.
WM_VSM_WINDOW_HANDLE	Handle to VisSim main window. arg: Window handle

Block level functions

In order to interface smoothly with VisSim, VisSim can call seven Pascal-style functions that share the base DLL function name and have an event code suffix corresponding to a VisSim event. You should supply a function for each event that you want your DLL code to handle. The additional functions are described below:

Function name	Purpose	When it's called
<i>userBlock</i> ()	Block time step	Each simulation time step
<i>userBlockEvent</i> ()	Block event handler	On occurrence of a block related event
<i>userBlock PA</i> ()	Block parameter allocation	Block creation
<i>userBlock PC</i> ()	Block parameter change	Right button click
<i>userBlock PI</i> ()	Block parameter initialization	Immediately after <i>userBlockPA</i> ()
<i>userBlock SE</i> ()	Block simulation end	Simulation end time
<i>userBlock SS</i> ()	Block simulation start	Simulation start time

The term *userBlock* is a placeholder for your DLL base function name. You specify the DLL base function name when you bind the DLL to a `userFunction` block. For more information, see page [337](#).

You can have any number of user-written blocks in a single DLL file.

All definitions are kept in the VSUSER.H file. This file should be included in every user DLL.

Time step function - *userBlock*()

The *userBlock*() function is called at each time step to calculate simulation values. It is the only function a DLL is required to export.

The *userBlock*() function may be called an arbitrary number of times during a time step interval. The number of calls depends on the integration method and whether the `VBF_HAS_STATE` flag is active for a block. Note that the outputs are not preserved from call to call. Therefore this function must write to its outputs at each call.

```
void PASCAL userBlock(double param[], double inSig[], double outSig[])
```

The `inSig` array is filled by VisSim with the values presented to the input connector tabs on the `userFunction` block. Store the result values in the `outSig` array. VisSim presents the `outSig` values to the corresponding output connector tabs on the `userFunction` block.

Event handler function - *userBlockEvent()*

The `userBlockEvent()` function is called at block events, such as block repaint, end of time step, and simulation end.

```
LPSTR PASCAL userBlockEvent(HWND h, int msg, WPARAM wp,
    LPARAM lp)
```

This function lets you save and restore mixed data types. Note that the arguments are the same as Windows or Windows NT event functions.

VisSim calls your function with the following messages:

Message	Description
WM_VSM_ADD_CONNECTOR	Signals a user-request for a connector to be added to a block. wp: Current count lp: 1 if input 0 if output
WM_VSM_BLOCK_INFO	Used for writing a custom optimizer.
WM_VSM_BLOCK_PLACED	Signals that a block has been placed in the diagram. lp: Block handle
WM_VSM_BLOCK_SETUP	This event is generated only if there is no <code>userBlockPC()</code> function defined for the block. This event is generated when you click the right mouse button on the block. wp: Internal ID lp: Block handle
WM_VSM_CHECKPOINT_STATE	Signals a user-request to checkpoint system states; that is, set the checkpoint buffer to the current state value.
WM_VSM_CONNECTOR_NAME	Returns string of connector label name. Null if no label is desired. wp: Port number (negative if output) lp: Block handle

Message	Description												
WM_VSM_CREATE	<p>Is called when a user block is created. You can return flags to customize block treatment. (For more information, see “Return flags for WM_VSM_CREATE,” below.)</p> <p>wp: 0 if create from file 1 if create from menu 2 if create from clipboard</p> <p>lp: Block handle</p>												
WM_VSM_DEL_CONNECTOR	<p>Signals a user-request for a connector to be deleted from a block.</p> <p>wp: Current count</p> <p>lp: 1 if input 0 if output</p>												
WM_VSM_DESTROY	<p>Is called when user block is destroyed.</p> <p>lp: Block handle</p>												
WM_VSM_FILE_CLOSE	Reserved.												
WM_VSM_FILE_READ	<p>Signals that block and all its parameters have been read in from file.</p> <p>lp: Block handle</p>												
WM_VSM_GET_BLOCK_BITMAP	Reserved.												
WM_VSM_GET_BLOCK_NAME	<p>Provides a block with a custom name. Return a null terminated string that contains the new name. The name may contain newline characters.</p>												
WM_VSM_GET_PARAM_DESC	<p>Provides a data descriptor for saving and restoring data. Return a text string that describes your data by following these guidelines:</p> <table border="1"> <thead> <tr> <th>Format character</th> <th>Data Type</th> </tr> </thead> <tbody> <tr> <td>i</td> <td>2-byte integer</td> </tr> <tr> <td>I</td> <td>4-byte integer</td> </tr> <tr> <td>f</td> <td>4-byte float</td> </tr> <tr> <td>F</td> <td>8-byte float</td> </tr> <tr> <td>c</td> <td>Single-byte character</td> </tr> </tbody> </table> <p>All of the above format characters can take an optional count suffix, which is enclosed in square brackets. For example to save two 8-byte floats and a 32-character string in C, use the following string notation: “F [2] c[32]” In Fortran, the string notation is: ‘F [2] c[32]’ c</p>	Format character	Data Type	i	2-byte integer	I	4-byte integer	f	4-byte float	F	8-byte float	c	Single-byte character
Format character	Data Type												
i	2-byte integer												
I	4-byte integer												
f	4-byte float												
F	8-byte float												
c	Single-byte character												

Message	Description
WM_VSM_INFO	Reserved.
WM_VSM_RETAIN_STATE_RESTART	Restarts with retained states. lp: Block handle
WM_VSM_SIM_RESTART	Signals restart due to continue or single step. lp: Block handle
WM_VSM_SNAP_STATE	Signals a user-request to snap system states; that is, set the initial condition to the current state value.
WM_VSM_STOP_SIM	Signals that VisSim has stopped, either by user or time expiration. wp: 1 if single step lp: Pointer to parameter vector
WM_VSM_SUPPRESS_WARN_UNCONNECT	Checks to suppress the unconnected input warning message. Return 1 if suppression is desired. wp: Port number (negative if output) lp: Block handle

Return flags for WM_VSM_CREATE

Flag	Description
VBF_HAS_STATE	Tells VisSim that block has state and can break an algebraic loop. VisSim calls this block once, before all other blocks, to present an initial condition; then the block is called during normal diagram execution.
VBF_USE_SIGNAL_DESCRIPTOR	Block input and output vector are vector of type SIGNAL (not double).
VBF_ALLOC_VEC_OUTPUT	Causes VisSim to automatically allocate output matrix for matrix input blocks.
VBF_EXECUTE_ALWAYS	Causes VisSim to execute the block regardless of graph connectivity.
VBF_ALLOW_VEC_CHAMELIONS	Causes connectors to accept scalar or vector connections.
VBF_STRAIGHT_WIRES	Causes wires to be drawn as straight lines rather than auto-routing.
VBF_MENU_ONLY	This is a menu item only and no block is created; however, the <i>userBlockEvent()</i> function is called. This flag is useful for menu select to dialog.

Parameter allocation function - *userBlockPA()*

The *userBlockPA()* function is called when you first enter a DLL file/function pair in the dialog box for the *userFunction* block, or when a diagram is first read into VisSim. **Note:** This call is no longer required if block menu insertion is used.

```
long PASCAL userBlockPA(short *ppCount)
```

This function returns the parameter storage requirements, in bytes, for the *userFunction* block, and the number of prompted parameters. If you want VisSim to prompt for parameter values, set *ppCount* to the desired number. The maximum value for *ppCount* is 12. You need to allocate eight bytes for each prompted parameter. You can request additional storage for a function's private use. This additional storage can be accessed as array elements of the parameter vector after the first *ppCount* elements.

When this function is not supplied, no parameter storage is allocated.

Parameter change function - *userBlockPC()*

The *userBlockPC()* function is called when you click the right mouse over the *userFunction* block.

```
char * PASCAL userBlockPC(double * param)
```

This function lets you change block parameters for the *userFunction* block. If you want to create a dialog box to browse and set parameter values, you can do so and return a NULL pointer. If you want VisSim to browse and set parameter values for you, you should return a pointer to a NULL terminated string. The string should contain semicolons to separate each parameter prompt. You may have up to 12 parameters using this default method of parameter setting.

Parameter initialization function - *userBlockPI()*

The *userBlockPI()* function is called at block creation time, either from the menu or a file, for parameter initialization. It lets you provide initial values for parameters.

```
void PASCAL userBlockPI(double * param)
```

This function is called immediately after the parameter allocation function *userBlockPA()*.

Simulation end function - *userBlockSE()*

The *userBlockSE()* function is called just after a simulation ends to perform post simulation processing.

```
void PASCAL userBlockSE(double param[], long * runCount)
```

Simulation start function - *userBlockSS()*

The *userBlockSS()* function is called just prior to the start of a simulation to perform initialization processing necessary for a simulation run.

```
void PASCAL userBlockSS(double param[], long * runCount)
```

Exported functions

The seven exported functions are described below.

General information request - `vissimRequest()`

The `vissimRequest()` function provides a general, extensible request mechanism for obtaining information from VisSim.

```
EXPORT32 long vissimRequest(long req, arg2, arg3);
```

The first argument (long req) is a message code describing the action for VisSim to take. The message codes that pertain to writing a custom block are as follows:

Message	Description
VR_DISABLE_BLOCK_TYPE	Removes block matching name string from Blocks menu. arg1: LPSTR name string
VR_EXECUTE	Runs diagram but doesn't change time (no integration).
VR_GET_BLOCK_PARAMS	Returns block parameter pointer. arg1: Block handle
VR_GET_CLEAR_BLOCK_ERR	Clears red error state on block. Uses currently executing block if block handle in arg1 is null. arg1: Block handle (opt.)
VR_GET_CONSTRAINTS	Gets constraint values arg1: Double * constraint
VR_GET_GLOBAL_CONSTRAINT_BOUNDS	Gets global constraint bounds. arg1: Double * upper bound arg2: Double * lower bound
VR_GET_GLOBAL_CONSTRAINTS	Gets global constraints. arg1: Double *
VR_GET_GLOBAL_COST	Gets global cost. arg1: Double * global cost
VR_GET_GLOBAL_OPT_INFO	Gets global optimization settings. arg1: OPT_INFO
VR_GET_GLOBAL_UNKNOWN_BOUNDS	Gets global unknown bounds. arg1: Double * upper bound arg2: Double * lower bound
VR_GET_GLOBAL_UNKNOWNNS	Gets global unknowns. arg1: Double *
VR_GET_GLOBAL_UNKNOWNNS_INPUT	Gets global unknown input. arg1: Double * global unknown initial condition

Message	Description
VR_GET_SOLVER_INFO	Gets settings from Implicit Solver tab in the Simulation Properties dialog box. arg1: Pointer to Implicit Solver
VR_GET_STARTUP_DIR	Returns VisSim directory string.
VR_GET_SUB_VERSION	Returns version letter suffix.
VR_GET_UNKNOWNNS	Gets unknown values. arg1: Double * unknowns
VR_GET_UNKNOWNNS_INPUT	Get unknown inputs. arg1: Double *
VR_GET_VERSION	Returns major version in high byte and minor version in low byte. arg1: SIM_INFO pointer
VR_GET_VISSIM_STATE	Gets current simulation state and copy to pointer in arg1.
VR_GET_WINDOW_HANDLE	Returns VisSim main window handle. Useful for model dialog creation.
VR_REALLOC_USER_PARAM	Reallocates parameter vector and returns newly reallocated pointer. arg1: Block handle arg2: New parameter size
VR_RESET_XFERS	For internal use only.
VR_SET_BLOCK_CONNECTOR_COUNT	Sets the connector count on the block. arg1: Block handle arg2: input # = upper word output # = lower word
VR_SET_BLOCK_MENU	Adds user-defined block to Blocks menu. arg1: Pointer to initialized USER_MENU_ITEM vector
VR_SET_CONNECTOR_CHAR	Sets indicator character on block connector. arg1: Character to set
VR_SET_CONNECTOR_LABEL	For internal use only.
VR_SET_GLOBAL_UNKNOWNNS	Sets global unknowns from supplied vector. arg1: Double * global unknown
VR_SET_UNKNOWNNS	Sets unknown values from user-supplied vector. arg1: Double * unknown
VR_SNAP_STATES	Causes VisSim to use current integrator/delay state as initial condition.

Get current simulation time - `getSimTime()`

This function stores the current simulation time in the double precision float variable pointed to by `simTime`.

```
EXPORT32 void PASCAL getSimTime( DOUBLE *simTime);
```

Get current simulation time step - `getSimTimeStep()`

This function stores the current simulation time step in the double precision float variable pointed to by `simTimeStep`.

```
EXPORT32 void PASCAL EXPORT getSimTimeStep( DOUBLE  
    *simTimeStep);
```

Print debug message - `debMsg ()`

This function prints a dialog box containing a debugging message. Because you can't perform normal screen I/O under Windows or Windows NT, VisSim provides `debMsg` to display information pertaining to the variables for your userFunction block's function. The format is identical to the C `printf()` function. Since this function allows an arbitrary number of arguments, it must be called using the C language convention. To call it from Fortran or Turbo Pascal, for example, you must declare it as C language code. VisSim displays the output string in a standard dialog box that contains a Retry, Ignore, and Abort button. Press Retry or Ignore to continue the simulation. Press Abort to cancel the simulation.

```
EXPORT32 int CDECL EXPORT debMsg P((char LPSTR fmt , ... ));
```

Request simulation end - `stopSimulation()`

This function requests that VisSim stop a simulation.

```
EXPORT32 void PASCAL EXPORT stopSimulation( int stopVal);
```

If `stopVal` is 1, the current simulation run is stopped. If you have activated the Auto Restart parameter under the Range tab in dialog box for the Simulate > Simulation Properties command, VisSim starts the next simulation run. If `stopVal` is 2, all simulation runs are stopped.

Flag error - `setBlockErr()`

This function requests that VisSim flag the currently executing block in red. All nested blocks will be flagged in red as well. To clear a flagged block, click the right mouse button on the block.

```
EXPORT32 void PASCAL EXPORT setBlockErr();
```

Add menu item - `setUserBlockMenu()`

This function adds a block (or menu item) to the VisSim menus.

```
EXPORT32 void EXPORT setUserBlockMenu P((USER_MENU_ITEM * ));
```

This functions recognizes one argument, which is a pointer to an array of structures. The structures define the menu name, DLL name, number of inputs, number of outputs, number of parameters, and help string. The format of the structure is as follows:

```
typedef struct {
    char * menuName;
    char * funcName;
    int inputCount;
    int outputCount;
    int paramCount;
    char * helpText;
} USER_MENU_ITEM;
```

You need one structure for every block (or menu item).

In addition, the last element in the array of structures that is passed back in must be {0}.

Debugging hints

The following guidelines will make it easier to debug your DLLs:

- MSVC lets you set a breakpoint in your DLL before running VisSim.
- Set VISSIM32.EXE as the calling program by choosing Build > Settings > Debug. This starts VisSim automatically when you press F5 (or choose Debug > Go).
- Use conditional breakpoints to get control near the problem area.
- Single-step with values in watch window to find problems.
- If your program hangs, press CTRL+ALT+PRTRSCRN (or choose Debug > Break) to return control to the debugger. This works best under Windows 95 and Windows NT.
- On Debug > Break or a General Protection Fault, use View > Stack Trace to find the location of the offending instruction.
- Floating point errors, if continued, often result in General Protection Fault that point to source line of floating point error.

Using the DLL wizard

If you want a quick way to generate the skeletal code for a custom block, you can use the DLL Wizard. The DLL Wizard takes you step by step through the process of creating a custom block in Microsoft C++ version 4+.

The DLL Wizard performs the following functions:


- Creates all the source files

- Creates the source and resource files
- Adds the source, resource, and VISSIM32.LIB files to the project file
- Specifies the number of inputs, outputs, connector label names for the custom block
- Adds sample code to generate a customizable MFC dialog box

To run the DLL Wizard


1. Start up the Microsoft Developer's Studio (version 4+).
2. Choose File > New.
3. Click on the Projects tab and do the following:
 - Select VisSim DLL Wizard.
 - In the Project Name box, enter a project name.
 - In the Location box, specify the directory in which the project is to be stored.
 - Click on the OK button, or press ENTER.

The VisSim DLL Wizard starts up and the following dialog box appears:

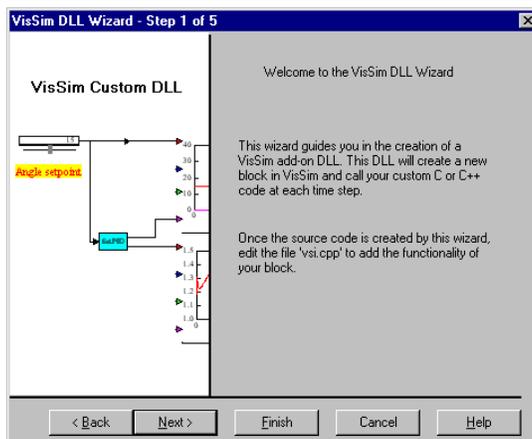

4. Click on the Next button, or press ENTER.

The following dialog box appears:

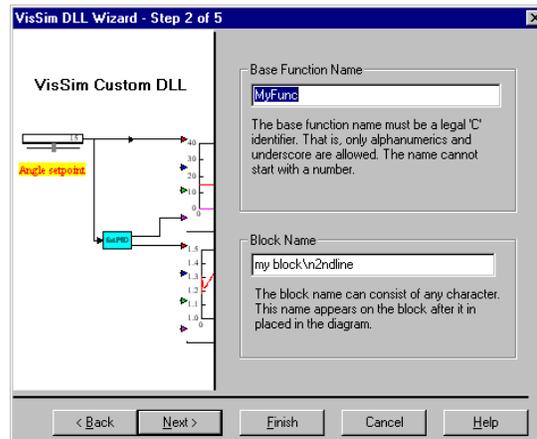


5. Do the following:

- In the Base Function Name box, enter the base name of the function. The name you enter here appears in the title bar of the dialog box that corresponds to the custom block you are creating.
- In the Block Name box, enter the name of the block. This name appears on the block. For long block names on blocks, you can display the name on two lines by separating the first line of text from the second line of text using the notation `\n`.

For consistency, the block name you specify here should also be used in [step 7](#).

- Click on the Next button, or press ENTER.


The following dialog box appears:

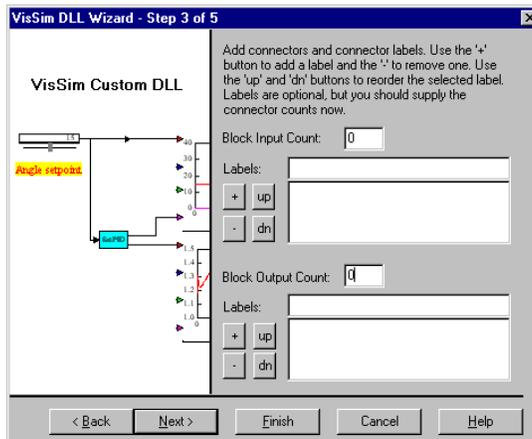

6. Do the following:

- In the Block Input Count box, enter the number of input connector tabs for the block.
- In the Block Output Count box, enter the number of output connector tabs for the block.
- If you want to assign labels to the connectors, see page 342.
- Click on the Next button, or press ENTER.

The following dialog box appears:

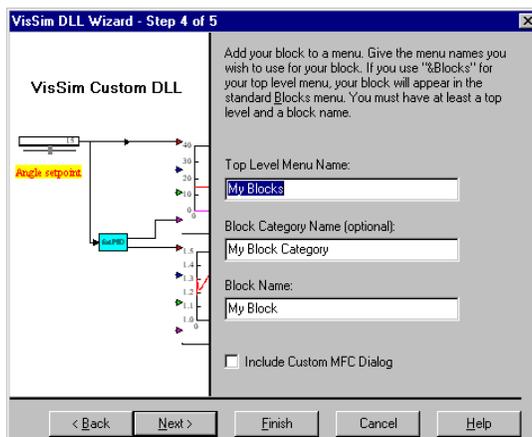


This dialog box lets you choose where your block will appear in VisSim's menus. Note that the block is not accessible from VisSim until after add the corresponding DLL to the VisSim initialization file, as described on page 343.

7. Do the following:


- In the Top Level Menu Name box, specify the name of the menu in VisSim's menu bar under which the category containing your block will appear. If you want to use the standard Blocks menu, enter &Blocks.
- In the Block Category Name box, specify the name of the category under which your block will appear. You can use an existing category name (for example, Linear Systems or Arithmetics) or you can enter a new name.
- In the Block Name box, specify the name of your block. For consistency, you should use the block name specified in [step 5](#).
- To generate a custom MFC dialog box for your block, activate the Include Custom Dialog Box option. For information on editing the resource file to customize the dialog box, see the appropriate Microsoft documentation.
- Click on the Next button, or press ENTER.

The following dialog box appears:

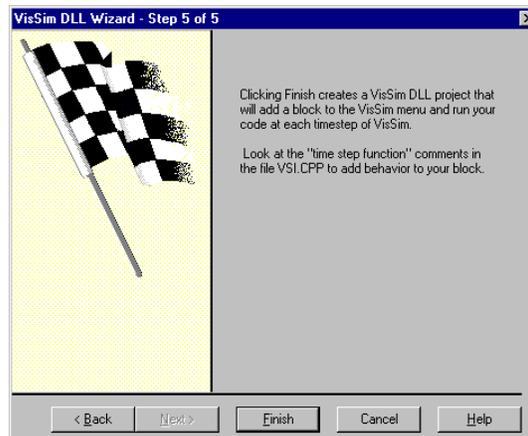

8. Click on the Finish button, or press ENTER.

The New Project Information dialog box appears with information about the newly-created VisSim-compatible DLL.

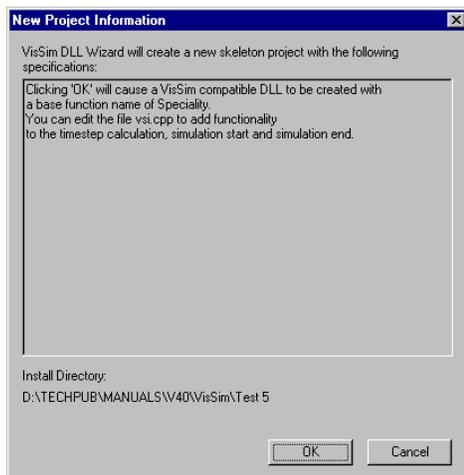

9. Click on the OK button, or press ENTER.
10. To build a DLL, do the following:
11. In the Microsoft Developer Studio window, choose Build > Build *projectname*.DLL, where *projectname* is the name specified in [step 3](#).

Editing the VSI.CPP file

The DLL Wizard creates a VSI.CPP file which contains the source C++ code for the DLL, as well as placeholders for simulation level functions and block level functions that you may use in your DLL. To edit VSI.CPP, start up the Microsoft Developer Studio and open VSI.CPP. For syntax rules for simulation and block level functions, see the page [327](#).

Editing Connector Tab Labels

The DLL Wizard lets you add, remove, and rearrange connector tab labels.

► To assign labels to connector tabs

1. In the Labels box, enter a label name.
2. Click on the  button.

► To remove labels from connector tabs

1. Highlight the label to be removed.

2. Click on the  button.

► **To change the order of the labels**

1. Highlight the label to be moved.
2. Click on the  or  button.

Accessing a custom block from VisSim

There are two ways to access a block from VisSim:

- Add the block to a VisSim menu
- Bind the DLL to a userFunction block

By adding a block to a VisSim menu, you make it easier to access and use the block. When you bind the DLL to a userFunction block,

Adding a custom block to a VisSim menu

Whether you created your custom block using the DLL Wizard or by writing it entirely by hand in C++, Pascal, or Fortran, you can easily add the block to a VisSim menu by following the procedure below.

If you wrote your DLL by hand (that is, you didn't use the DLL Wizard), make sure the DLL function:

- Exports the `vsmInit()` function
- Calls `setUserBlockMenu()` from within `vsmInit()`

► **To add a custom block to a VisSim menu**

1. In VisSim, choose Edit > Preferences.
2. Click on the Addons tab.
3. Double-click on the ellipsis (...) and type in the path to the DLL function, or click on the ... button to locate the DLL function. If you created the DLL function using the DLL Wizard, the DLL function will reside in the \DEBUG directory directly below the project directory.
4. Click on the OK button, or press ENTER.

Binding a DLL to a userFunction block

If you do not want your custom block to appear in a menu, you can bind the corresponding DLL to a `userFunction` block. VisSim calls the DLL each time the block is executed.

► To bind a DLL to a userFunction

1. Insert a `userFunction` block in your diagram.
2. Choose Edit > Block Properties.
3. Point to the `userFunction` block and click the mouse.
4. Do the following:
 - In the DLL File Name box, enter the name of the DLL file containing the user function.
 - In the Base Function Name box, enter the base name of the function.
 - Click on the OK button, or press ENTER.

Toolbox and Components Libraries

VisSim provides a wide range of toolbox functions and diagram components to further enhance your modeling and simulation capabilities. Because they are in .VSM file format, you can easily incorporate them into your diagrams using the File menu's Add command or the embed block.

Toolboxes

The toolbox libraries supplied with VisSim include functions for controls, electro-mechanical design, Padé approximations, and signal generation. VisSim also provides a toolbox library of miscellaneous functions (called Tools).

Controls toolbox library (V:\SSIM40\TOOLBOX\CONTROLS)

Toolbox function	Description
DERIV_A.VSM	Continuous derivative model
DERIV_D.VSM	Discrete derivative function
DIFFR.VSM	Discrete difference model
HYST_CTL.VSM	Hysteresis controller
HYSTER.VSM	Hysteresis function
LAG.VSM	General first order unity gain all pole low pass filter
LEAD.VSM	General first order lead unity gain compensator
P_CTL.VSM	Proportional (P) controller
PI_CTL.VSM	Proportional Integral (PI) controller
PID_CTL.VSM	Proportional Integral Derivative (PID) controller

Toolbox function	Description
RATE_LIM.VSM	Rate limited controller
RFB_CTL.VSM	Rate feedback controller
TF1_CONT.VSM	Continuous first order transfer function
TF1_DISC.VSM	Discrete first order transfer function
TF2_CONT.VSM	Continuous second order transfer function
TF2_DISC.VSM	Discrete second order transfer function
TRIM_INT.VSM	Trimmed integrator - finds initial state for zero derivative
ZINTBR.VSM	Digital integrator (backward rectangular)
ZINTFR.VSM	Digital integrator (forward rectangular)
ZINTTR.VSM	Digital integrator (trapezoidal)

Electro-mechanical toolbox library (\\VISSIM40\TOOLBOX\ELECHMECH)

Toolbox Function	Description
A2D.VSM	Analog-to-digital converter model with settable dT and bit length
ACDQ_MOT.VSM	Three-phase AC motor model utilizing DQ coordinate transformation
D2A.VSM	Digital-to-analog converter model with settable dT and bit length
DC_MOT.VSM	Armature controlled DC motor
ENCODER.VSM	Encoder model
MUX4.VSM	Four-channel multiplexer
PWM.VSM	Pulse wave modulation model

Padé toolbox library (\\VISSIM40\TOOLBOX\PADE)

Toolbox Function	Description
PADE1.VSM	First order Padé approximation to time delay
PADE2.VSM	Second order Padé approximation to time delay
PADE3.VSM	Third order Padé approximation to time delay
PADE4.VSM	Fourth order Padé approximation to time delay

Signal generation toolbox library (V\SSIM40\TOOLBOX\SIGGEN)

Toolbox Function	Description
3_PHASE.VSM	Three-phase sinusoidal signal generator
CAL_TIME.VSM	Simulation time in day, hour, minutes
DT.VSM	Simulation time in seconds
SAWTOOTH.VSM	Generates a sawtooth wave form
SQR_WAVE.VSM	Generates a square wave form
TRIANGLE.VSM	Generates a triangular wave form

Tools toolbox library (V\SSIM40\TOOLBOX\TOOLS)

Toolbox Function	Description
AVG_VAL.VSM	Average (mean) value estimator for periodic signals
COUNTER.VSM	Pulse counter
MAG_PHAS.VSM	Computes the magnitude ratio and phase margin between two input signals
MAX_VAL.VSM	Detects the high peak value every cycle of a periodic wave form
MIN_VAL.VSM	Detects the peak low value every cycle of a periodic wave form
PERIOD.VSM	Wavelength estimator for a periodic signal
PH_DIFF.VSM	Phase difference estimator
RMS.VSM	Computes the root mean square (RMS) value of a signal
SWEEP.VSM	Provides parameter sweep settings
VEC_ANLY.VSM	Amplitude - phase vector display

Components

The components libraries supplied with Professional VisSim include DSP, dynamical, electro-mechanical, electric, hydraulic, process control, thermal, and turbine components.

DSP library (\VISSIM40\COMPONENT\DSP)

Component	Description
CONVOLXI.VSM	Analytical and numerical solutions for an impulse response system
KFILT.VSM	Filter for estimating particle coordinates and velocity components
WAVELETS.VSM	Two-parameter wavelet generation

Dynamical system library (\VISSIM40\COMPONENT\DYNSSYS)

Component	Description
ANTENNA.VSM	Position control of flimsy antenna
REEL.VSM	Control of wire speed on a motor-controlled take-up reel
ROBEAM3.VSM	Reduced-order steady-state beam model

Electro-mechanical library (\VISSIM40\COMPONENT\ELECHMECH)

Component	Description
2DCMOTS.VSM	Two motors connected by a flexible belt
CRANE.VSM	Movement of a crane payload
HOIST.VSM	One mass nonlinear hoistway
STEPPER.VSM	Stepper motor for Variable Reluctance or Permanent Magnet types

Electrical library (\VISSIM40\COMPONENT\ELECTRIC)

Component	Description
POWERSUP.VSM	Two-diode, full-wave rectified DC power supply

Hydraulic libraries (\VISSIM40\COMPONENT\HYDRAULIC...)

ACTUATOR library

Component	Description
HYDMOTOR.VSM	Hydraulic motor
TWNCHMAC.VSM	Double-sided actuator

\INCLUDE library

Component	Description
GENDEFS.VSM	General definitions for hydraulic library

\MECHLOAD library

Component	Description
LINEAR.VSM	Linear mechanical load
ROTATNAL.VSM	Rotational mechanical load

\MINORLOS library

Component	Description
BEND.VSM	Fluid flow through a pipe bend
SUDCONTR.VSM	Sudden contraction of fluid due to an exit from a large chamber into a pipe
SUDEXPNS.VSM	Sudden expansion of fluid due to exit into a large chamber

\MISC library

Component	Description
MASSWLIM.VSM	Mass with limits
VOLUME.VSM	Capacitance volume effects

\ORIFICE library

Component	Description
ORIFICE.VSM	Flow through an orifice

\PIPE library

Component	Description
CONDUIT.VSM	Pressure gradient evaluation for laminar and turbulent flow through conduits

\POWRLOSS library

Component	Description
POWRLOSS.VSM	Power loss and temperature rise in fluid

\PUMPS library

Component	Description
POSDSPMP.VSM	Positive displacement pump
PRSCMPMP.VSM	Pressure compensated pump.

\SPLTMERG library

Component	Description
1ORFSPLT.VSM	Split one fluid stream into two (orifice at the exit on one of the outlet ports)
3WAYSPLT.VSM	Splits one fluid stream into three
MERGE.VSM	Merges two fluid streams into one
MERGE3LN.VSM	Merges three fluid streams into one and includes an orifice on the exit
MERGEALG.VSM	Joins two streams algebraically without introducing a pressure state
MRGALG3I.VSM	Joins three streams algebraically without introducing a pressure state
PLNMMERG.VSM	Merges two fluid streams into one and the downstream boundary condition is the flow rate
Component	Description
PLNMRG3L.VSM	Merges three fluid streams into one and the downstream boundary condition is the flow rate
PRSTRAN.VSM	Pressure transients in hydraulic conduits
SPLTWORF.VSM	Splits one fluid stream into two (orifice at the exit of each outlet port)

\VALVES library

Component	Description
REGLVALV.VSM	Pressure regulating valve
RELFVALV.VSM	Pressure relief valve

Process control library (\VISSIM40\COMPONENT\PROCESS)

Component	Description
BEER.VSM	Beer brewing model
CSTR.VSM	Simple continuous stirred tank reactor model
DISTIL.VSM	Binary distillation column
NISOTH.VSM	Non-isothermal continuous stirred tank reactor model

Thermal control library (\VISSIM40\COMPONENT\THERMAL)

Component	Description
HEATEXCH.VSM	Heat exchanger model

Turbine library (\VISSIM40\COMPONENT\TURBINE)

Component	Description
GT2.VSM	Twin spool gas turbine model

Sample Block Diagrams

VisSim comes with numerous block diagrams that cover a broad spectrum of applications and illustrate many of VisSim's fundamental design and simulation features. The sample block diagrams reside in the subdirectories under \VISSIM40\APPEXAMPL. This appendix describes the sample block diagrams provided by VisSim.

This subdirectory	Contains this type of diagram
\AEROSPAC	Aerospace diagrams
\ANIMATE	Animation diagrams
\BIOPHYS	Biophysical diagrams
\BUSINESS	Business diagrams
\CHEMENG	Chemical engineering diagrams
\CTRL_DES	Control design diagrams
\DYN_SYS	Dynamic system diagrams
\ELECTRO	Electro-mechanical diagrams
\ENVIRON	Environmental diagrams
\FIXPTDSP	Fixed Point DSP diagrams
\MMI	Man-machine interface diagrams
\MOTION	Motion control diagrams
\OPTIMIZE	Optimization diagrams
\POWER	Power system and component diagrams

This subdirectory	Contains this type of diagram
\PROCESS	Process control diagrams
\SIG_PROC	Signal processing diagrams
\STATCHRT	Logic diagrams and state machines

Aerospace block diagrams (\VISSIM40\APPEXAMPL\AEROSPAC)

Block diagram	Description
6DOF.VSM	Six degree of freedom simulation

Animation block diagrams (\VISSIM40\APPEXAMPL\ANIMATE)

Block diagram	Description
2LINK.VSM	Loose model of a two-link pendulum
PHYSBE.VSM	Physiological Simulation Benchmark Experiment that shows the bloodflow in the human body
ROCKET.VSM	Simulation of the trajectory of a ballistic missile

Biophysical block diagrams (\VISSIM40\APPEXAMPL\BIOPHYS)

Block diagram	Description
BIOREACT.VSM	Bio-reactor showing cell culture growth in a nutrient solution
PHYSBE.VSM	Physiological Simulation Benchmark Experiment that shows the bloodflow in the human body

Business block diagrams (\VISSIM40\APPEXAMPL\BUSINESS)

Block diagram	Description
CASHFLOW.VSM	Track cash flow within a manufacturing organization
WAGECHAO.VSM	Affect of changing interest rate on employment

Chemical engineering block diagrams (\VISSIM40\APPEXAMPL\CHEMENG)

Block diagram	Description
AMMONAB.VSM	Steady state absorption column where ammonia is recovered from an ammonia-air gas mixture by absorption into water, using a counter-current-packed column
BATCHD.VSM	n th order homogeneous liquid phase reaction in a batch tank reactor
BATEX.VSM	Single solution batch extraction
BATSEQ.VSM	Complex batch reaction sequence (can be used to study various reaction kinetics of interest simply by varying the rate constants)
BEAD.VSM	Diffusion and reaction in a spherical bead
BSTILL.VSM	Binary batch distillation column
CASTOR.VSM	Batch decomposition of acetylated castor oil to drying oil
CHAOS.VSM	Chaotic oscillatory behavior
CONSTILL.VSM	Continuous binary distillation column
CSTR.VSM	System of three continuous stirred tank reactors with first order isothermal reaction
CSTRCOM.VSM	Isothermal CSTR with complex reaction
DISRE.VSM	Dynamic behavior of a non-ideal isothermal tubular reactor to predict the variation of concentration with respect to both axial distance along the reactor and flow time
DISRET.VSM	Dispersion model of DISRE.VSM is extended for non-isothermal reactions to include the dispersion of heat from a first order reaction
DRY.VSM	Drying of solids by diffusion
EQEX.VSM	Simple equilibrium stage extractor
EXMULTI.VSM	Continuous equilibrium multistage extractor
GPJIF.VSM	Solution of partial differential equations
HEATEX.VSM	Shell and tube heat exchanger
HMT.VSM	Semi-batch manufacture of hexamethylenetriamine.
HOPFBIF.VSM	Hopf bifurcation
LORENZ.VSM	Random differential equation behavior
MCSTILL.VSM	Continuous multicomponent distillation column

Block diagram	Description
NOSTR.VSM	Non-ideal stirred tank reactor
ROD.VSM	Radiation from metal rod
TANKBLD.VSM	Liquid stream blending problem
TANKHYD.VSM	Two interacting tank reservoirs
THERM.VSM	First order, exothermic reaction in a continuous stirred-tank reactor, equipped with jacket cooling
TUBE.VSM	Tubular reactor, steady state design for an nth order reaction
TUBEMIX.VSM	Non-ideal tube-tank mixing system
TUBTANK.VSM	Comparison of steady state conversions for both continuous tank and tubular reactors for nth order reaction kinetics
TWOTANK.VSM	Two tank level control, where the level control of tank 2 is based on the regulation of the inlet flow to the tank 1

Control design block diagrams (VISSIM40\APPEXAMPL\CTRL_DES)

Block diagram	Description
PIDTUNE.VSM	PID control gain optimization
PLL_CTRL.VSM	Phase-locked loop servo that models a simple controller
RL_DES.VSM	Root locus design example
V_DERPOL.VSM	Van der Pol's nonlinear dynamical system

Dynamical systems block diagrams (VISSIM40\APPEXAMPL\DYN_SYS)

Block diagram	Description
BOUNCE.VSM	Bouncing ball and the dynamic exchange of data
CORNU.VSM	Cornu's spiral
LORENZ.VSM	Chaotic system based on the Lorenz attractor
MANUFACT.VSM	Manufacturing and product distribution organization
METER.VSM	Illustrates uses of the meter block
RAYLEIGH.VSM	Rayleigh equation for bubble growth in super heated liquids
ROCKET.VSM	Rocket dynamics
SOMBRERO.VSM	Parameter sweep for Sombrero function
SPRING.VSM	Simple, second-order, damped harmonic system
STUKBLOK.VSM	Motion with static coulomb stiction

Electro-mechanical block diagrams (\\VISSIM40\\APPEXAMPL\\ELECTRO)

Block diagram	Description
ACMOTOR.VSM	Three-phase AC motor system that plots motor speed and torque against time
DCMOTOR.VSM	GAE 12 amp micro-torque motor response curve under mild loading conditions
DOORSYS.VSM	Digitally controlled electro-mechanical door system
FLEXLOAD.VSM	Response of a DC motor and gearbox with deadband to a flexible load
FW_RECT.VSM	Full wave rectifier test case
SM_1PH.VSM	Stepper motor system

Environmental block diagrams (\\VISSIM40\\APPEXAMPL\\ENVIRON)

Block diagram	Description
BIOREACT.VSM	Bio-reactor showing cell culture growth in a nutrient solution
ROOMCTRL.VSM	HVAC model of a single-room cooling system with on/off thermostat

Fixed-point DSP block diagrams (\\VISSIM40\\APPEXAMPL\\FIXPTDSP)

Block diagram	Description
FILTDESN.VSM	Unit delay filter implementation
SCALE.VSM	Simulation of numerical overflow in fixed-point DSP

Man-machine interface block diagrams (\\VISSIM40\\MMI)

Block diagram	Description
MORE_PLT.VSM	Moore control panel
PIDPLATE.VSM	PID control panel

Motion control block diagrams (\\VISSIM40\\MOTION)

Block diagram	Description
PACDEMO.VSM	Pacific Scientific motion control demo
QUADCODE.VSM	Quadrature encoding

Optimization block diagrams (\VISSIM40\APPEXAMPL\OPTIMIZE)

Block diagram	Description
2POINT.VSM	Classic two-point value problem using cost and parameterUnknown blocks
LC_FIND.VSM	Illustrates the use of constraint and unknown blocks to determine initial conditions of integrators
PIDTUNEZ.VSM	Optimization of a second order plant with a first order controller using cost and parameterUnknown blocks
ROOTS.VSM	Illustrates the use of constraint and unknown blocks to find one of the roots of a quadratic equation

Power block diagrams (\VISSIM40\APPEXAMPL\POWER)

Block diagram	Description
INVERTER.VSM	Inverter
PSV_TRBN.VSM	Gas turbine simulation

Process control block diagrams (\VISSIM40\APPEXAMPL\PROCESS)

Block diagram	Description
CSTRS.VSM	Simulation of a set of three isothermal continuous stirred tank reactors in a series
POWPLANT.VSM	Power plant simulation
ROOMCTRL.VSM	Room temperature controller
VALVE.VSM	Simulates a mechanical valve with finite actuation time

Signal processing block diagrams (\\VISSIM40\APPEXAMPL\SIG_PROC)

Block diagram	Description
ANL_PLL.VSM	Analog phase-locked loop system
DIG_PLL.VSM	Digital phase-locked loop system
FILTTEST.VSM	Illustrates filter design capabilities
F_SERIES.VSM	Fourier series problem
PWM_EX.VSM	Pulse width modulation of a sinusoidal signal

Logic diagrams and state machines (\\VISSIM40\APPEXAMPL\STATCHRT)


















Block diagram	Description
LOG_EX1.VSM	Counter and reset counter implementation
LOGICBLK.VSM	Logic and timing blocks
ONESHOT.VSM	Simulation of a “one shot”
PIDPAPER.VSM	PID controller logical simulation
STATEM1.VSM	State machine demo









Working with Bitmaps





Pictures, or graphical images, can be configured on many VisSim blocks to enhance the visual representation of a block diagram. They can also be used to create animated simulations.











VisSim provides a Bitmap library containing a wide range of motion and process control pictures. The library is installed in `\VISSIM40\BITMAPS\DIAGRAM`. If the library does not contain a picture you need, you can always create one using any of the numerous drawing and icon creation packages that run under Windows. When you create pictures, follow these simple guidelines:












- Save the pictures in .BMP file format
- To avoid screen clutter, create pictures no larger than $\frac{3}{4}$ " by $\frac{3}{4}$ "

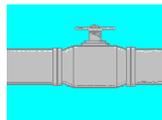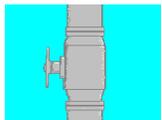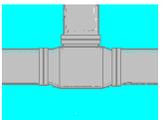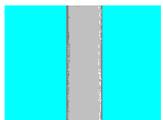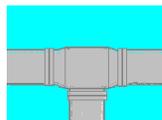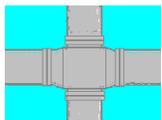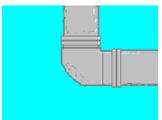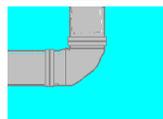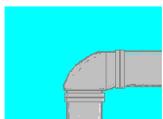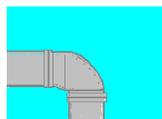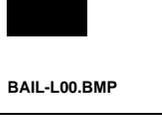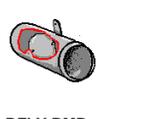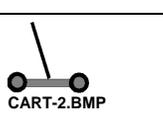
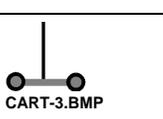
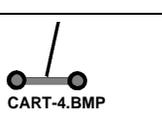
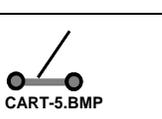
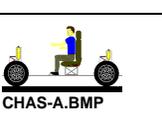
				
3D-BUT1.BMP	3D-BUT2.BMP	B-PIPE01.BMP	B-PIPE02.BMP	B-PIPE03.BMP
				
B-PIPE04.BMP	B-PIPE05.BMP	B-PIPE06.BMP	B-PIPE07.BMP	B-PIPE08.BMP
				
B-PIPE09.BMP	B-PIPE10.BMP	B-PIPE11.BMP	BAIL-00.BMP	BAIL-01.BMP
				
BAIL-02.BMP	BAIL-03.BMP	BAIL-04.BMP	BAIL-05.BMP	BAIL-06.BMP
				
BAIL-07.BMP	BAIL-08.BMP	BAIL-L00.BMP	BAIL-L01.BMP	BAIL-L02.BMP
				
BAIL-PAN.BMP	BFLY.BMP	BLU-TANK.BMP	CAR.BMP	CART-1.BMP
				
CART-2.BMP	CART-3.BMP	CART-4.BMP	CART-5.BMP	CHAS-A.BMP
				
CHAS-B.BMP	CHASI.BMP	CLRDN.BMP	CO-AXIAL.BMP	COMPRESS.BMP

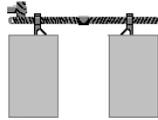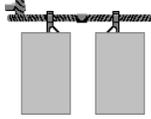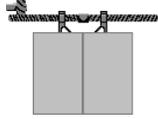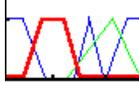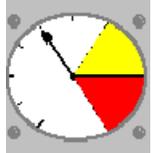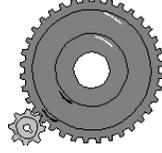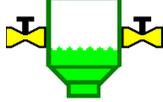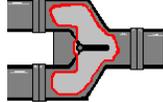 COOLCOIL.BMP	 DANGER.BMP	 DISH-R.BMP	 DISH.BMP	 DOOR1.BMP
 DOOR2.BMP	 DOOR3.BMP	 EAR.BMP	 EVAP.BMP	 FAIL.BMP
 FIBEROPT.BMP	 Notch FILNOTCH.BMP	 Band Pass FILTR_BP.BMP	 High Pass FILTR_HP.BMP	 Low Pass FILTR_LP.BMP
 FUZZY RULES FUZZY.BMP	 GAUGE.BMP	 GEARS-A.BMP	 GEARS-B.BMP	 GEARS-C.BMP
 GEARS-D.BMP	 GEARS-E.BMP	 GEARS-F.BMP	 GEARS-G.BMP	 GEARS-H.BMP
 GEARS-I.BMP	 GRN-TANK.BMP	 HEART-A.BMP	 HEART-B.BMP	 HEART-C.BMP
 HEATCOIL.BMP	 HIGHWIRE.BMP	 HORN1.BMP	 HORN2.BMP	 MIXER.BMP

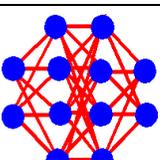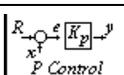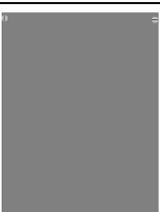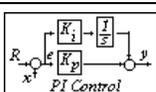 MOORE-00.BMP	 MOORE-01.BMP	 MOORE-02.BMP	 MOORE-03.BMP	 MOORE-04.BMP
 MOORE-05.BMP	 MORE-L01.BMP	 MORE-L02.BMP	 MORE-M-P.BMP	 MORE-M-S.BMP
 MORE-M-V.BMP	 MORE-M-X.BMP	 MORE-M-Y.BMP	 MORE-M00.BMP	 MORE-PAN.BMP
 MORE-SWT.BMP	 MORE-U00.BMP	 MORE-U01.BMP	 MORE-U02.BMP	 MORE-U03.BMP
 MORE-U04.BMP	 MORE-U05.BMP	 MORE-U06.BMP	 MORE-U07.BMP	 MORE-U08.BMP
 MORE-U09.BMP	 NNET.BMP	 NORM.BMP	 P_CTL_BW.BMP	 P_CTL.BMP
 PANEL-BG.BMP	 PANEL.BMP	 PASS.BMP	 PLC_BW.BMP	 PI_CTL.BMP

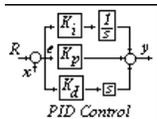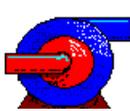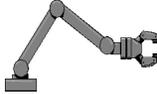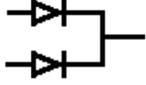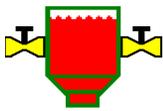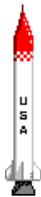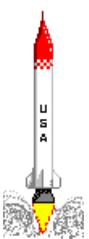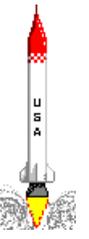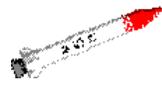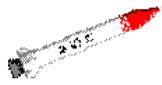 <p>PID Control</p> <p>PIC_C-BW.BMP</p>	 <p>PID Control</p> <p>PIC_CTL.BMP</p>	 <p>PUMP-LQD.BMP</p>	 <p>PUMP.BMP</p>	 <p>Q.BMP</p>
 <p>R-ARM.BMP</p>	 <p>Rectifier</p> <p>RECTIFI.BMP</p>	 <p>RED-TANK.BMP</p>	 <p>ROCKT-1.BMP</p>	 <p>ROCKT-10.BMP</p>
 <p>ROCKT-11.BMP</p>	 <p>ROCKT-12.BMP</p>	 <p>ROCKT-A1.BMP</p>	 <p>ROCKT-2.BMP</p>	 <p>ROCKT-2A.BMP</p>
 <p>ROCKT-3.BMP</p>	 <p>ROCKT-3A.BMP</p>	 <p>ROCKT-4.BMP</p>	 <p>ROCKT-4A.BMP</p>	 <p>ROCKT-4B.BMP</p>
 <p>ROCKT-5.BMP</p>	 <p>ROCKT-5A.BMP</p>	 <p>ROCKT-6.BMP</p>	 <p>ROCKT-6A.BMP</p>	 <p>ROCKT-6B.BMP</p>

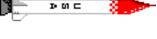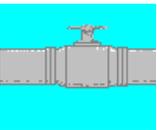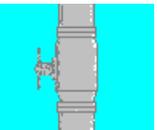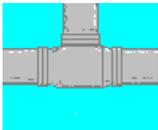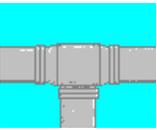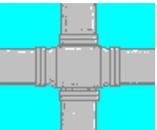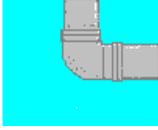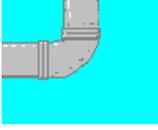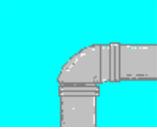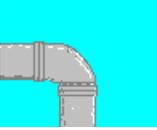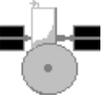				
ROCKET-7.BMP	ROCKET-7A.BMP	ROCKET-7B.BMP	ROCKET-7C.BMP	ROCKET-8.BMP
				
ROCKET-8A.BMP	ROCKET-9.BMP	ROCKET-9A.BMP	ROCKET-SD.BMP	ROCKET10A.BMP
				
	ROCKET11A.BMP	ROCKET12A.BMP	S-PIPE01.BMP	S-PIPE02.BMP
				
S-PIPE03.BMP	S-PIPE04.BMP	S-PIPE05.BMP	S-PIPE06.BMP	S-PIPE07.BMP
				
S-PIPE08.BMP	S-PIPE09.BMP	S-PIPE10.BMP	S-PIPE11.BMP	SAT.BMP
				
SD-AUTO.BMP	SD-MAN.BMP	SENSOR SENSOR-H.BMP	SENSOR SENSOR-L.BMP	SENSOR SENSOR.BMP
				
SERVER.BMP	SHUTDWN0.BMP	SHUTDWN2.BMP	SLIDER-1.BMP	SLIDER-2.BMP

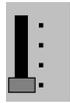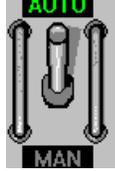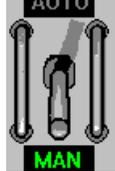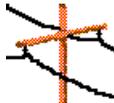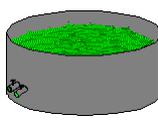				
SLIDER-3.BMP	SLIDER-4.BMP	SW-AUTO.BMP	SW-IND1.BMP	SW-IND2.BMP
				
SW-LON.BMP	SW-MAN.BMP	SW-TOGG1.BMP	SW-TOGG2.BMP	TANK-BEZ.BMP
				
TANK-SM.BMP	TELEPOLE.BMP	THERM-BG.BMP	TIRE-ONL.BMP	TIRE.BMP
				
TIRE1.BMP	TIRE2.BMP	TRANS-M.BMP	TRANS.BMP	VALVE-H.BMP
				
VALVE.BMP	VAT.BMP	VENT.BMP		

VisSim Viewer

VisSim Viewer is a run-time version of VisSim that allows you to distribute your block diagram models to end users not licensed to use VisSim. VisSim Viewer provides end users with all the features and capabilities of VisSim, with the following exceptions:

- It will not let end users create new block diagrams
- It will not let end users add, delete, or reposition block, or change wiring paths in the diagrams they view

Distributing VisSim Viewer and your block diagrams to end users

As a licensed user of Professional VisSim, you are granted a royalty-free right to reproduce and distribute up to 100 copies of VisSim Viewer, as described under the terms of the [VisSim Viewer Distribution License Agreement](#), at the end of this appendix. Please take a minute to review this agreement.

► To distribute VisSim Viewer

1. Copy VSVIEWER.EXE from your VisSim main directory to another disk.
2. Copy your diagram files to the copied VisSim Viewer disk or another disk.
3. Include printed copies of the following sections of this appendix with the VisSim Viewer: “VisSim Viewer documentation,” “Installing and starting VisSim Viewer,” and “VisSim Viewer End User License Agreement.”

VisSim Viewer documentation

The *VisSim Viewer User's Guide* has been formatted as a Microsoft Write file named VIEWER.WRI and is included on the VisSim Viewer disk. End users should

make a printed copy of this file as soon as they install VisSim Viewer on their computers. VIEWER.WRI contains information on:

- Installing, starting, and quitting VisSim Viewer
- Basic windowing techniques
- Using online help

It also provides tutorial lessons that cover:

- Loading, viewing, simulating, and optimizing a block diagram
- Observing simulation results using plot and stripChart blocks
- Printing block diagrams, plots, and strip charts
- Copying block diagrams to other applications
- Saving files

Installing and starting VisSim Viewer

Before installing VisSim Viewer, end users should check that their computers meet the following minimum configuration:

- Microsoft Windows 95 or higher
- EGA or higher resolution monitor
- At least 1 MB hard disk space
- At least 1 MB RAM with 256K configured as extended memory

► To install VisSim Viewer

1. Start Windows.
2. Insert the VisSim Viewer disk into the floppy drive.
3. Do one of the following:

For this platform	Do this
Windows 95 or Windows NT	Select Start and choose the Run command.
Windows 3.1	Select File from the Program Manager menu bar and choose the Run command.

4. In the Command Line box, type a:install or b:install, and click on OK.

At the completion of the installation, Install builds a VisSim group window with a VisSim Viewer icon inside it. To start VisSim Viewer, double-click on the VisSim Viewer icon.

VisSim Viewer End User License Agreement

This is a legal agreement between you, the end user, and Visual Solutions, Incorporated ("VSI"). BY OPENING THIS SEALED DISK PACKAGE AND USING THE SOFTWARE, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE UNOPENED DISK PACKAGE AND THE ACCOMPANYING ITEMS TO THE PLACE YOU OBTAINED THEM FOR A FULL REFUND. THIS AGREEMENT IS SEPARATE FROM ANY AGREEMENT BETWEEN YOU AND THE SUPPLIER OF ANY ACCOMPANYING .VSM OR OTHER FILES.

1. **OWNERSHIP OF THE SOFTWARE.** The enclosed VSI software program ("SOFTWARE") and the accompanying written materials are owned by VSI or its suppliers and are protected by United States copyright laws and international treaty provisions and all other applicable national laws. Therefore, you must treat the SOFTWARE like any other copyrighted material (e.g., a book or musical recording) except that if the SOFTWARE is not copy protected, you may either (a) make one copy of the SOFTWARE solely for backup or archival purposes, or (b) transfer the SOFTWARE to a single hard disk, provided you keep the original solely for backup or archival purposes. You may not copy the written materials accompanying the SOFTWARE.
2. **GRANT OF LICENSE.** VSI grants to you the right to use one copy of the enclosed SOFTWARE on a single computer. The SOFTWARE is in "use" on a computer when it is loaded into temporary memory (i.e., RAM) or installed into permanent memory (e.g., hard disk, CD-ROM, or other storage device) of that computer. You may network the SOFTWARE, provided you have a separate license for each computer at which the SOFTWARE is used.
3. **OTHER RESTRICTIONS.** You may not rent or lease the SOFTWARE, but you may transfer the SOFTWARE and accompanying written materials on a permanent basis, provided you retain no copies and the recipient agrees to the terms of this Agreement. You may not reverse engineer, decompile, or disassemble the SOFTWARE. If the SOFTWARE is an update or has been updated, any transfer must include the update and all prior versions.
4. **LIMITED WARRANTY.** VSI warrants that the SOFTWARE will perform substantially in accordance with the accompanying written materials for a period of 90 days from the date of your receipt of the SOFTWARE. Any implied warranties on the SOFTWARE are limited to 90 days. Some states do not allow limitations on duration of an implied warranty, so the above limitation may not apply to you. VSI makes no warranties concerning .VSM files or other software supplied by other companies.
5. **CUSTOMER REMEDIES** VSI'S ENTIRE LIABILITY AND YOUR EXCLUSIVE REMEDY SHALL BE, AT VSI'S CHOICE, EITHER (A) RETURN OF THE PRICE PAID OR (B) REPLACEMENT OF THE SOFTWARE THAT DOES NOT MEET VSI'S LIMITED WARRANTY AND WHICH IS RETURNED TO VSI WITH A COPY OF YOUR RECEIPT. Any replacement SOFTWARE will be warranted for the remainder of the original warranty period or 30 days, whichever is longer. These remedies are not available outside the United States of America.
6. **NO OTHER WARRANTIES** VSI DISCLAIMS ALL OTHER WARRANTIES, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT, WITH RESPECT TO THE SOFTWARE AND THE ACCOMPANYING WRITTEN MATERIALS. This limited warranty gives you specific legal rights. You may have others, which vary from state to state.
7. This Limited Warranty is void if failure of the SOFTWARE has resulted from modification, accident, abuse, or misapplication.
8. **NO LIABILITY FOR CONSEQUENTIAL DAMAGES** IN NO EVENT SHALL VSI OR ITS SUPPLIERS BE LIABLE FOR ANY OTHER DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF OR INABILITY TO USE THIS VSI PRODUCT, EVEN IF VSI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, VSI'S ENTIRE LIABILITY UNDER ANY PROVISION OF THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THIS SOFTWARE. Because some states do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitations may not apply to you.
9. This Agreement is governed by the laws of the State of Massachusetts, U.S.A.
10. Should you have any questions concerning this Agreement, or if you desire to contact VSI for any reason, please write: Visual Solutions, Inc., 487 Groton Rd., Westford, Massachusetts 01886.
11. **U.S. GOVERNMENT RESTRICTED RIGHTS** The SOFTWARE and accompanying written materials are provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of The Rights in Technical Data And Computer Software clause at 52.227-7013. Contractor/manufacturer is Visual Solutions, Inc./487 Groton Rd./Westford, MA 01886.

VisSim Viewer Distribution Agreement

This is a legal agreement between you, a licensed owner of Professional VisSim or the VisSim Viewer software package and Visual Solutions. Visual Solutions grants you a royalty-free right to reproduce and distribute 100 copies of VisSim Viewer provided that you: (a) distribute VisSim Viewer only in conjunction with and as a part of your block diagram(s); (b) do not require the use of VisSim companion products (See “Additional Grant of License”); (c) do not use Visual Solutions’ name, logo, or trademarks to market your block diagram(s); (d) legally acknowledge Visual Solutions’ copyrights and trademarks where applicable; and (e) agree to indemnify, hold harmless, and defend Visual Solutions and its suppliers from and against any claims or lawsuits, including attorney fees that arise or result from the use or distribution of your block diagram(s).

Additional Grant of License: If, to use your block diagram(s), VisSim Viewer end users require the use of one or more VisSim companion products, call your Visual Solutions Sales Representative for product re-sale terms and restrictions.

Index

!= (not equal to) block, 200
 button, 57, 58
\$firstPass variable, 178
\$lastPass variable, 178
\$randomSeed variable, 42, 178
\$runCount variable, 178
\$timeStart, 178
\$timeStep variable, 178
\$timeStop, 178
* (multiply) block, 190
/ (divide) block, 193
/ block, 20
< block, 195
<= block, 196
== (equal to) block, 197
> block, 201
>= block, 203
1/S block, 243, 253, 279
1/X (inverse) block, 204
1/X block, 20
1/Z block (unitDelay), 54, 305

A

abs block, 20, 205
accessing custom blocks, 343
acos block, 207
ActiveX control requirements, 125
ActiveX functions
 getIpcValue, 129
 setIpcValue, 129
ActiveX read block, 125, 207
ActiveX write block, 127, 207
adaptive Bulirsh-Stoer algorithm, 40
adaptive Runge Kutta 5th algorithm, 40
Add (File), 174
Add Connector (Edit), 23
add menu item function, 336
adding block diagrams, 174
aerospace block diagrams, 354
alarms, audio and visual, 250
algebraic loops, 61, 90
aligning blocks, 31
analog filter prototypes, 107–8
and block, 208
animate block, 209
 applying pictures, 85
 creating animation, 85
 example, 83
animation, 83–88
 faceplates, 213
 hit testing, 216
animation block diagrams, 354
Animation blocks
 animate, 84–87, 209
 lineDraw, 87–88, 256
Annotation blocks
 bezel, 213
 comment, 220
 date, 227
 index, 241
 label, 249
 scalarToVec, 285
 variable, 174–78, 309
 vecToScalar, 309
 wirePositioner, 310
Arithmetic blocks
 * (multiply), 190
 / (divide), 193
 1/X (inverse), 204
 abs, 205
 convert, 222
 gain, 237
 pow, 272
 sign, 286
 summingJunction, 293
 unitConversion, 305
 -X (negate), 191
arithmetic expressions, entering, 18
asin block, 209
atan2 block, 210
Auto Dialog boxes, 163
 activating, 165
 complex, 168
 example, 166
auto-panning, 4

B

- backward Euler (Stiff) algorithm, 40
- band specifications, 111
- bar graphs, 81–83
- bessel block, 211
- Bessel filters, 107, 108
- bezel block, 213
- biophysical block diagrams, 354
- bitmap library, 361
- bitmaps, resetting, 171
- block diagrams
 - adding, 174
 - aerospace, 354
 - animation, 354
 - annotating, 220, 227, 249
 - biophysical, 354
 - business, 354
 - chemical engineering, 355
 - control design, 356
 - copying to other applications, 31
 - creating, 7
 - DSP, 357
 - dynamical systems, 356
 - electro-mechanical, 357
 - embedding, 173
 - environmental, 357
 - logic, 359
 - motion, 357
 - opening, 10
 - optimization, 358
 - power, 358
 - previewing, 12
 - printing, 11–13
 - process control, 358
 - protecting, 183–85
 - samples, 354–57
 - saving, 11
 - setting up, 7
 - signal processing, 359
 - state machines, 359
 - statistics, 182
 - viewing, 316
- Block Labels (View), 19, 317
- block level functions
 - userBlock()*, 329
 - block level functions (*cont.*)
 - userBlockEvent()*, 330
 - userBlockPA()*, 333
 - userBlockPC()*, 333
 - userBlockPI()*, 333
 - userBlockSE()*, 333
 - userBlockSS()*, 333
 - block properties
 - arithmetic expressions, 18
 - C expressions, 18
 - numeric data, 18
 - precision control, 18–19
 - setting up, 17–18
 - Block Properties (Edit), 17
- blocks
 - != (not equal to), 200
 - * (multiply), 190
 - /, 20
 - / (divide), 193
 - <, 195
 - <=, 196
 - == (equal to), 197
 - >, 201
 - >=, 203
 - 1/X (inverse), 20, 204
 - abs, 20, 205
 - acos, 207
 - ActiveX read, 125, 207
 - ActiveX write, 127, 207
 - aligning, 31
 - and, 208
 - animate, 84–87, 209
 - asin, 209
 - atan2, 210
 - bessel, 211
 - bezel, 213
 - buffer, 21, 214
 - button, 216
 - case, 21, 218
 - changing text attributes, 317
 - comment, 220
 - compound, 161
 - connector tabs. *See* connector tabs
 - const, 221
 - constraint, 89, 222

blocks (*cont.*)

convert, 20, 222
 copying, 28–31
 cos, 223
 cosh, 224
 cost, 95, 224
 crossDetect, 224
 custom, 16, 343
 date, 227
 DDE, 135–38, 228
 DDEreceive, 131–33, 228
 DDEsend, 133–35, 228
 deadband, 228
 deleting, 34
 derivative, 229
 dialogConstant, 164, 229
 display, 21, 230
 dotProduct, 21, 231
 embed, 173, 186, 231
 error, 231
 exp, 232
 export, 118–20, 232
 expression, 232
 extensibility, 308, 325–43
 fft, 21, 235
 finding, 32–34
 flipping, 31
 gain, 20, 237
 gaussian, 239
 globalConstraint, 239
 histogram, 79–80, 239
 ifft, 21, 240
 import, 115–18, 241
 index, 20, 241
 inserting, 15
 int, 243
 integrator (1/S), 53, 243
 inverse, 21
 invert, 249
 label, 249
 labeling, 19
 light, 250
 limit, 252
 limitedIntegrator (1/S), 253
 lineDraw, 87–88, 256

blocks (*cont.*)

ln, 257
 log10, 256
 map, 143, 257
 MatLab Expression, 20, 121, 258
 MatLab Read Variable, 20, 123, 258
 MatLab Write Variable, 20, 124, 258
 max, 258
 merge, 21, 260
 meter, 81–83, 261
 min, 261
 moving, 28–31
 multiply, 21, 263
 neuralNet, 264
 not, 264
 OLEobject, 265
 or, 270
 parabola, 271
 parameterUnknown, 95, 271
 plot, 63–73, 272
 pow, 272
 power, 20
 PRBS, 273
 properties. *See* block properties
 psd, 274
 pulseTrain, 275
 quantize, 275
 ramp, 277
 realTime, 278
 relay, 278
 replacing, 32–34
 resetIntegrator (1/S), 279
 rt-DataIn, 282
 rt-DataOut, 283
 sampleHold, 283
 scalarToVec, 20, 285
 selecting, 27
 setting up. *See* block properties
 sign, 20, 286
 sin, 287
 sinh, 288
 sinusoid, 288
 slider, 289
 sqrt, 290
 stateSpace, 54, 56, 290

- blocks (*cont.*)
 - step, 292
 - stop, 293
 - stripChart, 73–79, 293
 - summingJunction, 20, 293
 - tan, 295
 - tanh, 296
 - timeDelay, 297
 - transferFunction, 50, 54, 56, 105, 106, 300
 - transpose, 21, 304
 - types, 16
 - uniform, 304
 - unitConversion, 20, 305
 - unitDelay (1/Z), 54, 104, 305
 - unknown, 89, 308
 - userFunction, 308, 325–43
 - user-written, 325–43. *See* userFunction block
 - variable, 20, 175, 309
 - vecToScalar, 20, 309
 - vsum, 21, 309
 - wirePositioner, 20, 310
 - wiring. *See* wiring blocks
 - X (negate), 20, 191
 - xor, 310
 - Blocks menu, 189. *See also* individual blocks
 - adding blocks to, 343
 - Boolean blocks
 - !=, 200
 - <, 195
 - <=, 196
 - ==, 197
 - >, 201
 - >=, 203
 - and, 208
 - not, 264
 - or, 270
 - xor, 310
 - buffer block, 21, 214
 - built-in variables, 178
 - business block diagrams, 354
 - Butterworth filters, 107, 108
 - button block, 216
- C**
- C expressions, entering, 18
 - case block, 21, 218
 - Chebyshev filters, 107, 108
 - check boxes, 6
 - checkpointing simulations, 41
 - checkpointing system states, 244, 254, 280, 306, 330
 - chemical engineering block diagrams, 355
 - choosing commands, 4
 - Clear (Edit), 34
 - Clear Errors (Edit), 59
 - Close button, 2
 - closed-loop system, 46–50
 - coloring
 - plotting background, 317
 - screen display, 317
 - text, 317
 - window, 317
 - wires, 317
 - Colors (View), 22, 317
 - command buttons, 6
 - comment block, 220
 - retaining character format, 317
 - component libraries
 - DSP, 348
 - dynamical systems, 348
 - electrical systems, 348
 - electro-mechanical systems, 348
 - hydraulic systems, 349–50
 - process control, 351
 - thermal control, 351
 - turbine, 351
 - compound blocks
 - Auto Dialog boxes, 163
 - basics, 161
 - coloring, 317
 - configuring pictures on, 171
 - connector labels, 171, 317
 - connector tabs, 162
 - containing global variables, 178
 - creating, 162, 173
 - dissolving, 172
 - drilling, 163
 - embedding, 173
 - hiding, 170
 - local time steps, 170

- compound blocks (*cont.*)
 - protecting, 185–86
 - resetting bitmaps, 171
 - selecting, 27
 - statistics, 170
 - triggering execution of, 169
- Connector Labels (View), 171, 317
- connector tabs, 20
 - adding and removing, 23, 330
 - coloring, 316
 - connection class, 24
 - in display mode, 25
 - in presentation mode, 25
 - labels, 171, 317
 - manipulating, 23
 - on compound blocks, 162
 - probing, 59
 - restricting access, 25
 - symbols, 23, 25
 - unconnected inputs, 24
- const block, 221
- constraint block, 89, 222, 224
- Continue (Simulate), 57
- continuous simulations, 46–53
 - spring-damper arm, 46–50
 - spring-damper arm with external force example, 52–53
- continuous time transfer function, 50–53
- control design block diagrams, 356
- Control Panel (View), 56–57
- controls toolbox functions, 345
- convert block, 20, 222
- Copy (Edit), 30
- copying, character formatting, 317
- copying block diagrams, to other applications, 31
- copying blocks
 - drag-and-drop editing, 29
 - rules, 29
 - with Clipboard, 30
- cos block, 223
- cosh block, 224
- cost block, 95
- cost function, 95
- Create Compound Block (Edit), 162, 173
- crossDetect block, 224
- Cut (Edit), 30
- cutting and pasting blocks
 - rules, 29
 - with Clipboard, 30
 - with drag-and-drop, 29
- D**
- .DAT files
 - exporting, 232
- data I/O, 232
- Data Types (View), 316
- date block, 227
- DDE
 - creating links, 130
 - editing a link address, 138
 - linking from another app, 131–33
 - linking to another app, 133–35
 - two-way links, 135–38
- DDE block, 135–38, 228
- DDE blocks
 - DDE, 135–38, 228
 - DDEreceive, 131–33, 228
 - DDEsend, 133–35, 228
- DDEreceive block, 131–33, 228
- DDEsend block, 133–35, 228
- deadband block, 228
- definition and below scope, 176, 177
- degMsg(), 336
- deleting blocks, 34
- derivative block, 229
- Diagram Information (File), 182, 183
- diagram scope, 176, 177
- diagram tree
 - expand and collapse, 4
 - jump to location, 4
 - resizing, 4
- dialog boxes, 6–7
 - missing, 5
- dialogConstant block, 164, 229
- difference equations, 54
- differential equations, 46–50
 - converting to integration, 46
- Differentiators, 110
- digital filters. *See* filter design
- discrete MIMO systems, 54

- discrete time simulations, 54–55
 - entering difference equations, 54
 - multi-rate, 54
- display block, 21, 230
- display boxes, 7
- Display Mode (View), 22, 316
- Dissolve Compound Block (Edit), 172
- divide (/) block, 193
- DLL functions, 308
 - adding to Blocks menu, 343
 - binding to userFunction blocks, 344
 - building with Project Build, 327
 - calling, 344
 - criteria, 326
 - debugging, 337
 - VisSim calling conventions, 328
- DLL Wizard, 337
- dotProduct block, 21, 231
- drop-down list boxes, 6
- DSP block diagrams, 357
- DSP components, 348
- Dynamic Link Library functions. *See* DLL functions
- dynamical system components, 348
- dynamical systems block diagrams, 356

E

- electrical system components, 348
- electro-mechanical block diagrams, 357
- electro-mechanical system components, 348
- electro-mechanical toolbox functions, 346
- e-mailing block diagrams, 11
- embed block, 173, 231
 - editing, 174
 - protecting, 186–87
 - reconnecting, 174
- embedded Mathcad documents, 151
- environmental block diagrams, 357
- equal to (==) block, 197
- error block, 231
- error conditions, resetting, 59, 231
- Euler algorithm, 39
- event handler function, 330
- Exit (File), 14
- exp block, 232

- export block, 118–20, 232
- exported functions
 - debMsg(), 336
 - getSimTime(), 336
 - getSimTimeStep(), 336
 - setBlockErr(), 336
 - setUserBlockMenu(), 336
 - stopSimulation(), 336
 - vissimRequest(), 334
- expression block, 232
- extending the block set, 308, 325–43

F

- feedback loops, 61, 90
- fft block, 21, 235
- FFT plots, 66
- FFT strip charts, 75
- fields, 9
- filter design
 - comparison, 106
 - FIR, 110–13
 - frequency domain, 105
 - IIR, 105, 106–9
 - operations, 104
 - time domain, 104–5
 - with transferFunction block, 106–13
- Find (Edit), 32–33
 - Match Variable Definitions Only, 178
 - Match Variable Only, 178
- finding blocks, 32–33
- FIR filters, 106, 110–13
 - band specifications, 111
 - continuous, 110
 - discrete, 110
 - generating, 112
 - order, 111
 - tapped delay implementation, 111
- flag error function, 336
- Fletcher Reeves global optimizer, 97
- flexWires. *See also* wiring blocks
 - unbundling, 309
- Flip Horizontal (Edit), 31
- Fonts (View), 317
- footers, 8
- frequency domain filters, 105

frequency domain plots, 66
 frequency domain strip charts, 75

G

gain block, 20, 237
 gauges, 81–83
 gaussian block, 239
 general information function, 334
 get current simulation time function, 336
 get current simulation time step function, 336
 getlopeValue function, 129
 getSimTime(), 336
 getSimTimeStep(), 336
 global optimization

- avoiding system instability, 102
- example, 97
- tips, 102

 global optimizers

- building, 323
- Fletcher Reeves, 97
- Polak-Ribiere, 97
- Powell, 97
- source files, 318
- vissimRequest function, 321

 global variables, 177

- copying, 178

 globalConstraint block, 239
 Go (Simulate), 57
 greater than (>) block, 201
 greater than or equal to (>=) block, 203
 grids, snapping to, 31

H

headers, 8
 Hilbert transformers, 110
 histogram block, 79–80, 239

- sizing, 79

 hybrid simulations, 56
 hydraulic system components, 349–50

I

ifft block, 21, 240
 IIR filters, 105, 106–9

- analog filter method, 107

IIR filters (*cont.*)

- attenuation frequencies, 108
- attenuation levels, 108
- band pass specification, 108
- Bessel, 107, 108
- Butterworth, 107, 108
- Chebyshev, 107, 108
- cut-off frequencies, 108
- generating, 109
- Inverse Chebyshev, 107, 108

 implicit equations

- convergence warnings, 91
- diagrams including, 358
- feedback loops, 90
- setting up, 89
- solving, 90

 implicit solver

- building with nmake, 320
- error tolerance, 91
- maximum iteration count, 91
- Newton-Raphson, 91
- perturbation, 91
- relaxation, 91
- source files, 318
- user-defined, 91
- vissimRequest function, 318–19

 import block, 115–18, 241

- input file, 116

 importing data

- map block, 257
- transferFunction block, 300
- with stateSpace block, 290

 index block, 20, 241
 initial conditions, 17, 244, 254, 271, 277, 280, 283, 288, 297, 306
 initialization function, 328
 Insert Mathcad Object (Tools), 151, 152
 inserting blocks, 15
 int block, 243
 integration algorithms

- adaptive Bulirsh-Stoer, 40
- adaptive Runge Kutta 5th order, 40
- backward Euler (Stiff), 40
- choosing, 38–40
- Euler, 39

integration algorithms (*cont.*)
 input functions, 60
 integrator block, 243
 iteration count, 40
 limitedIntegrator block, 253
 resetIntegrator block, 279
 Runge Kutta 2d order, 39
 Runge Kutta 4th order, 40
 selecting, 37
 step sizes, 37, 40
 trapezoidal, 39
 truncation errors, 40
 unstable settings, 60
Integration blocks, 46
 integrator, 243
 limitedIntegrator, 253
 resetIntegrator, 279
integrator (1/S) block, 53, 243
inverse (1/X) block, 21, 204
Inverse Chebyshev filters, 107, 108
invert block, 249

L

label block, 249
landscape paper orientation, 8
less than (<) block, 195
less than or equal to (<=) block, 196
level scope, 176, 177
light block, 250
limit block, 252
limitedIntegrator (1/S) block, 253
Linear System blocks
 stateSpace, 290
 transferFunction, 50, 106, 300
linearization, 290, 300
linearization data
 .M file, 290, 300
 .MAT file, 300
 from .MAT file, 291
 from VisSim .M file, 290
lineDraw block, 87–88, 256
ln block, 257
local variables, 177
log10 block, 256
logic diagrams, 359

Lookup Table (Tools), 141
Look-up Table Wizard, 138
look-up tables, 138
 data sources, 139

M

.M files
 exporting, 232
 importing, 290, 300
map block, 143, 257
map files, 139
.MAT files
 exporting, 232
 importing, 291, 300
Mathcad, 151
 connector tabs, 155
 editing embedded Mathcad documents, 152
 embedded Mathcad document properties, 154
 embedding Mathcad documents, 151
 incorrect results, 155
 keywords, 151
 resetting embedded Mathcad document size,
 153
 Server Busy message, 155
 sizing embedded Mathcad documents, 153
 updating embedded Mathcad documents, 152
Mathcad example
 arithmetic operation, 156
 room temperature control, 158
MatLab
 exporting data to, 232
 importing data from, 291, 300
MatLab Expression block, 20
MatLab Interface blocks
 MatLab Expression, 121, 258
 MatLab Read Variable, 123, 258
 MatLab Write Variable, 124, 258
MatLab Read Variable block, 20, 123
MatLab Write Variable block, 20, 124
Matrix Operation blocks
 buffer, 214
 dotProduct, 231
 fft, 235
 ifft, 240
 invert, 249

Matrix Operation blocks (*cont.*)

- multiply, 263
- psd, 274
- transpose, 304
- vsum, 309

max block, 258

Maximize button, 2

menu bar, 2

merge block, 21, 260

meter block, 261

- coloring, 317
- properties, 82–83
- sizing, 81
- types, 81

min block, 261

Minimize button, 2

MMI

- audio and visual alarms, 250
- multiple bitmap animation, 250

motion control block diagrams, 357

moving blocks

- drag-and-drop, 29
- rules, 29
- with Clipboard, 30

multiply (*) block, 190

multiply block, 21, 263

multi-rate simulations, 54, 170

N

negate (-X) block, 191

neuralNet block, 264

New (File), 7–9

Newton-Raphson solver, 91

noise

- random, 239
- uniform, 304

Nonlinear blocks

- case, 218
- crossDetect, 224
- deadband, 228
- int, 243
- limit, 252
- map, 143, 257
- max, 258
- merge, 260

Nonlinear blocks (*cont.*)

- min, 261
- quantize, 275
- relay, 278
- sampleHold, 283

not block, 264

not equal to (!=) block, 200

O

OLEobject block, 265

- editing, 267
- properties, 267
- sizing, 268
- updating, 267

Open (File), 10

opening

- a new diagram, 7–9
- an existing diagram, 10
- fast opening, 10
- read-only access, 10

optimization. *See* global optimization; implicit equations; implicit solver; Optimization Properties (Simulate)

optimization block diagrams, 358

Optimization blocks

- constraint, 89, 222
- cost, 224
- globalConstraint, 239
- parameterUnknown, 271
- unknown, 89, 308

Optimization Properties (Simulate), 96

or block, 270

P

Pade approximations toolbox functions, 346

page setup

- fields, 9
- fit to page, 8
- headers and footers, 8
- margins, 8
- orientation, 8, 13
- paper size, 8
- paper source, 8
- tiling, 8

- page setup (*cont.*)
 - with Print command, 13
- Page Setup (File), 7
- panning, 4
- parabola block, 271
- parameter allocation function, 333
- parameter change function, 333
- parameter initialization function, 333
- parameters. *See* block properties
- parameterUnknown block, 95, 271
- passwords, 183
- Paste (Edit), 30
- Paste Link (Edit), 131, 135
- path alias, 178
 - creating, 179
 - displaying conflicting, 179
 - inserting, 181
 - nested, 181
 - types, 179
- plot block, 272
 - coloring, 317
 - printing, 65
 - sizing, 64
 - zooming, 64
- plot properties
 - appearance, 71
 - axis divisions, 71
 - axis labels, 70
 - data points, 69
 - decibel Y, 69
 - external trigger, 67
 - FFT, 66
 - fixed bounds, 66, 71
 - geometric markers, 67
 - grid lines, 69
 - line types, 68, 75
 - log plots, 69
 - max data points, 68
 - multi XY traces, 68
 - overplotting, 66
 - reading coordinates, 69
 - retaining coordinates, 69
 - retracing, 71
 - signal labels, 70
 - snapping to coordinates, 69
- plot properties (*cont.*)
 - time domain, 63
 - time scaling, 71
 - titles and subtitles, 70
 - traces, 72
 - truncating FFT data, 66
 - XY plots, 67
- Polak-Ribiere global optimizer, 97
- portrait paper orientation, 8
- pow block, 20, 272
- Powell global optimizer, 97
- power block diagrams, 358
- PRBS block, 273
- Preferences (Edit)
 - Auto Connect Radius, 22
 - Check Connections, 60
 - High Precision Display, 18–19
 - Local Path Aliases, 179
 - Path Aliases, 179
 - Snap To Grid, 11, 31
 - Warn of Conflicting Local Alias Definitions, 179
- presentation mode, activating, 316
- Presentation Mode (View), 316
- previewing block diagrams, 12
- Print (File), 11–13
 - All, 13
 - Copies, 13
 - Current Level, 13
 - Current Level and Below, 13
 - Fit to Page, 13
 - orientation, 13
 - paper size, 13
 - paper source, 13
 - Print to File, 13
 - printer, 13
 - Tile Pages, 13
- print debug message function, 336
- Print Preview (File), 12
- printing, 12
 - fit to page, 8
 - landscape mode, 13
 - plots, 65
 - previewing, 12
 - strip charts, 73

- printing (*cont.*)
 - tiling, 8
 - probing connector values, 59
 - process control block diagrams, 358
 - process control components, 351
 - protecting
 - block diagrams, 10, 183–85
 - compound blocks, 185–86
 - embedded block diagrams, 186–87
 - psd block, 274
 - pulseTrain block, 275
- Q**
- quantize block, 275
- R**
- radio buttons, 7
 - ramp block, 277
 - Random Generator blocks
 - gaussian, 239
 - PRBS, 273
 - uniform, 304
 - random numbers, generating, 42
 - range control, setting, 35
 - Real Time blocks
 - ActiveX read, 125, 207
 - ActiveX write, 127, 207
 - rt-DataIn, 282
 - rt-DataOut, 283
 - Real Time Config (File), 282–83
 - realTime block, 278
 - real-time simulations, 37
 - relay block, 278
 - Remez Multiple Exchange algorithm, 110
 - Remove Connector (Edit), 23
 - Rename Block (Edit), 171
 - Repaint Screen (Edit), 10
 - Replace (Edit), 33
 - replacing blocks, 33
 - request simulation end function, 336
 - Reset (Simulate), 58
 - Reset Bitmap Scaling (Edit), 171
 - Reset State (Simulate), 60
 - resetIntegrator (1/S) block, 279
 - resetting bitmaps, 171
 - right mouse button, 18
 - rt-DataIn block, 282
 - rt-DataOut block, 283
 - Runge Kutta 2d order algorithm, 39
 - Runge Kutta 4th order algorithm, 40
- S**
- sampleHold block, 283
 - Save (File), 11
 - Save As (File), 11
 - Save As Metafile (File), 11, 159
 - saving block diagrams, 11, 159
 - saving system states, 41, 59
 - scalarToVec block, 20, 285
 - scoping, 176
 - screen, coloring, 317
 - scroll bars, 4
 - scrolling lists, 7
 - selecting blocks
 - area select, 28
 - canceling selections, 28
 - compound blocks, 27
 - individually, 27
 - toggle select, 28
 - Send (File), 11
 - setBlockErr(), 336
 - setIpcValue function, 129
 - setUserBlockMenu(), 336
 - sign block, 20, 286
 - signal, 359
 - Signal Consumer blocks
 - display, 230
 - error, 231
 - export, 118–20, 232
 - histogram, 79–80, 239
 - light, 250
 - meter, 81–83, 261
 - plot, 63–73, 272
 - stop, 293
 - stripChart, 73–79, 293
 - signal generation toolbox functions, 347
 - Signal Producer blocks
 - button, 216
 - const, 221

Signal Producer blocks (*cont.*)

- dialogConstant, 164, 229
- import, 115–18, 241
- parabola, 271
- pulseTrain, 275
- ramp, 277
- realTime, 278
- sinusoid, 288
- slider, 289
- step, 292

simulation end function, 333

simulation level functions

- vsmEvent(), 328
- vsmInit(), 328

Simulation Properties (Simulate)

Defaults, 43

Integration Method

- Adaptive Bulirsh-Stoer, 40
- Adaptive Runge Kutta 5th order, 40
- Backward Euler (Stiff), 40
- Euler, 39
- Max Iteration Count, 40
- Max Truncation Error, 40
- Min Step Size, 40
- Runge Kutta 2nd order, 39
- Runge Kutta 4th order, 40
- Trapezoidal, 39

Preferences

- Check Connections, 41
- Checkpoint State, 41
- Frequency Units, 41, 109
- Notify Simulation End, 42
- Propagate Integer Types, 42
- Raise Real-Time Priority, 42
- Random Seed, 42
- Warn Nonintegral Clock, 42
- Warn Nonintegral Delay, 42
- Warn Numeric Overflow, 42

Range

- Auto Restart, 36
- End, 37
- Retain State, 36
- Run in Real Time, 37
- Start, 37
- Step Size, 37

simulation start function, 333

simulations

- animated, 250
- auto restart, 36
- basics, 45
- checkpointing, 41
- continuing, 57
- continuous, 46–53
- Control Panel, 56
- default settings, 43
- discrete, 54–55
- dynamic execution, 58
- end-of-sim message, 42
- error conditions, 59
- hybrid, 56
- integration algorithms, 37–40
- iterations, 40
- multi-rate, 54, 170
- preferences, 40–42
- raising process priority, 42
- random numbers, 42
- range control, 35
- real-time, 37
- resetting, 58
- resetting system states, 60
- single-stepping, 58
- snapping system states, 59
- starting, 57
- step sizes, 37, 40
- stopping, 57, 293
- triggering compound block execution, 169
- trimming a system, 59
- truncation errors, 40
- unconnected blocks, 60

sin block, 287

sinh block, 288

sinusoid block, 288

slider block, 289

Snap State (Simulate), 59

sound files

- exporting, 232
- playing, 232, 250

spring-damper arm example, 46–50

- modified, 52–53

sqrt block, 290

- starting VisSim, 1, 313
- state machine diagrams, 359
- stateSpace block, 54, 56, 290
- state-space matrices, 290, 300
- status bar, 3
- step block, 292
- step sizes, 37, 40
- Stop (Simulate), 57
- stop block, 293
- stopSimulation(), 336
- strip chart properties
 - appearance, 78
 - axis divisions, 78
 - axis labels, 77
 - decibel Y, 76
 - displayed time, 78
 - external trigger, 75
 - FFT, 75
 - fixed bounds, 74, 78
 - geometric markers, 75
 - grid lines, 76
 - Log Y, 76
 - max data points, 76
 - reading coordinates, 76
 - retaining coordinates, 76
 - scroll back interval, 78
 - signal labels, 77
 - time domain, 73
 - time scaling, 78
 - titles and subtitles, 77
- strip charts. *See* stripChart block
- stripChart block, 73–79, 293
 - coloring, 317
 - printing, 73
 - sizing, 73
- summingJunction block, 20, 293
- system states
 - checkpointing, 41
 - resetting, 60
 - retaining, 36
 - snapping, 59
- system-wide event function, 328
- T**
- tabs, 6
- tan block, 295
- tanh block, 296
- text boxes, 6
- thermal control components, 351
- Time Delay blocks
 - timeDelay, 297
 - unitDelay (1/Z), 305
- time domain filters
 - with transferFunction block, 105
 - with unitDelay block, 104
- time domain plots, 63
- time domain strip charts, 73
- time step function, 329
- timeDelay block, 297
- title bar, 2
- titles, block diagram, 10, 182
- toolbar
 - dimmed buttons, 3
 - editing, 314
 - hiding, 314
 - moving, 2
- Toolbar (Edit), 314–15
- Toolbar (View), 2, 314
- toolboxes
 - controls, 345
 - Electro-mechanical, 346
 - Pade approximations, 346
 - signal generation, 347
 - tools, 347
- tools toolbox functions, 347
- training mode labels, 317
- Transcendental blocks
 - acos, 207
 - asin, 209
 - atan2, 210
 - bessel, 211
 - cos, 223
 - cosh, 224
 - exp, 232
 - ln, 257
 - log10, 256
 - sin, 287
 - sinh, 288
 - sqrt, 290
 - tan, 295

Transcendental blocks (*cont.*)

tanh, 296

transfer functions, 52–53

continuous time, 50–52

transferFunction block, 300

with polynomial constants, 50–52

transferFunction block, 50, 54, 56, 105, 106, 300

transpose block, 21, 304

trapezoidal algorithm, 39

trimming a system, 59

turbine components, 351

U

Undo (Edit), 10

uniform block, 304

unitConversion block, 20, 305

unitDelay block, 54, 104, 305

unknown block, 89, 308

userBlock(), 329

userBlockEvent(), 330

userBlockPA(), 333

userBlockPC(), 333

userBlockPI(), 333

userBlockSE(), 333

userBlockSS(), 333

userFunction block, 308, 344. *See also* DLL functions

user-written blocks. *See* userFunction block

V

variable block, 20, 175, 309

setting up, 175

variables

built-in, 178

finding definitions, 178

finding references, 178

scoping, 176

vector wires, 285, 309. *See also* wiring blocks

vecToScalar block, 20, 309

views

block labels, 317

diagram text, 317

display mode, 316

presentation mode, 316

views (*cont.*)

screen display, 317

training mode labels, 317

zooming, 316

VisSim

customizing, 14, 316

exiting, 14

starting, 1, 313

VisSim Personal Edition

limitations, 173

VisSim Viewer, 369–72

distributing, 369

distribution license agreement, 372

documentation, 369

end user license agreement, 371

installing, 370

starting, 370

vissimRequest function, 318–19, 321–23

vissimRequest(), 334

VSI.CPP file, 342

vsmEvent(), 328

vsmInit(), 328

VSOLVER.C, 321

VSOLVER.DEF, 321

VSOLVER.MAK, 321

vsum block, 21, 309

VSUSER.H, 321

W

.WAV files

exporting, 232

playing, 232, 250

windows

color, 317

wirePositioner block, 20, 22, 310

wires

bundling, 285

coloring, 317

positioning, 310

wiring, unconnected blocks, 60

wiring blocks

auto-connect, 22

bundling flexWires, 21

colors, 22

creating, 21

wiring blocks (*cont.*)
 deleting, 23
 flexWires, 20
 hiding, 22
 positioning, 22
 rules of use, 21
 unbundling flexWires, 21
 unconnected blocks, 60
 vector wires, 20, 309
 wireless blocks, 309
.WMF files, saving as, 159

X

-X (negate) block, 20, 191
xor block, 310
XY plots, 67

Z

Zoom In (View), 316
Zoom Out (View), 316